

 

# JVC

# SERVICE MANUAL


## CD RECEIVER

### KD-S730


### KD-S630

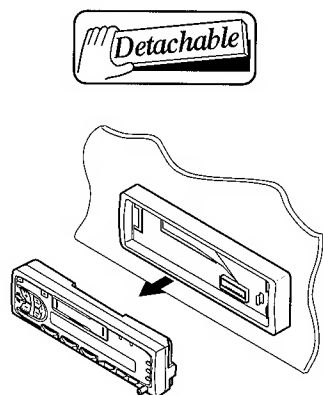

**KD-S730**

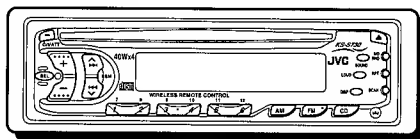

**KD-S630**

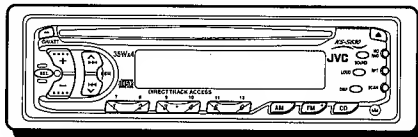

COMPACT  
disc  
DIGITAL AUDIO


#### Area Suffix


J ... the U.S.A.

#### Contents

Safety Precaution.....	1-2	Block Diagrams .....	2-19
Instruction Book .....	1-3	Standard Schematic Diagrams .....	2-20
Description of Major ICs .....	2-1	P.C.Board and parts list .....	2-23
Location of main parts .....	2-8	Parts List .....	3-1
Removal of main parts .....	2-10	Packing and Accessorie List .....	3-12
Main Adjustment .....	2-16		
Flow of Functional			
Operation Unit TOC Read .....	2-17		
Maintenance of Laser Pickup .....	2-18		

## Safety Precaution

 **CAUTION** Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs when performing repairs of this system.

 **CAUTION** Please use enough caution to avoid direct exposure to the beam or touch it in case of an adjustment or operation check.

JVC

CD RECEIVER



KD-SX830/S730/S630

RECEPTOR CON CD

KD-SX830/S730/S630

RECEPTEUR CD

KD-SX830/S730/S630

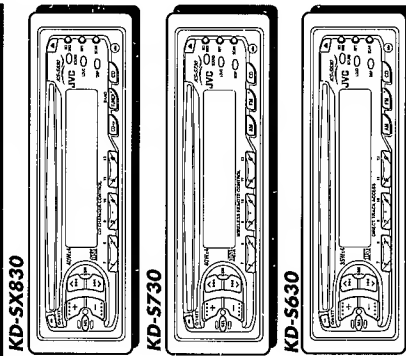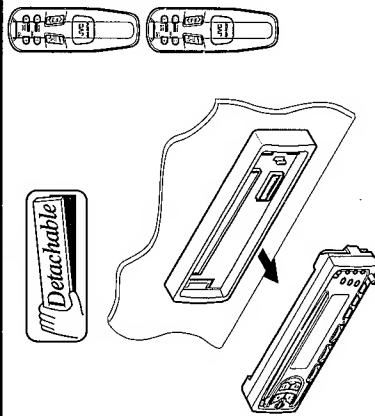

For installation and connections, refer to the separate manual.  
Para la instalación y las conexiones, refiérase al manual separado.  
Pour l'installation et les raccordements, se référer au manuel séparé.

COMPACT  
DIGITAL AUDIO

**For customer Use:**

Enter below the Model No. and  
Serial No. which are located on  
the top or bottom of the cabinet.  
Retain this information for future  
reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

FSUN3038-631S  
[J]

**INSTRUCTIONS**  
MANUAL DE INSTRUCCIONES  
MANUEL D'INSTRUCTIONS


**INFORMATION (For USA)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Identification and  
Certification labels**

Bottom of the main unit

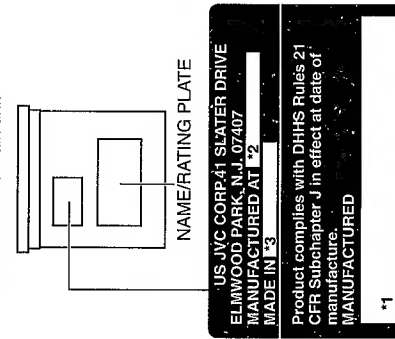

**IMPORTANT FOR LASER  
PRODUCTS (For USA only)**

**Precautions:**

1. **CLASS 1 LASER PRODUCT**
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading CDs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**Notes:**

- \*1 The date of manufacture.
- \*2 The ID code of manufacturing plant.
- \*3 Marking of country origin.

**BEFORE USE**

**\* For safety....**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

**\*Temperature inside the car....**  
If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

BASIC OPERATIONS

CONTENTS

**BASIC OPERATIONS** ..... 4

**RADIO OPERATIONS** ..... 5

Listening to the radio ..... 5

Storing stations in memory ..... 6

FM station automatic preset: SSM ..... 6

Manual preset ..... 7

Tuning into a preset station ..... 8

**Other convenient tuner functions** ..... 9

Scanning broadcast stations ..... 9

Selecting FM reception sound ..... 9

Changing the AM/FM channel intervals ..... 9

**CD OPERATIONS** ..... 10

Playing a CD ..... 10

Locating a track or a particular portion a CD ..... 11

Selecting CD playback modes ..... 12

**Other convenient CD functions** ..... 12

Prohibiting CD ejection ..... 12

**SOUND ADJUSTMENTS** ..... 13

Turning on/off the loudness function ..... 13

Selecting preset sound modes ..... 13

Adjusting the sound ..... 14

Storing your own sound adjustments ..... 15

**OTHER MAIN FUNCTIONS** ..... 16

Setting the clock ..... 16

Turning on/off the key-touch tone (ONLY FOR KD-SX830) ... 17

Detaching the control panel ..... 18

**REMOTE OPERATIONS** ..... 19

(FOR KD-SX830/S730)

Installing the batteries ..... 19

Using the remote controller ..... 19

**CD CHANGER OPERATIONS** ..... 20

(ONLY FOR KD-SX830)

Playing CDs ..... 20

Selecting CD playback modes ..... 22

**MAINTENANCE** ..... 23


Handling CDs ..... 23

**TROUBLESHOOTING** ..... 24

**SPECIFICATIONS** ..... 25

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

ENGLISH

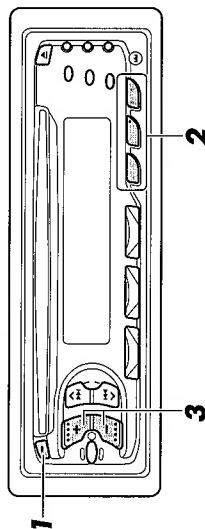


**Note:**  
When you use this unit for the first time, set the built-in clock correctly, see page 16.

**1** Turn on the power.


**Note on One-Touch Operation:**  
When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.

**2** Select the source.

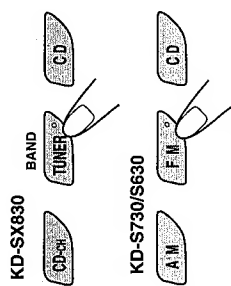

To operate the tuner, see pages 5 – 9.  
To operate the CD player, see pages 10 – 12.  
**ONLY FOR KD-SX830:**  
To operate the CD changer, see pages 20 – 22.

**3** Adjust the volume.

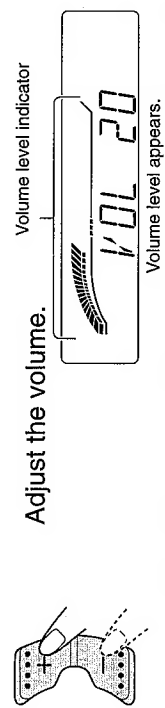

**4** Adjust the sound as you want (see pages 13 – 15).

**To drop the volume in a moment**

Press  $\phi$ /I/ATT briefly while listening to any source. "ATT" starts flashing on the display, and the volume level will drop in a moment.  
To resume the previous volume level, press the button briefly again.

**To turn off the power**


Press  $\phi$ /I/ATT for more than 1 second.

# RADIO OPERATIONS




## Listening to the radio

KD-SX830

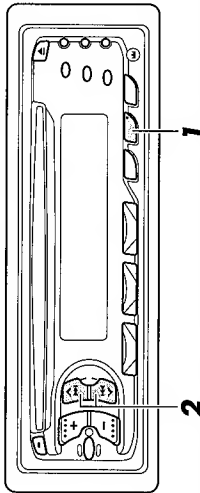


KD-S730/S630

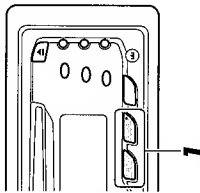

1

KD-SX830


BAND  
TUNER

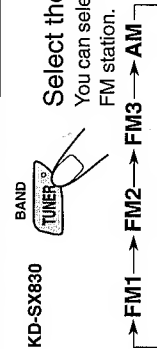

Select the band (FM1, FM2, FM3 or AM).


You can select any one of FM1, FM2, and FM3 to listen to an FM station.

 Audio level indicator  
(ONLY FOR KD-SX830)




KD-S730/S630

AM

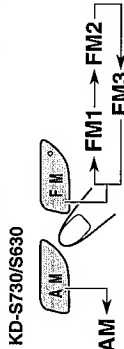

2


To search stations of higher frequencies.

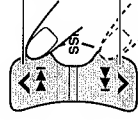

To search stations of lower frequencies.

Start searching a station.

 When a station is received, searching stops.



To stop searching before a station is received, press the same button you have pressed for searching.

## To tune in a particular frequency without searching:

1 Select the band (FM or AM).

For KD-SX830: Press TUNER/BAND repeatedly.

For KD-S730/S630: Press FM or AM.

2 Press and hold SSM >>> or SSM <<< until "M" starts flashing on the display.

Now you can manually change the frequency while "M" is flashing.

3 Press SSM >>> or SSM <<< repeatedly until the frequency you want is reached.

• If you hold down the button, the frequency keeps changing until you release the button.

5




## Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.

- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations


### FM station automatic preset: SSM

You can preset 6 local FM stations in each FM band (FM1, FM2, and FM3).

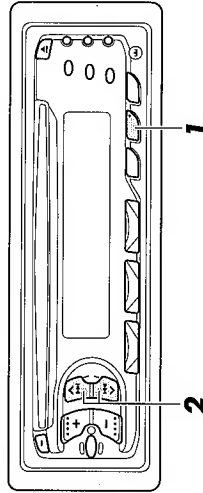

1 KD-SX830

 
BAND  
TUNER



Select the FM band number (FM1, FM2 or FM3) you want to store FM stations into.



KD-S730/S630

 FM



2

  Press and hold the both buttons for more than 3 seconds.



"SSM" appears, then disappears when automatic preset is over.

Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2 or FM3). These stations are preset in the number buttons — No. 1 (lowest frequency) to No. 6 (highest frequency).


When automatic preset is over, the station stored in number button 1 will be automatically tuned in.

6

## Manual preset

You can preset up to 6 stations in each band (FM1, FM2, FM3 and AM) manually.

EXAMPLE: Storing an FM station of 88.3 MHz into the preset number 1 of the FM1 band

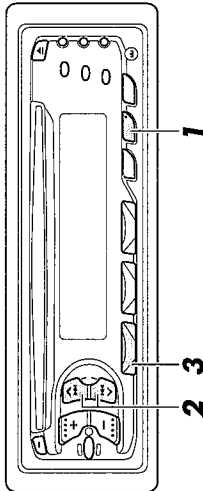

- 1** KD-SX830 KD-S730/S630 Select the FM1 band.



- 2** Tune into a station of 88.3 MHz.  
See page 5 to tune into a station.



- 3** Press and hold the button for more than 1 second.



Preset number "1" starts flashing for a while.


- 4** Repeat the above procedure to store other stations into other preset numbers.

### Notes:


- A previously preset station is erased when a new station is stored in the same preset number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.

## Tuning into a preset station


You can easily tune into a preset station.  
Remember that you must store stations first. If you have not stored them yet, see pages 6 and 7.

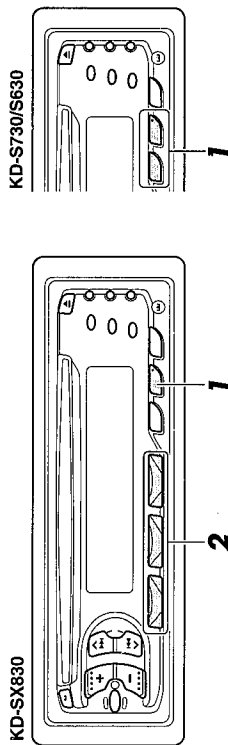

- 1** KD-SX830 Select the band (FM1, FM2, FM3 or AM) you want.

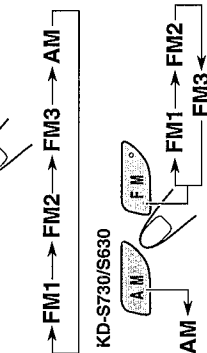

 
- 2** Select the number (1 – 6) for the preset station you want.







## CD OPERATIONS

### Playing a CD

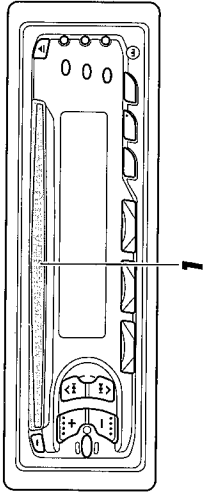

1

- Insert a disc into the loading slot.**  
The unit turns on, draws a CD and starts playback automatically.
- When a CD is inserted upside down, "EJECT" appears on the display and the CD automatically ejects.

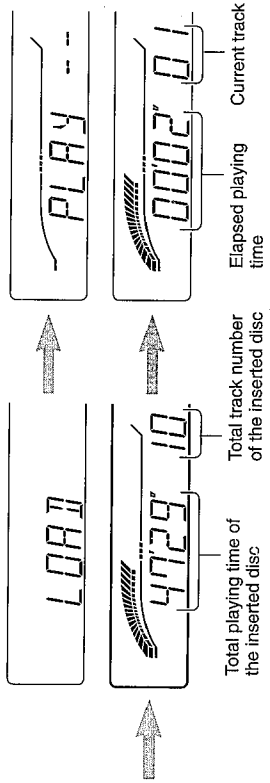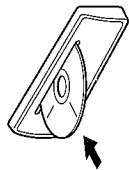

#### Note on One-Touch Operation:

When a CD is already in the loading slot, pressing CD turns on the unit and starts playback automatically.

#### CAUTION on Volume Setting

CDs produces very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a CD and adjust it as required during playback.

### To stop play and eject the CD

Press **▲**.


- CD play stops and the CD automatically ejects from the loading slot. The source changes to the tuner (you will hear the last received station).
- If you change the source to AM/FM (or CD changer for KD-SX830 only), the CD play also stops (without ejecting the CD this time).
- If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (CD play will not start this time.)
  - You can eject the CD when the unit is turned off.

10

## ENGLISH



### Other convenient tuner functions

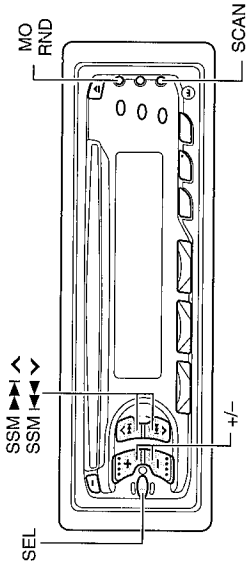

#### Scanning broadcast stations

When you press SCAN while listening to the radio, station scanning starts. Each time a broadcast is tuned in, scanning stops for about 5 seconds (tuned frequency number flashes on the display), and you can check what program is now being broadcast.

If you want to listen to that program, press the same button again to stop scanning.

#### Selecting FM reception sound

When an FM stereo broadcast is hard to receive:  
Press MO RND (mono/random) while listening to an FM stereo broadcast. The sound you hear becomes monaural but reception will be improved.

Lights up when receiving an FM broadcast in stereo.



To restore the stereo effect, press the same button again.

#### Changing the AM/FM channel intervals

When using this unit in an area other than North or South America:  
When this unit is shipped from the factory, the channel intervals are set to 10 kHz for AM and 200 kHz for FM. You can change the channel intervals by following the procedure below.

1 Press SEL (select) for more than 2 seconds.

"CLOCK H," "CLOCK M," "BEEP" or "AREA" appears on the display.

• "BEEP" does not appear for KD-S730/S630.

2 If "AREA" does not appear, press SSM **▶▶▶** **◀◀◀** or SSM **◀◀◀** until it appears.

3 Press **+**.

"AREA EU" appears and the channel intervals are set to 9 kHz for AM and 50 kHz (for manual tuning) / 100 kHz (for searching) for FM.


To reset to the factory setting, follow the above step 1 and 2, then press **+** in step 3 ("AREA US" appears on the display.)

AREA EU: Select this when used in an area other than North and South America.  
AREA US: Select this when used in North or South America.

9




## Selecting CD playback modes

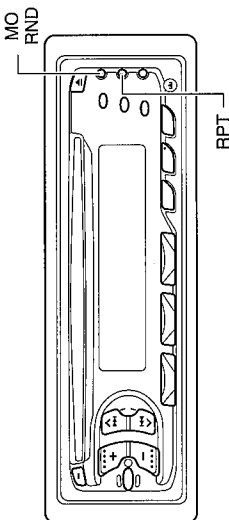

### To play back tracks at random (Random Play)

You can play back all tracks on the CD at random.

 
Each time you press MO RND (Mono/Random) while playing a CD, CD random play mode turns on and off alternatively. When the random mode is turned on, the RND indicator lights up on the display and a track randomly selected starts playing.



### To play back tracks repeatedly (Repeat Play)

You can play back the current track repeatedly.

 Each time you press RPT (Repeat) while playing a CD, CD repeat play mode changes turns on and off alternatively. When the repeat mode is turned on, the RPT indicator lights up on the display.



Track number of the currently playing track

## Other convenient CD functions

### Prohibiting CD ejection

You can prohibit the CD ejection and can "lock" a CD in the loading slot.


Press and hold CD and ▲ for more than 2 seconds. "EJECT" flashes on the display for about 5 seconds, and the CD is "locked."

To cancel the prohibition and "unlock" the CD, press and hold CD and ▲ for more than 2 seconds again. "EJECT" appears on the display, and the CD ejects from the loading slot.

12




## Locating a track or a particular portion on a CD

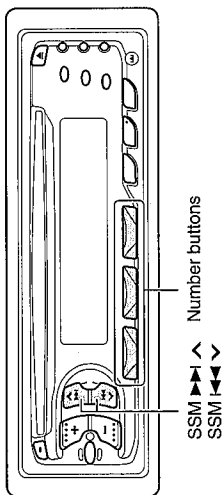

### To fast forward or reverse the track


Press and hold SSM ►►, while playing a CD, to fast forward the track.

 Press and hold SSM ◄◄, while playing a CD, to reverse the track.




### To go to the next track or the previous track

 Press SSM ►► briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next track is located and played back.



Press SSM ◄◄ briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous track is located and played back.

### To go to a particular track directly

 

Press the number button corresponding to the track number to start its playback.

- To select a track number from 1 - 6: Press 1 (7) - 6 (12) briefly.
- To select a track number from 7 - 12: Press and hold 1 (7) - 6 (12) for more than 1 second.

11




# SOUND ADJUSTMENTS

 ENGLISH

## Turning on/off the loudness function

The human ear is less sensitive to low and high frequencies at low volumes. The loudness function can boost these frequencies to produce well-balanced sound at low volume level.


Each time you press **LOUD**, the loudness function turns on and off alternatively.



## Selecting preset sound modes

You can select a preset sound adjustment suitable to the music genre:

 Each time you press **SOUND**, the sound mode changes as follows.




Indication	For:	Preset values		
		Bass	Treble	Loudness
SCM OFF	(Flat sound)	00	00	On
BEAT	Rock or disco music	+2	00	On
SOFT	Quiet background music	+1	-3	Off
POP	Light music	+4	+1	Off

- Notes:**
- You can adjust the preset sound mode to your preference, and store in memory. If you want to adjust and store your original sound mode, see "Storing your own sound adjustments" on page 15.
  - To adjust only the bass and treble reinforcement levels to your preference, see "Adjusting the sound" on page 14.



## Adjusting the sound

You can adjust the treble/bass sound and the speaker balance.

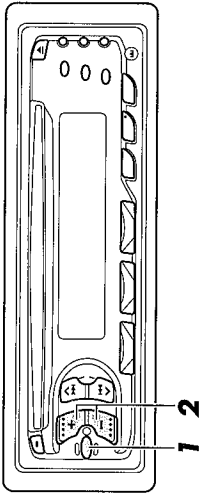


- 1**
- Select the item you want to adjust.
- BAS → TRE → FAD → BAL → VOL

Indication	To do:	Range
BAS (bass)	Adjust the bass	-6 (min.) — +6 (max.)
TRE (treble)	Adjust the treble	-6 (min.) — +6 (max.)
FAD (Fader)*	Adjust the front and rear speaker balance	R6 (rear only) — F6 (front only)
BAL (Balance)	Adjust the left and right speaker balance	L6 (left only) — R6 (right only)
VOL (Volume)	Adjust the volume	00 (min.) — 50 (max.)

**Note:**

\* If you are using a two-speaker system, set the fader level to "00" (center).

- 2**
- Adjust the level.

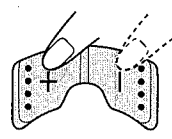


**Note:**

Normally the + and - buttons work as the volume control buttons. So you do not have to select "VOL" to adjust the volume level.



## Storing your own sound adjustments

You can adjust the sound modes (BEAT, SOFT, POP: see page 13) as you like and store your own adjustments in memory.

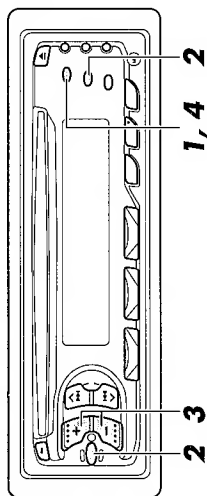

- 1 **Within 5 seconds**  
Call up the sound mode you want to adjust.  
See page 13 for details.
- 2 **Within 5 seconds**  
To adjust the bass or treble sound level  
Select "BAS" or "TRE."  
To turn on or off the loudness function  
Each time you press LOUD, the loudness function turns on and off alternatively. (→ go to step 4)
- 3 **Within 5 seconds**  
Adjust the bass or treble level.  
See page 14 for details.
- 4 **Within 5 seconds**  
Press and hold SOUND until the sound mode you have selected in step 1 flashes on the display.  
Your setting is stored in memory.
- 5 Repeat the same procedure to store other settings.

## To reset to the factory settings


Repeat the same procedure and reassign the preset values listed in the table on page 13.

15



## OTHER MAIN FUNCTIONS

### Setting the clock

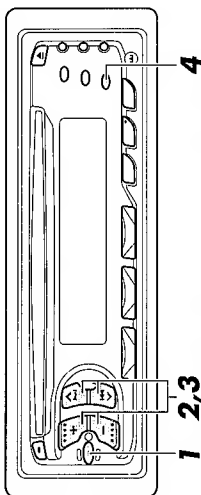

- 1 Press and hold the button for more than 2 seconds.  
"CLOCK H," "CLOCK M," "BEEP" or "AREA" appears on the display.  
• "BEEP" does not appear for KD-S730/S630.
- 2 **Set the hour.**  
1. Select "CLOCK H" if not shown on the display.  
→ CLOCK H → CLOCK M → BEEP → AREA  
2. Adjust the hour.
- 3 **Set the minute.**  
1. Select "CLOCK M."  
→ CLOCK H → CLOCK M → BEEP → AREA  
2. Adjust the minute.
- 4 **Start the clock.**

16



### To check the current clock time (changing the display mode)

Press DISP repeatedly. Each time you press the button, the display mode changes as follows.

During tuner operation:	During CD operation:	
	Frequency $\leftarrow \rightarrow$ Clock	Elapsed playing time $\leftarrow \rightarrow$ Clock


- If the unit is not in use when you press DISP, the power turns on, the clock time is shown for 5 seconds, then the power turns off.

ENGLISH

### Turning on/off the key-touch tone

This function is ONLY FOR KD-SX830.

You can deactivate the key-touch tone if you do not want to make it beep when you press a button. (When shipped from the factory, the key-touch tone is activated.)

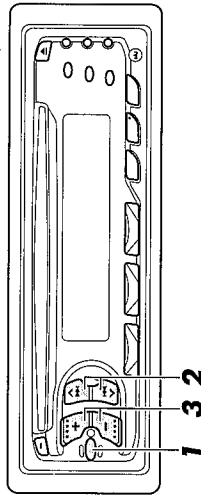

1

Press and hold the button for more than 2 seconds.

"CLOCK H," "CLOCK M," "BEEP" or "AREA" appears on the display.

2

Select "BEEP" if not shown on the display.



3

To activate the key-touch tone (ON).

To deactivate the key-touch tone (OFF).



### Detaching the control panel


You can detach the control panel when leaving the car. When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.

### How to detach the control panel

Before detaching the control panel, be sure to turn off the power.


1

Unlock the control panel.

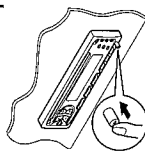


2

Lift and pull the control panel out of the unit.

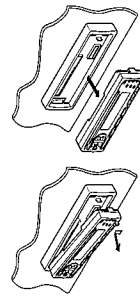

3


Put the detached control panel into the case provided.

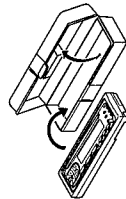

### How to attach the control panel


1

Insert the left side of the control panel into the groove on the panel holder.

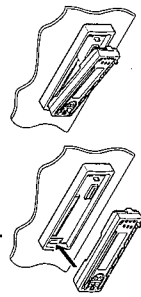


2

Press the right side of the control panel to fix it to the panel holder.

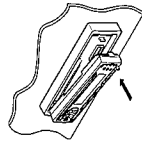

### Note on cleaning the connectors:

If you frequently detach the control panel, the connectors will deteriorate. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

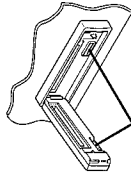


Connectors


# REMOTE OPERATIONS

This section is FOR KD-SX830/S730.


- Before using the remote controller:
- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
  - Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

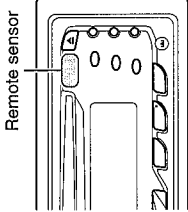

## Installing the batteries

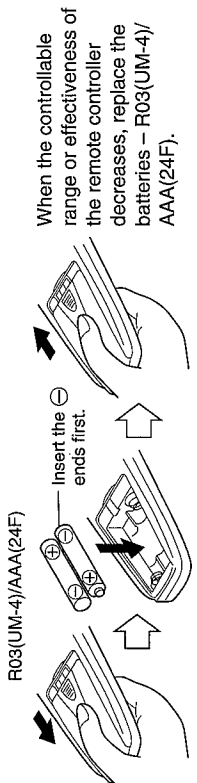

## Using the remote controller

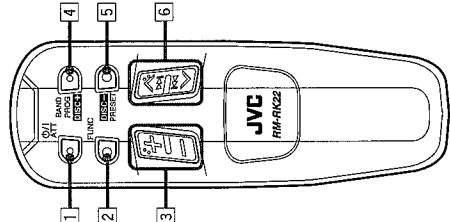

- 1 Functions the same as the  $\phi$ /I/ATT button on the main unit.
- 2 Select the source.  
Each time you press FUNC (function), the source changes.
- 3 Functions the same as the +/- buttons on the main unit.
- 4 Functions as the BAND button while listening to the radio.  
Each time you press the button, the band changes.
- 5 Functions as the DISC + button while listening to the CD changer. (ONLY FOR KD-SX830)  
Each time you press the button, the disc number increases, and selected disc starts playing.
- 6 Does not function as the PROG button for KD-SX830/S730.  
Functions as the PRESET button while listening to the radio.  
Each time you press the button, the preset station number increases, and selected station is tuned in.

Functions as the DISC - button while listening to the CD changer. (ONLY FOR KD-SX830)  
Each time you press the button, the disc number decreases, and selected disc starts playing.

- 6 Searches stations while listening to the radio.  
Fast forwards or reverses the track if pressed and held while listening to the CD.
- Skips to the beginning of the next tracks or go back to the beginning of the current (or previous tracks) if pressed briefly while listening to the CD.

# CD CHANGER OPERATIONS

This section is ONLY FOR KD-SX830, when used with a JVC CD automatic changer (separately purchased).


We recommend that you use one of the CH-X series with your KD-SX830.


If you have another CD automatic changer, consult your JVC car audio dealer for connections.

- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

- Before operating your CD automatic changer:
- Refer also to the instructions supplied with your CD changer.
  - If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO CD" or "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
  - If "RESET 1 - RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

## Playing CDs

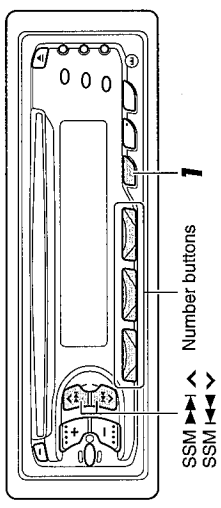




**1** Select the CD automatic changer.

Play back starts from the first track of the first disc.

All tracks of all discs are played back.



Disc number : Track number


Elapsed playing time  
(The clock time is shown if you have pressed DISP to see the clock time. See page 17.)

**Note on One-Touch Operation:**  
When you press CD-CH, the power automatically comes on. You do not have to press  $\phi$ /I/ATT to turn on the power.



ENGLISH


### To fast forward or reverse the track

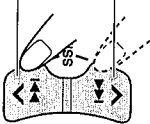

Press and hold SSM **▶▶** **◀◀**, while playing a CD, to fast forward the track.

Press and hold SSM **◀◀** **▶▶**, while playing a CD, to reverse the track.


### To go to the next track or the previous track

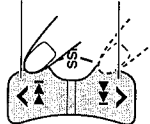

Press SSM **▶▶** **▶** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next track is located and played back.

Press SSM **◀** **◀◀** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous track is located and played back.


### To go to a particular disc directly

 


Press the number button corresponding to the disc number to start its playback (while the CD changer is playing).

- To select a disc number from 1 - 6:  
Press 1 (7) - 6 (12) briefly.
- To select a disc number from 7 - 12:  
Press and hold 1 (7) - 6 (12) for more than 1 second.

Ex. When disc number 3 is selected

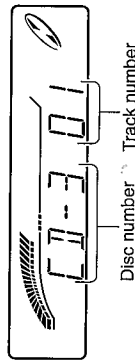


### Selecting CD playback modes

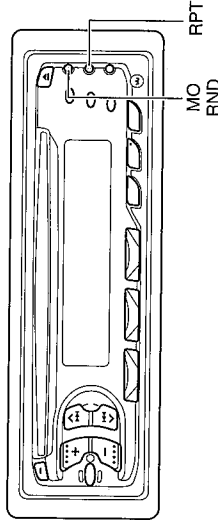

#### To play back tracks at random (Random Play)

 Each time you press MO RND (mono/Random) while playing a CD, CD random play mode changes as follows:



→ RND1 (Random1) → RND2 (Random2) → Canceled

Mode	RND Indicator	Plays at random
RND1	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RND2	Flashes	All tracks of all discs inserted in the magazine.

#### To play back tracks repeatedly (Repeat Play)

Each time you press RPT (Repeat) while playing a CD, CD repeat play mode changes as follows:



→ RPT1 (Repeat1) → RPT2 (Repeat2) → Canceled

Mode	RPT Indicator	Plays repeatedly
RPT1	Lights	The current track (or specified track).
RPT2	Flashes	All tracks of the current disc (or specified disc).

# MAINTENANCE ?

## Handling CDs

This unit has been designed only to reproduce the CDs bearing the  mark. Other discs cannot be played back.


### How to handle CDs

When removing a CD from its case, press down the center holder of the case and lift the CD out, holding it by the edges.

- Always hold the CD by the edges. Do not touch its recording surface.

When storing a CD into its case, gently insert the CD around the center holder (with the printed surface facing up).

- Make sure to store CDs into the cases after use.

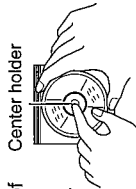

### To keep CDs clean

A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.



### To play new CDs

New CDs may have some rough spots around the inner and outer edges. If such a CD is used, this unit may reject the CD.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.



### Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
  - If it becomes very humid inside the car.
- Should this occur, the CD player may malfunction. In this case, eject the CD and leave the unit turned on for a few hours until the moisture evaporates.

#### CAUTIONS:

- Do not insert 8cm (3 3/16") CDs (single CDs) into the loading slot. (Such CDs cannot be ejected.)
- Do not insert any CD of unusual shape — like a heart or flower; otherwise, it will cause a malfunction.
- Do not expose CDs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean CDs.

 
 
 
#### About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the CD, but will be annoying.

We recommend that you stop CD play while driving on such rough roads.

# ? TROUBLESHOOTING

What appears to be trouble is not always serious. Check the following points before calling a service center.

Symptoms	Causes	Remedies
• CD cannot be played back.	CD is inserted upside down.	Insert the CD correctly.
• CD sound is sometimes interrupted.	You are driving on rough roads.	Stop CD play while driving rough roads.
	CD is scratched.	Change the CD.
	Connections are incorrect.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume control is turned to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
• SSM (Strong-station Sequential Memory) automatic preset does not work.	Signals are too weak.	Store stations manually.
• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
• "NO CD" or "NO DISC" appears on the display.	No CD is in the loading slot (or in the magazine).	Insert CD.
• "RESET 8" appears on the display.	CD is inserted incorrectly.	Insert it correctly.
	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
• "RESET 1-RESET 7" appears on the display.	_____	Press the reset button of the CD changer.
• CD can be neither played back nor ejected.	The CD player may function incorrectly.	Press  I/ATT and  at the same time for more than 2 seconds. Be careful not to drop CD when it is ejected.
• The unit does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press  I/ATT and SEL at the same time for more than 2 seconds to reset the unit. (The clock setting and preset stations stored in memory are erased.)

KD-SX830/S730/S630

CD RECEIVER

Printed in Singapore  
1197MMMDWJES



EN, SP, FR

25

# SPECIFICATIONS ?

## AUDIO AMPLIFIER SECTION

### FOR KD-SX830/S730:

Maximum Power Output:

Front: 40 watts per channel  
Rear: 40 watts per channel

Continuous Power Output (RMS):

Front: 16 watts per channel into 4  $\Omega$ , 40 to 20,000 Hz at no more than 0.8% total harmonic distortion.

Rear: 16 watts per channel into 4  $\Omega$ , 40 to 20,000 Hz at no more than 0.8% total harmonic distortion.

### FOR KD-S630:

Maximum Power Output:

Front: 35 watts per channel  
Rear: 35 watts per channel

Continuous Power Output (RMS):

Front: 15 watts per channel into 4  $\Omega$ , 40 to 20,000 Hz at no more than 0.8% total harmonic distortion.

Rear: 15 watts per channel into 4  $\Omega$ , 40 to 20,000 Hz at no more than 0.8% total harmonic distortion.

## CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 to 20,000 Hz

Dynamic Range: 95 dB

Signal-to-Noise Ratio: 97 dB

Wow and Flutter: Less than measurable limit

## GENERAL

Power Requirement

Operating Voltage: DC 14.4 volts (11 to 16 volts allowance)

Grounding System: Negative ground

Dimensions (W x H x D)

Installation Size:

182 x 52 x 150 mm  
(7-3/16" x 2-1/16" x 5-15/16")

Panel Size: 188 x 58 x 14 mm  
(7-7/16" x 2-5/16" x 5/8")

Mass: 1.3 kg (2.9 lbs) (excluding accessories)

*Design and specifications subject to change without notice.*

If a kit is necessary for your car, consult your telephone directory for the nearest car audio specialty shop.

## TUNER SECTION

Frequency Range

FM: 87.5 to 107.9 MHz  
(with channel interval set to 200 kHz)

87.5 to 108.0 MHz

(with channel interval set to 50 kHz)

AM: 530 to 1,710 kHz

(with channel interval set to 10 kHz)

531 to 1,602 kHz

(with channel interval set to 9 kHz)


ENGLISH



**KD-SX830  
KD-S730  
KD-S630**

**Installation/Connection Manual  
Manual de instalación/conexión  
Manuel d'installation/raccordement**

FSUN3038-T631S  
[J]

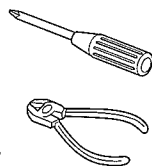

Printed in Singapore  
1197MNMMDWJES  
EN, SP, FR

## ENGLISH

- This unit is designed to operate only on 12 volts DC, NEGATIVE ground electrical systems.

## INSTALLATION (IN-DASH MOUNTING)

- The following illustration shows a typical installation. However, you should make adjustments corresponding to your specific car. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.

## ESPAÑOL

- Esta unidad está diseñada para funcionar con 12 voltios de CC, con sistemas eléctricos de masa NEGATIVA solamente.

## INSTALACION (MONTAJE EN EL TABLERO DE INSTRUMENTOS)

- La siguiente ilustración muestra una instalación típica. Sin embargo usted deberá efectuar los ajustes correspondientes a su automóvil. Si tiene alguna pregunta o necesita información acerca de las herramientas para instalación, consulte con su concesionario de JVC de equipos de audio para automóviles o a una compañía que suministra tales herramientas.

## FRANÇAIS

- Cet appareil est conçu pour fonctionner sur des sources de courant continu de 12 volts à masse NEGATIVE seulement.

## INSTALLATION (MONTAGE DANS LE TABLEAU DE BORD)

- L'illustration suivante est un exemple d'installation typique. Cependant, vous devez faire les ajustements correspondant à votre voiture particulière. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.

**1 Before mounting:** Press (Control Panel Release button) to detach the control panel.

**2 Remove the trim plate.**

**3 Remove the sleeve after disengaging the sleeve locks.**

① Stand the unit.

**Note:** When you stand the unit, be careful not to damage the fuse on the rear.

② Insert the 2 handles between the unit and the sleeve, as illustrated, to disengage the sleeve locks.

③ Remove the sleeve.

**Note:** Be sure to keep the handles for future use after installing the unit.

**4 Install the sleeve in the dashboard.**

\* After the sleeve is correctly installed in the dashboard, bend the appropriate tabs to hold the sleeve firmly in place, as illustrated.

**5 Fix the mounting bolt to the rear of the unit's body and place the rubber cushion over the end of the bolt.**

**6 Do the required electrical connections explained on the back of this instructions.**

**7 Slide the unit into the sleeve until it is locked.**

**8 Attach the trim plate.**

**9 Attach the control panel.**

**1 Antes de instalar:** Presione (botón de liberación del panel de control) para desmontar el panel de control.

**2 Retire la placa de guarnición.**

**3 Retire la manga después de desenganchar los retenes de la manga.**

① Ponga la unidad vertical.

**Nota:** Al poner la unidad vertical, tenga cuidado de no dañar el fusible provisto en la parte posterior.

② Inserte las dos asas entre la unidad y la manga tal como en la ilustración y desenganche los retenes de la manga.

③ Retire la manga.

**Nota:** Después de instalar la unidad, asegúrese de guardar las asas para uso futuro.

**4 Instale la cubierta en el tablero de instrumentos.**

\* Después de que la manga esté correctamente instalada en el tablero de instrumentos, doble las lengüetas correspondientes para sostener la manga firmemente en su lugar, tal como se muestra.

**5 Fije el perno de montaje en la parte trasera del cuerpo de la unidad y coloque el cojin de goma sobre el extremo del perno.**

**6 Realice las conexiones eléctricas requeridas en base a las explicaciones que figuran en la parte de atrás de estas instrucciones.**

**7 Deslice la unidad dentro de la manga hasta que quede trabada.**

**8 Coloque la placa de guarnición.**

**9 Coloque el panel de control.**

**1 Avant le montage:** Appuyer sur (touche de libération du panneau de commande) pour détacher le panneau de commande.

**2 Retirer la plaque d'assemblage.**

**3 Libérer les verrous du manchon et retirer le manchon.**

① Poser l'appareil à la verticale.

**Remarque:** Lorsque vous mettez l'appareil à la verticale, faire attention de ne pas endommager le fusible situé sur le fond.

② Insérer les 2 poignées entre l'appareil et le manchon comme indiqué pour désengager les verrous de manchon.

③ Retirer le manchon.

**Remarque:** S'assurer de garder les poignées pour une utilisation ultérieure, après l'installation de l'appareil.

**4 Installer le manchon dans le tableau de bord.**

\* Après installation correcte du manchon dans le tableau de bord, plier les bonnes pattes pour maintenir fermement le manchon en place, comme montré.

 





**5 Monter le boulon de montage sur l'arrière du corps de l'appareil puis passer l'amortisseur en caoutchouc sur l'extrémité du boulon.**

**6 Réalisez les connexions électriques expliquées au dos de cette page.**


**7 Faire glisser l'appareil dans le manchon jusqu'à ce qu'il soit verrouillé.**

**8 Fixer la plaque d'assemblage.**

**9 Remonter le panneau de commande.**

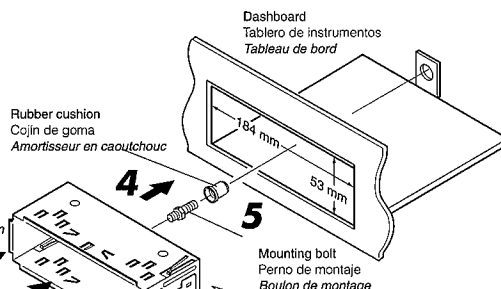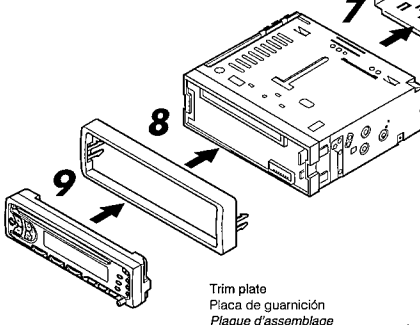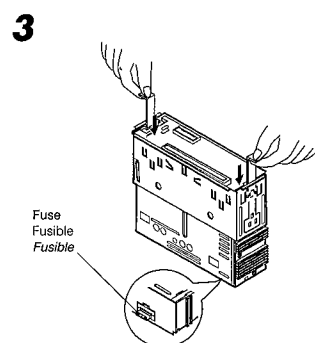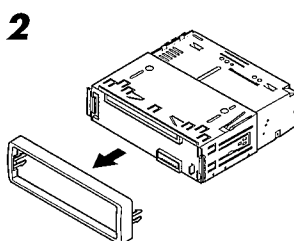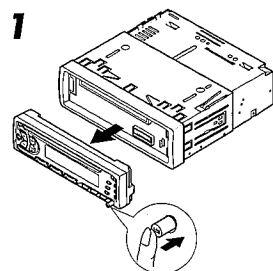


**6** See the back page for electrical connections.  
Con respecto a las conexiones eléctricas, consulte la página de atrás.  
Voir le dos de cette page pour les connexions électriques.

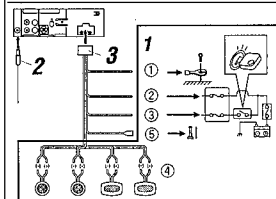



- When using the optional stay
- Cuando emplea un soporte opcional
- Lors de l'utilisation du hauban en option

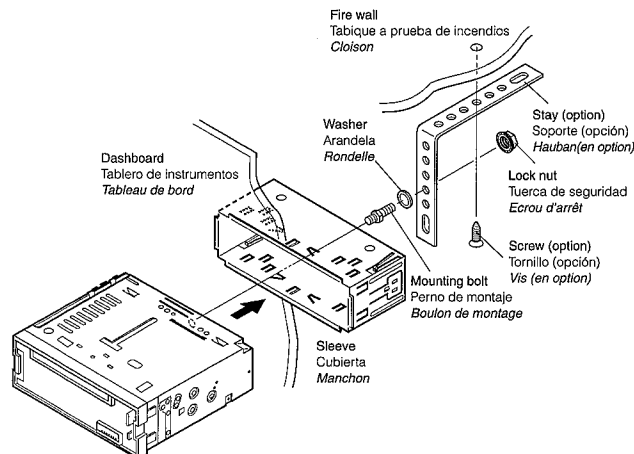


- When installing the unit without using the sleeve
- Instalación de la unidad sin utilizar la cubierta
- Lors de l'installation de l'appareil sans utiliser de manchon

In a Toyota for example, first remove the car radio and install the unit in its place.  
En un Toyota por ejemplo, primero extraiga la radio del automóvil y luego instale la unidad en su lugar.

Par exemple dans une Toyota, retirer d'abord l'autoradio et installer l'appareil à la place.

Flat type screws (M5 x 6 mm)\*  
Tornillos tipo plano (M5 x 6 mm)\*  
Vis à tête plate (M5 x 6 mm)\*

\* Not included with this unit.  
\* No suministrado con esta unidad.  
\* Non fourni avec cet appareil.

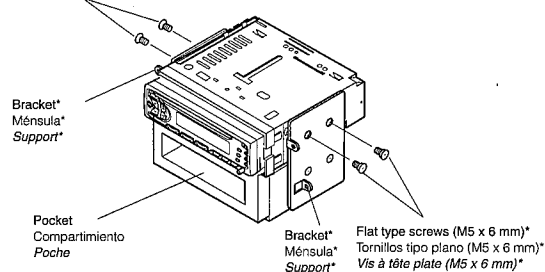

**Note:** When installing the unit on the mounting bracket, make sure to use the 6 mm-long screws. If longer screws are used, they could damage the unit.

**Nota:** Cuando instala la unidad en la ménsula de montaje, asegúrese de utilizar los tornillos de 6 mm de longitud. Si se utilizan tornillos más largos, éstos pueden dañar la unidad.

**Remarque:** Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 6 mm. Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.

#### Removing the unit

- Before removing the unit, release the rear section.

- 1 Remove the control panel.
- 2 Remove the trim plate.
- 3 Insert the 2 handles into the slots, as shown. Then, while gently pulling the handles away from each other, slide out the unit. (Be sure to keep the handles after installing it.)

#### Extracción de la unidad




- Antes de extraer la unidad, libere la sección trasera.

- 1 Extraiga el panel de control.
- 2 Retire la placa de guarnición.
- 3 Inserte las 2 manijas entre las ranuras, como se muestra. Luego, separe gentilmente las manijas y extraiga la unidad. (Asegúrese de conservar las manijas después de instalarlo.)

#### Retrait de l'appareil

- Avant de retirer l'appareil, libérer la section arrière.


- 1 Retirer le panneau de commande.
- 2 Retirer la plaque d'assemblage.
- 3 Introduire les deux poignées dans les fentes, comme montré. Puis, tout en tirant doucement les poignées écartées, faire glisser l'appareil pour le sortir. (S'assurer de conserver les poignées après l'installation de l'appareil.)

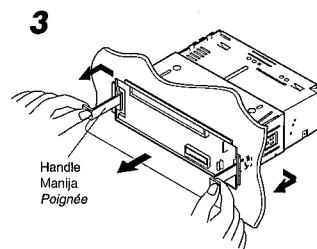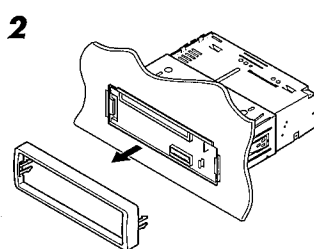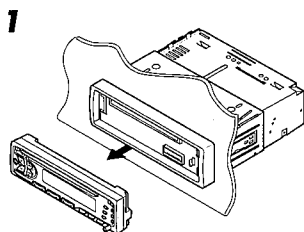


#### Parts list for installation and connection

The following parts are provided with this unit.  
After checking them, please set them correctly.

Hard case  
Estuche duro  
Etui de transport

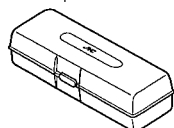

Power cord  
Cordón de alimentación  
Cordon d'alimentation

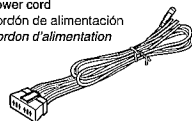

Handles  
Manijas  
Poignées




Washer (ø5)  
Arandela (ø5)  
Rondelle (ø5)




Lock nut (M5)  
Tuerca de seguridad (M5)  
Ecrou d'arrêt (M5)



Trim plate  
Placa de guarnición  
Plaque d'assemblage

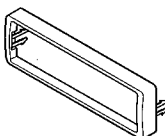

Sleeve  
Cubierta  
Manchon

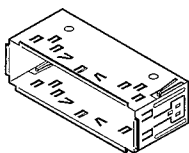

Mounting bolt (M5 x 20 mm)  
Perno de montaje (M5 x 20 mm)  
Boulon de montage (M5 x 20 mm)



Rubber cushion  
Cojín de goma  
Amortisseur en caoutchouc



#### Lista de piezas para instalación y conexión

 
Con esta unidad se suministran las siguientes piezas.  
Después de inspeccionarlas, colóquelas correctamente.

#### Liste des pièces pour l'installation et raccordement

Les pièces suivantes sont fournies avec cet appareil.  
Après vérification, veuillez les placer correctement.

FOR KD-SX830/S730  
PARA KD-SX830/S730  
POUR LES KD-SX830/S730

Remote controller and holder  
Mando a distancia y soporte  
Télécommande et support



Batteries  
Pilas  
Piles



R03(UM-4)/AAA(24F)


#### Installation : Remote Controller (FOR KD-SX830/S730) Instalación : Mando a distancia (PARA KD-SX830/S730) Installation : Télécommande (POUR LES KD-SX830/S730)

 Dashboard, etc.  
Tablero de instrumentos, etc.  
Tableau de bord, etc.



Double-faced tape (not included with this unit)  
Cinta adhesiva de ambos lados (no suministrado con esta unidad)  
Bande double face (non fourni avec cet appareil)

Remote controller  
Mando a distancia  
Télécommande



Holder  
Soporte  
Support



- Before attaching the double-faced tape, wipe and clean the place where you plan to attach it.
- Antes de adherir la cinta de doble cara, limpie el sitio de instalación con un paño.
- Avant d'attacher la bande double face, essuyez et nettoyez l'emplacement où vous projetez de l'attacher.

ENGLISH

## ELECTRICAL CONNECTIONS


To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

**Note:**

This unit is designed to operate only on **12 volts DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- If noise is a problem...  
This unit incorporates a noise filter in the power circuit. However, with some vehicles, clicking or other unwanted noise may occur. If this happens, connect the unit's **rear ground terminal** (See connection diagram below.) to the car's chassis using shorter and thicker cords, such as copper braiding or gauge wire. If noise still persists, consult your JVC car audio dealer.
- Maximum input of the speakers should be more than 40 watts at the rear and 40 watts at the front, with an impedance of **4 to 8 ohms**. (FOR KD-SX830/S730)
- Maximum input of the speakers should be more than 35 watts at the rear and 35 watts at the front, with an impedance of **4 to 8 ohms**. (FOR KD-S630)
- **Be sure to ground this unit to the car's chassis.**
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

Heat sink  
Sumidero térmico  
Dissipateur de chaleur

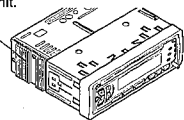

ESPAÑOL

## CONEXIONES ELECTRICAS

Para evitar cortocircuitos, recomendamos que desconecte el terminal negativo de la batería y que efectúe todas las conexiones eléctricas antes de instalar la unidad. Si usted no está seguro de cómo instalar correctamente la unidad, hágala instalar por un técnico cualificado.

**Nota:**

Esta unidad está diseñada para funcionar con **12 voltios de CC, con sistemas eléctricos de masa NEGATIVA** solamente. Si su vehículo no posee este sistema, será necesario un inversor de tensión, que puede ser adquirido en los concesionarios de JVC de equipos de audio para automóviles.

- Reemplace el fusible por uno con la corriente especificada. Si el fusible se quemase frecuentemente consulte con su concesionario de JVC de equipos de audio para automóviles.
- Si el ruido fuese un problema...  
Esta unidad tiene un filtro de ruido en el circuito de alimentación. Sin embargo, en algunos vehículos, pueden producirse chasquidos u otros ruidos indeseados. En tal caso conecte el **terminal de tierra posterior** (Ver diagrama de conexión abajo.) del receptor al chasis del automóvil, utilizando cordones más gruesos y cortos tales como alambre de cobre trenzado o de grueso calibre. Si el ruido persiste, consulte a su concesionario de JVC de equipos de audio para automóvil.
- La entrada máxima de los altavoces traseros debe ser mayor de 40 vatios y la de los delanteros de 40 vatios, con una impedancia de **4 a 8 ohmios**. (PARA KD-SX830/S730)
- La entrada máxima de los altavoces traseros debe ser mayor de 35 vatios y la de los delanteros de 35 vatios, con una impedancia de **4 a 8 ohmios**. (PARA KD-S630)
- **Asegúrese de conectar esta unidad a tierra en el chasis del automóvil.**
- El sumidero térmico estará muy caliente después del uso. Asegúrese de no tocarlo al desmontar esta unidad.

FRANÇAIS

## RACCORDEMENTS ELECTRIQUES

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil. Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

**Remarque:**

Cet appareil est conçu pour fonctionner sur des sources de courant continu de **12 volts à masse NEGATIVE** seulement. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Si le bruit est un problème...  
Cet appareil incorpore un filtre de bruit dans le circuit d'alimentation. Cependant, avec certains véhicules, quelques claquements ou autres bruits non désirés risquent de se produire. Si cela arrive, raccorder la **borne de masse arrière** de l'appareil au châssis de la voiture (voir le schéma de raccordement ci-dessous) en utilisant des cordons les plus gros et les plus courts possibles telle qu'une barre de cuivre ou une tresse. Si le bruit persiste, consulter votre revendeur d'autoradios JVC.
- La puissance admissible des haut-parleurs doit être supérieure à 40 watts à l'arrière et à 40 watts l'avant, avec une impédance de **4 à 8 ohms**. (POUR LES KD-SX830/S730)
- La puissance admissible des haut-parleurs doit être supérieure à 35 watts à l'arrière et à 35 watts l'avant, avec une impédance de **4 à 8 ohms**. (POUR LE KD-S630)
- **S'assurer de raccorder la mise à la masse de cet appareil au châssis de la voiture.**
- Le radiateur devient très chaud après usage. Faire attention de ne pas le toucher en retirant cet appareil.

### A Typical Connections / Conexiones típicas / Raccordements typiques

**Before connecting:** Check the wiring in the vehicle carefully not to fail in connecting this unit. Incorrect connection may cause a serious damage to this unit.


- 1 Connect the colored leads of the power cord to the car battery, speakers and automatic antenna (if any) in the following sequence.  
① Black: ground  
② Yellow: to car battery (constant 12V)  
③ Red: to an accessory terminal  
④ Others (except blue with white stripe): to speakers  
⑤ Blue with white stripe: to automatic antenna
- 2 Connect the antenna cord.
- 3 Finally connect the wiring harness to the unit.

**Antes de la conexión:** Verifique atentamente el conexionado del vehículo para no cometer errores al conectar esta unidad. Una conexión incorrecta podría producir daños graves en la unidad.

- 1 Conecte los conductores de color del cable de alimentación a la batería del automóvil, altavoces y antena automática (si la hubiere) en la secuencia siguiente.  
① Negro: a tierra.  
② Amarillo: a la batería del automóvil (12V constantes)  
③ Rojo: a un terminal de accesorio  
④ Otros, excepto azul con rayas blancas: a los altavoces  
⑤ Azul con rayas blancas: a la antena automática
- 2 Conecte el cable de antena.
- 3 Por último, conecte a la unidad el cableado preformado.

**Avant de commencer la connexion:** vérifiez attentivement le câblage du véhicule pour ne pas connecter incorrectement cet appareil. Une connexion incorrecte peut endommager sérieusement l'appareil.

- 1 Connectez les fils de couleur du cordon d'alimentation à la batterie de la voiture, aux enceintes et à l'antenne automatique (s'il y en a une) dans l'ordre suivant.  
① Noir: à la masse  
② Jaune: à la batterie de la voiture (12V constant)  
③ Rouge: à la prise accessoire  
④ Autres fils à l'exception du fil bleu à bandes blanches: aux enceintes  
⑤ Bleu à bandes blanches: à l'antenne automatique
- 2 Connectez le cordon d'antenne.
- 3 Finalement, connectez le faisceau de fils à l'appareil.

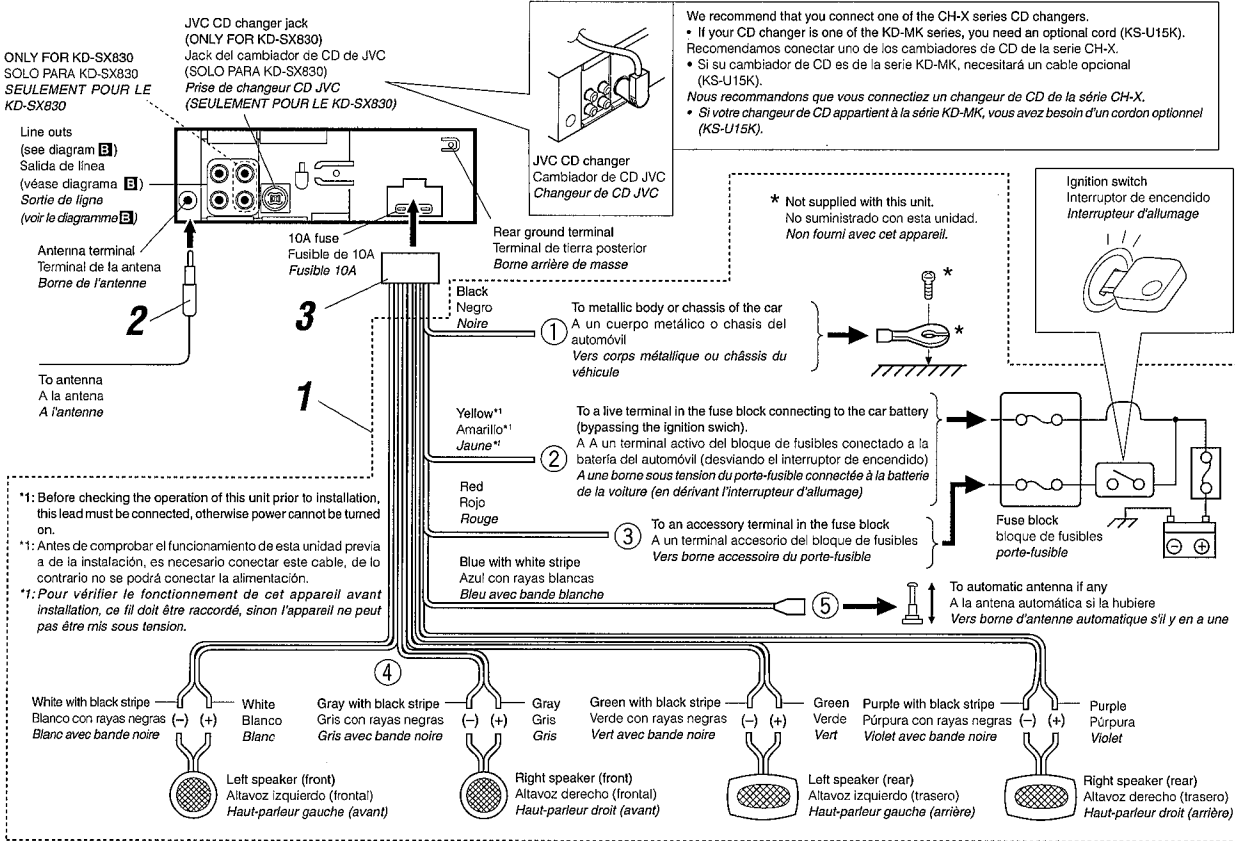

### PRECAUTIONS on power supply and speaker connections:

- DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.
- Connect the black lead (ground), yellow lead (to car battery, constant 12V), and red lead (to an accessory terminal) correctly.
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.
  - If the speaker wiring in your car is as illustrated in Fig. 1 and Fig. 2 below, DO NOT connect the unit using that original speaker wiring. If you do, the unit will be seriously damaged. Redo the speaker wiring so that you can connect the unit to the speakers as illustrated in Fig. 3.
  - If the speaker wiring in your car is as illustrated in Fig. 3, you can connect the unit using the original speaker wiring in your car.
  - If you are not sure of the speaker wiring of your car, consult your car dealer.

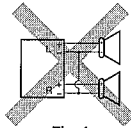


Fig. 1

### PRECAUCIONES sobre las conexiones de la fuente de alimentación y de los altavoces:

- NO conecte los conductores de altavoz del cable de alimentación a la batería de automóvil, pues podrían producirse graves daños en la unidad.
- Conecte correctamente el conductor negro (a tierra), el conductor amarillo (a la batería del automóvil, 12V constantes), y el conductor rojo (a un terminal de accesorio).
- ANTES de conectar a los altavoces los conductores de altavoz del cable de alimentación, verifique el conexionado de altavoz de su automóvil.
  - Si el conexionado de altavoz de su automóvil es como se indica en las Figs. 1 y 2 de abajo, NO conecte la unidad utilizando ese conexionado de altavoz original. Si lo hace, se producirán daños graves en la unidad. Vuelva a efectuar el conexionado de altavoz de manera que pueda conectar la unidad a los altavoces de la manera indicada en la Fig. 3.
  - Si el conexionado de altavoz de su automóvil es como se indica en la Fig. 3, podrá conectar la unidad utilizando el conexionado de altavoz original de su automóvil.
  - Si tiene dudas sobre el conexionado de altavoz de su automóvil, consulte con su concesionario.

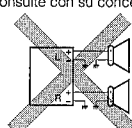


Fig. 2

### PRECAUTIONS sur l'alimentation et la connexion des enceintes:

- NE CONNECTEZ PAS les fils d'enceintes du cordon d'alimentation à la batterie; sinon, l'appareil serait sérieusement endommagé.
- Connectez correctement le fil noir (à la masse), le fil jaune (à la batterie de la voiture, 12V constant) et le fil rouge (à la prise accessoire).
- AVANT de connecter les fils d'enceintes du cordon d'alimentation aux enceintes, vérifiez le câblage des enceintes de votre voiture.
  - Si le câblage des enceintes de votre voiture est réalisé comme montré sur la Fig. 1 ou Fig. 2 ci-dessous, NE CONNECTEZ PAS l'appareil en utilisant ce câblage original d'enceintes. Si vous le faites, l'appareil sera sérieusement endommagé. Recommencez le câblage des enceintes de façon que vous puissiez connecter l'appareil aux enceintes comme montré sur la Fig. 3.
  - Si le câblage des enceintes de votre voiture est comme montré sur la Fig. 3, vous pouvez connecter l'appareil en utilisant ce câblage original d'enceintes pour votre voiture.
  - Si vous n'êtes pas sûrs du câblage d'enceintes de votre voiture, consultez le concessionnaire de votre voiture.


 


Fig. 3


### Connecting the leads / Conexión de los conductores / Raccordement des fils

Twist the core wires when connecting.  
Retuerza los alambres de alma para conectarlos.  
Torsader les âmes des fils en les raccordant.

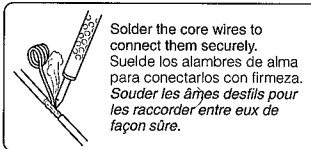

#### CAUTION / PRECAUCION / PRECAUTION:

 - To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- Para evitar cortocircuitos, cubra los cables NO UTILIZADOS con cinta aislante.
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS utilisés avec de la bande isolante.



### B Connections Adding Other Equipment / Conexiones para añadir otros equipos / Raccordement pour ajouter d'autres appareils

Since this unit has line-out terminals, an amplifier and other equipment can be used to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be supplied the power through this unit.
- For amplifier only:
  - Connect this unit's line-out terminals to the amplifier's line-in terminals.
  - Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused. (Cover the terminals of the these unused leads with insulating tape, as illustrated above.)


Como esta unidad posee terminales de salida de línea, se puede utilizar un amplificador u otro equipamiento para mejorar el sistema estereofónico de su automóvil.

- Conecte el cable remoto (azul con rayas blancas) al cable remoto del otro equipo para que pueda suministrarse energía a través de esta unidad.
- Sólo para el amplificador:
  - Conecte los terminales de salida de línea de esta unidad con los terminales de entrada de línea del amplificador.
  - Desconecte los altavoces de esta unidad y conéctelos al amplificador. Los cables de los altavoces de esta unidad quedan sin usar. (Cubra los terminales de estos cables sin usar con cinta aislante, tal como se indica en la figura de arriba).

Comme cet appareil a des bornes de sortie de ligne, un amplificateur et d'autres appareils peuvent être utilisés pour améliorer votre chaîne stéréo automobile.

- Connecter le fil d'alimentation à distance (bleu avec des bandes blanches) au fil d'alimentation à distance de l'autre appareil de façon qu'il puisse être alimenté par cet appareil.
- Pour l'amplificateur seulement:
  - Raccorder les bornes de sortie ligne de cet appareil aux bornes d'entrée ligne de l'amplificateur.
  - Déconnecter les enceintes de cet appareil et connectez-les à l'amplificateur. Laissez les fils d'enceintes de cet appareil inutilisés. (Recouvrir les extrémités de ces fils inutilisés avec de la bande isolante comme montré ci-dessus.)

### Amplifier / Amplificador / Amplificateur

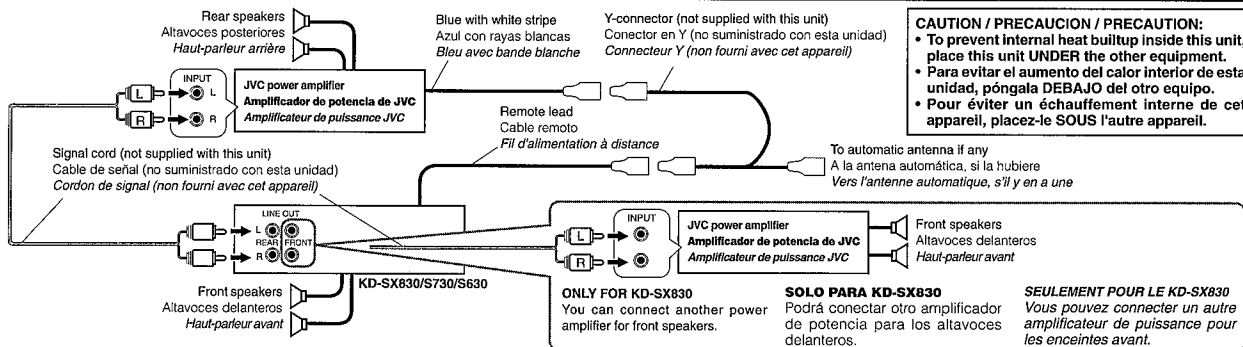

### TROUBLESHOOTING

- The fuse blows.
  - \* Are the red and black leads connected correctly?
- Power cannot be turned on.
  - \* Is the yellow lead connected?
- No sound from the speakers.
  - \* Is the speaker output lead short-circuited?
- Sound is distorted.
  - \* Is the speaker output lead grounded?
  - \* Are the "+" terminals of L and R speakers grounded in common?
- Unit becomes hot.
  - \* Is the speaker output lead grounded?
  - \* Are the "+" terminals of L and R speakers grounded in common?

### LOCALIZACION DE AVERIAS

- El fusible se quema.
  - \* ¿Están los conductores rojo y negro correctamente conectados?
- No es posible conectar la alimentación.
  - \* ¿Está el cable amarillo conectado?
- No sale sonido de los altavoces.
  - \* ¿Está el cable de salida del altavoz cortocircuitado?
- El sonido presenta distorsión.
  - \* ¿Está el cable de salida del altavoz conectado a masa?
  - \* ¿Están los terminales "+" de los altavoces L y R conectados a una masa común?
- La unidad se calienta.
  - \* ¿Está el cable de salida del altavoz conectado a masa?
  - \* ¿Están los terminales "+" de los altavoces L y R conectados a una masa común?

### EN CAS DE DIFFICULTÉS


- Le fusible saute.
  - \* Les fils rouge et noir sont-ils raccordés correctement?
- L'appareil ne peut pas être mise sous tension.
  - \* Le fil jaune est-elle raccordée?
- Pas de son des haut-parleurs.
  - \* Le fil de sortie de haut-parleur est-il court-circuité?
- Le son est déformé.
  - \* Le fil de sortie de haut-parleur est-il à la masse?
  - \* Les bornes "+" des haut-parleurs gauche et droit sont-elles mises ensemble à la masse?
- L'appareil devient chaud.
  - \* Le fil de sortie de haut-parleur est-il à la masse?
  - \* Les bornes "+" des haut-parleurs gauche et droit sont-elles mises ensemble à la masse?

<< MEMO >>


## Description of Major ICs

### ■ MN35510(IC561):DIGITAL SERVO & DIGITAL SIGNAL PROCESSOR

#### 1. Terminal Layout

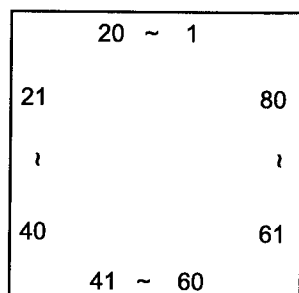

#### 2. Block Diagram

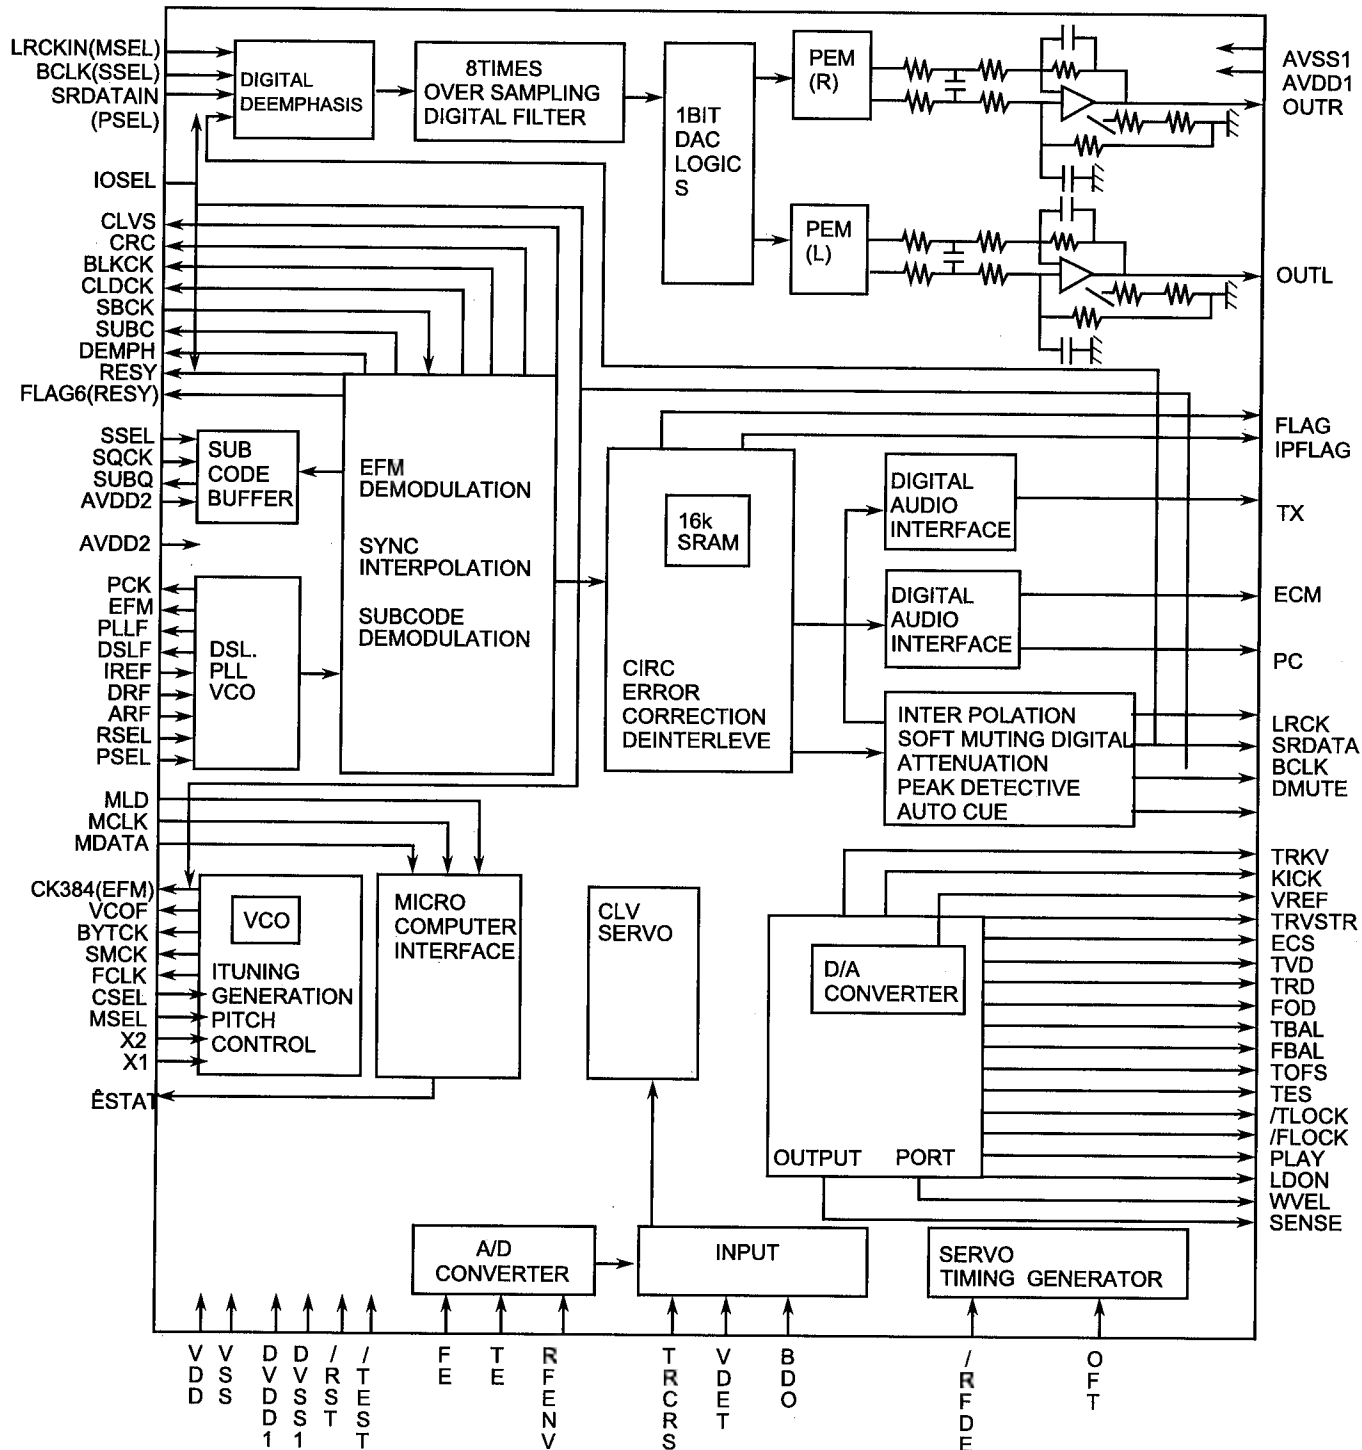

### 3. Description

Pin No.	symbol	I/O	Description	Pin No.	symbol	I/O	Description
1	BCLK	O	Not used	41	TES	O	Tracking error shunt signal output(H:shunt)
2	LRCK	O	Not used	42	PLAY	—	Not used
3	SRDATA	O	Not used	43	WVEL	—	Not used
4	DVDD1	—	Power supply (Digital)	44	ARF	I	RF signal input
5	DVSS1	—	Connected to GND	45	IREF	I	Reference current input pin
6	TX	O	Digital audio inter output	46	DRF	I	Bias pin for DSL
7	MCLK	I	$\mu$ com command clock signal input (Data is latched at signal's rising point)	47	DSL F	I/O	Loop filter pin for DSL
8	MDATA	I	$\mu$ com command data input	48	PLL F	I/O	Loop filter pin for PLL
9	MLD	I	$\mu$ com command load signal input	49	VCOF	—	Not used
10	SENSE	O	Sense signal output	50	AVDD2	—	Power supply(Analog)
11	FLOCK	O	Focus clock signal output Active :Low	51	AVSS2	—	Connected to GND(Analog)
12	TLOCK	O	Tracking clock signal output Active :Low	52	EFM	—	Not used
13	BLKCK	O	sub-code block clock signal output	53	PCK	—	Not used
14	SQCK	I	Outside lock for sub-code Q resistor input	54	PDO	—	Not used
15	SUBQ	O	Sub-code Q -code output	55	SUBC	—	Not used
16	DMUTE	—	Connected to GND	56	SBCK	—	Not used
17	STATUS	O	Status signal (CRC,CUE,CLVS,TTSTOP,ECLV,SQOK)	57	VSS	—	Connected to GND(for X'tal cscillation circuit)
18	RST	I	Reset signal input (L:Reset)	58	XI	I	Input of 16.9344MHz X'tal oscillation circuit
19	SMCK	—	Not used	59	X2	O	Output of X'tal oscillation circuit
20	PMCK	—	Not used	60	VDD	—	Power supply(for X'tal cscillation circuit)
21	TRV	O	Traverse enforced output	61	BYTCK	—	Not used
22	TVD	O	Traverse drive output	62	CLDCK	—	Not used
23	PC	—	Not used	63	FLAG	—	Not used
24	ECM	O	Spindle motor drive signal (Enforced mode output) 3-State	64	IPPLAG	—	Not used
25	ECS	O	Spindle motor drive signal (Servo error signal output)	65	FLAG	—	Not used
26	KICK	O	Kick pulse output	66	CLVS	—	Not used
27	TRD	O	Tracking drive output	67	CRC	—	Not used
28	FOD	O	Focus drive output	68	DEMPH	—	Not used
29	VREF	I	Reference voltage input pin for D/A output block (TVD,FOD,FBA,TBAL)	69	RESY	—	Not used
30	FBAL	O	Focus Balance adjust signal output	70	IOSEL	—	pull up
31	TBAL	O	Tracking Balance adjust signal output	71	TEST	—	pull up
32	FE	I	Focus error signal input(Analog input)	72	AVDD1	—	Power supply(Digital)
33	TE	I	Tracking error signal input(Analog input)	73	OUT L	O	Lch audio output
34	RF ENV	I	RF envelope signal input(Analog input)	74	AVSS1	—	Connected to GND
35	VDET	I	Vibration detect signal input(H:detect)	75	OUT R	O	Rch audio output
36	OFT	I	Off track signal input(H:off track)	76	RSEL	—	pull up
37	TRCRS	I	Track cross signal input	77	CSEL	—	Connected to GND
38	RFDET	I	RF detect signal input(L:detect)	78	PSEL	—	Connected to GND
39	BDO	I	BDO input pin(L:detect)	79	MSEL	—	Connected to GND
40	LDON	O	Laser ON signal output(H:on)	80	SSEL	—	Pull up

## ■ IC601: LC72P366(CPU) Terminal's Function Table

## 2.Terminal Function


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	XIN		4.5MHz crystal oscillation connection pin.	41	CD ON	O	CD power supply on ("H": 8V, "L": 0V)
2		-	Non connection	42	RELAY	O	5V power control
3		-	Non connection	43	POWERCONT	-	Non connection
4		-	Non connection	44		-	Non connection
5		-	Non connection	45		-	Non connection
6		-	Non connection	46	SW1	I	Disc in detecting switch input. (8cm disc detect)
7	SUBQ	I	CD Lsi Sub-code Q-codedata input (to IC651 pin14)	47	SW3	I	Disc existence detecting switch input (Loading finish detect)
8		-	Non connection	48	RESETSW	I	Rest switch input
9	SQCK	O	CD Lsi Sub-code clock	49		-	Non connection
10	/RESET	O	Micon reset pin	50		-	Non connection
11		-	Non connection	51	CDSense	I	Sense signal input from CD Lsi.
12		-	Non connection	52	STATAS	I	Status signal input
13		-	Non connection	53	P.SAVE2	I	Power save 2 detecting input
14	LCDCE	O	Chip enable signal output for LCD driver	54	SO/ST		Station detection("H": found)/Stereo indication("L":Stereo)
15		-	Non connection	55		-	Non connection
16		-	Non connection	56		-	Non connection
17		-	Non connection	57	BAND	O	FM/AM band selection ("H":FM, "L":AM)
18		-	Non connection	58	/MONO	O	FM mono control signal output("H":mono)
19	LM0	O	Loading motor control signal output (FWD)	59	IFRQ/ABC		During FM auto search, IF request output "H" after SD detected.
20	LM1	O	Loading motor control signal output (REW)	60	/MUTE	O	Muting switch
21		-	Non connection	61		-	Non connection
22		-	Non connection	62	SMETER	I	S.meter input
23		-	Non connection	63	KEYCHANGE	-	AD Key select ("H":Normal, "L":Test)
24	KS2	O	Initial setting diode matrix output pin 2	64	KEY2	I	KEY AD input pin 2
25	KS1	O	Initial setting diode matrix output pin 1	65	KEY1	I	KEY AD input pin 1
26	KS0	O	Initial setting diode matrix output pin 0	66	KEY0	I	KEY AD input pin 0
27	DETACH	I	Remove the front panel detecting input	67	P.SAVE1	I	Power save 1 detecting input
28		-	Non connection	68	SENSE	O	Sense signal output
29		-	Non connection	69		-	Non connection
30		-	Non connection	70	FMIFCOUT	I	FM IF count signal input
31		-	Non connection	71		-	Non connection
32	SW2	I	Detect switch for 12cm disc input	72		-	Non connection
33	Lsi reset	O	CD Lsi reset signal output	73	Vdd	-	Power source pin
34	MCLK	O	CD Lsi command clock signal output	74		-	Non connection
35	MDATA	O	CD Lsi command data output	75	FMOSC	I	FM local oscillator signal input
36	MLD	O	CD Lsi command load signal output	76	Vss	-	Connected to GND
37		-	Non connection	77	NC	-	Non connection
38		-	Non connection	78	ERROROUT	O	PLL error signal output
39	SCL	O	E.volume clock signal output	79	GND	-	Test pin (To GND)
40	SDA	O	E.volume data signal output	80	XOUT	O	4.5MHz crystal oscillator connection pin.

■ AN8806SB(IC601):RF&SERVO AMP

1.Terminal Layout

PD	1	36 PDAC
LD	2	35 PDBD
LDON	3	34 PDF
LDP	4	33 PDE
VCC	5	32 PDER
RF-	6	31 PDFR
RF OUT	7	30 TBAL
RF IN	8	29 FBAL
C.AGC	9	28 FE-
ARF	10	27 FE OUT
C.ENV	11	26 TE-
C.EA	12	25 TE OUT
CS BDO	13	24 CROSS
BDO	14	23 TE BPF
CS BRT	15	22 VDET
OFTR	16	21LD OFF
/NRFDDET	17	20 VREF
GND	18	19 ENV

2.Block Diagram

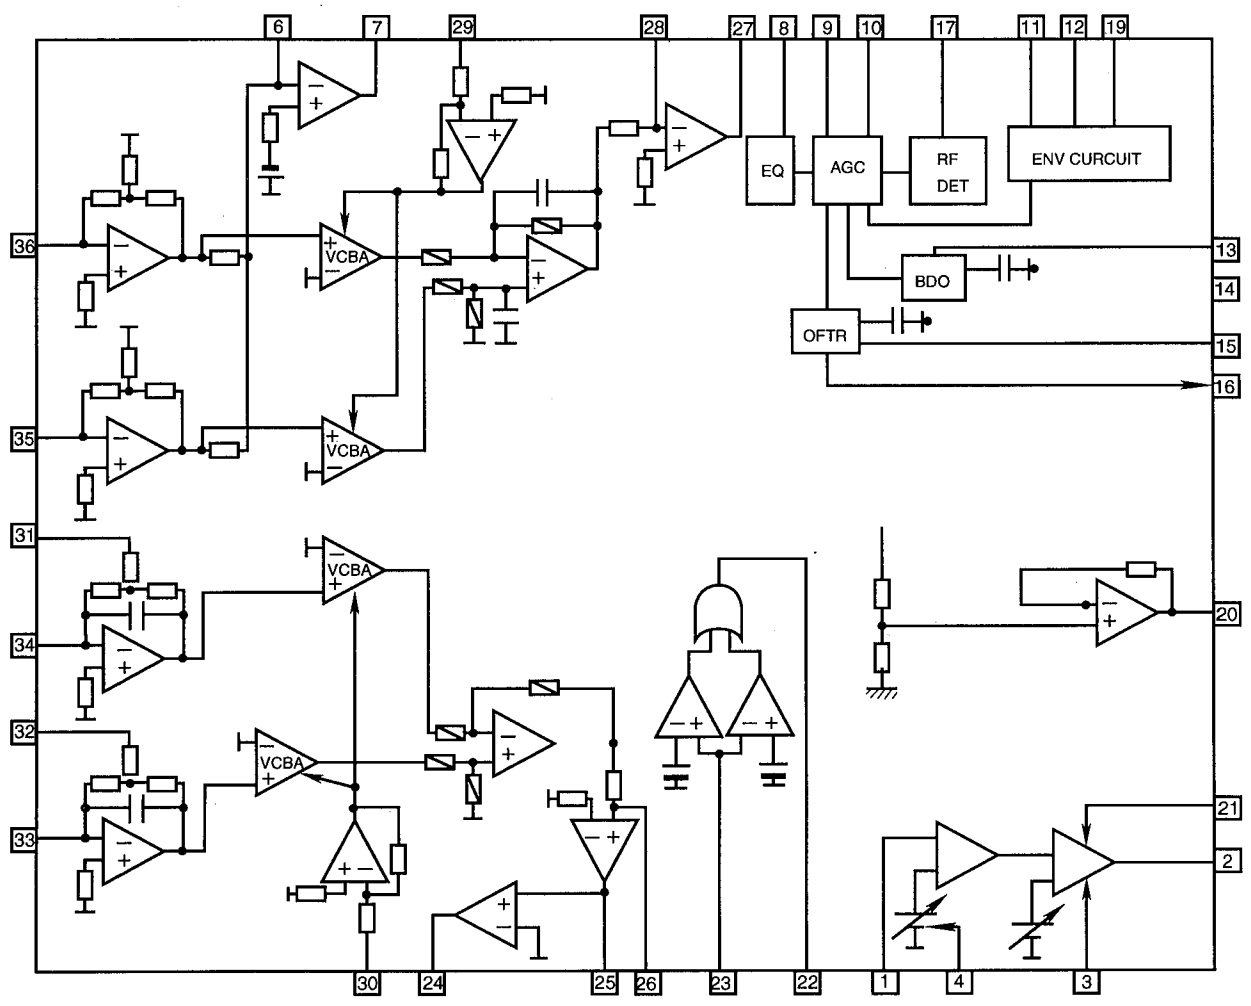



## 3. Functions

Pin No.	Symbol	I/O	Functions and operations
1	PD	I	APC amp input terminal
2	LD	O	APC amp output terminal
3	LD ON	I	APC ON/OFF control terminal
4	LDP	--	Connect to ground
5	VCC	--	Power supply
6	RF-	I	Inverse input pin for RF amp
7	RF OUT	O	RFamp output
8	RF IN	I	RF input
9	C.AGC	I/O	Connecting pin of AGC loop filter
10	ARF	O	RF output
11	C.ENV	I/O	A capacitor is connected to this terminal to detect the envelope of RF signal
12	C.EA	I/O	A capacitor is connected to this terminal to detect the envelope of RF signal
13	CS BDO	I/O	A capacitor is connected to detect the lower envelope of RF signal
14	BDO	O	BDO output pin
15	CS BRT	I/O	A capacitor is connected to detect the lower envelope of RF signal
16	OFTR	O	Of-track status signal output
17	/NRFDET	O	RF detection signal output
18	GND	--	Ground
19	ENV	O	Envelope output
20	VREF	O	Reference voltage output
21	LD OFF	--	Connect to ground
22	VDET	O	Vibration detection signal output
23	TE BPF	I	Input pin of tracking error through BPF
24	CROSS	O	Tracking error cross output
25	TE OUT	O	Tracking error signal output
26	TE-	I	Inverse input pin for tracking error amp
27	FE OUT	O	Output pin of focus error
28	FE-	I	Inverse input pin for focus error amp
29	FBAL	I	Focus balance control
30	TBAL	I	Tracking balance control
31	PDFR	I/O	F I-V amp gain control
32	PDER	I/O	E I-V amp gain control
33	PDF	I	I-V amp input
34	PDE	I	I-V amp input
35	PD BD	I	I-V amp input
36	PD AC	I	I-V amp input

TEA6320T (IC301) : E. VOLUME

1.Terminal Layout


SDA	1	32	SCL
GND	2	31	VCC
OUTLR	3	30	OUTRR
OUTLF	4	29	OUTRF
TL	5	28	TR
B2L	6	27	B2R
B1L	7	26	B1R
IVL	8	25	IVR
ILL	9	24	ILR
QSL	10	23	QSR
IDL	11	22	IDR
MUTE	12	21	Vref
ICL	13	20	ICR
IMD	14	19	CAP
IBL	15	18	IBR
IAL	16	17	IAR

CD-CH


TUNER

CD


2.Block Diagram

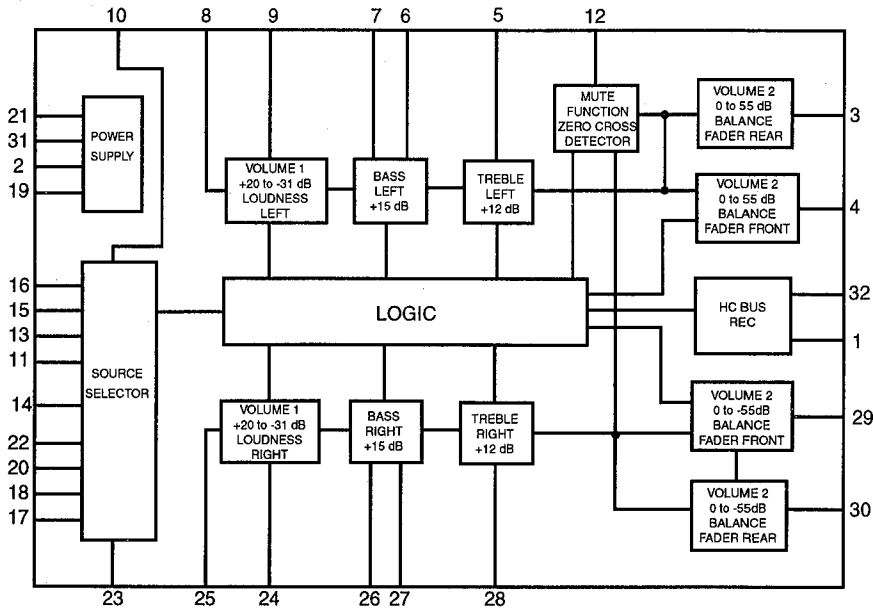


IC901:BA4901 (REGULATOR)

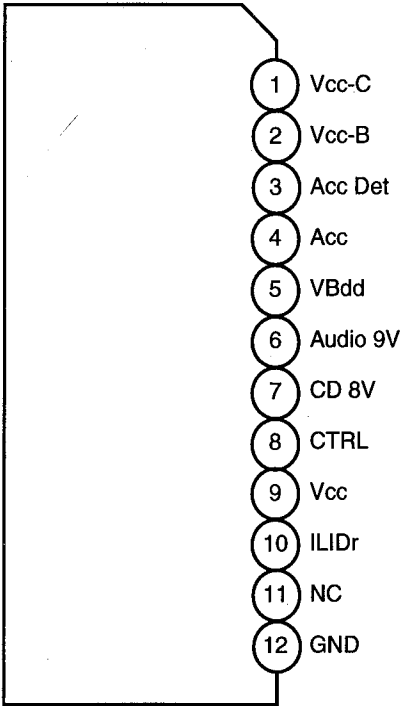


■ IC951: LC75823E (LCD DRIVER)

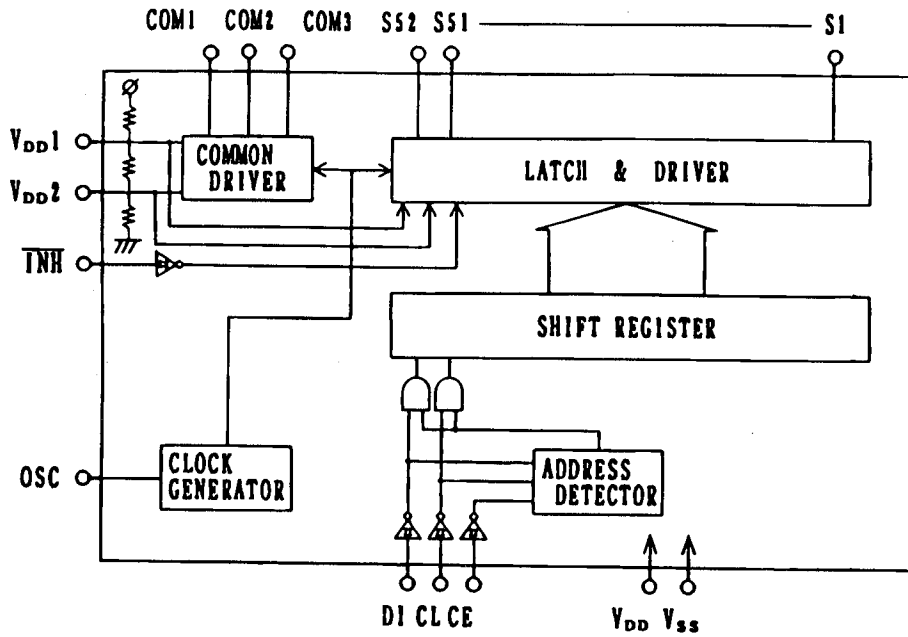



■ BA6898FP(IC541) 4channel driver

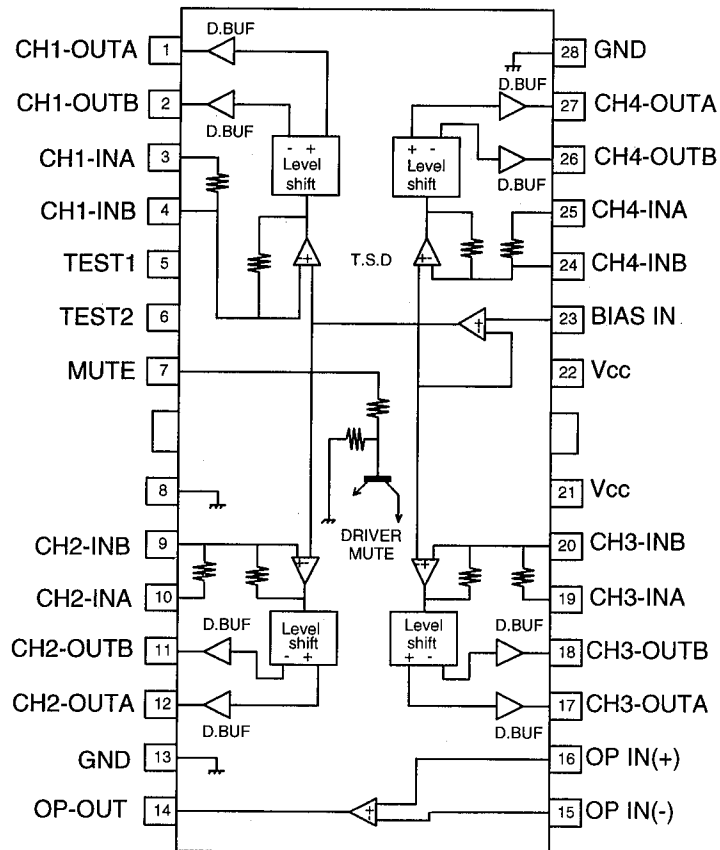

Location of Main Parts

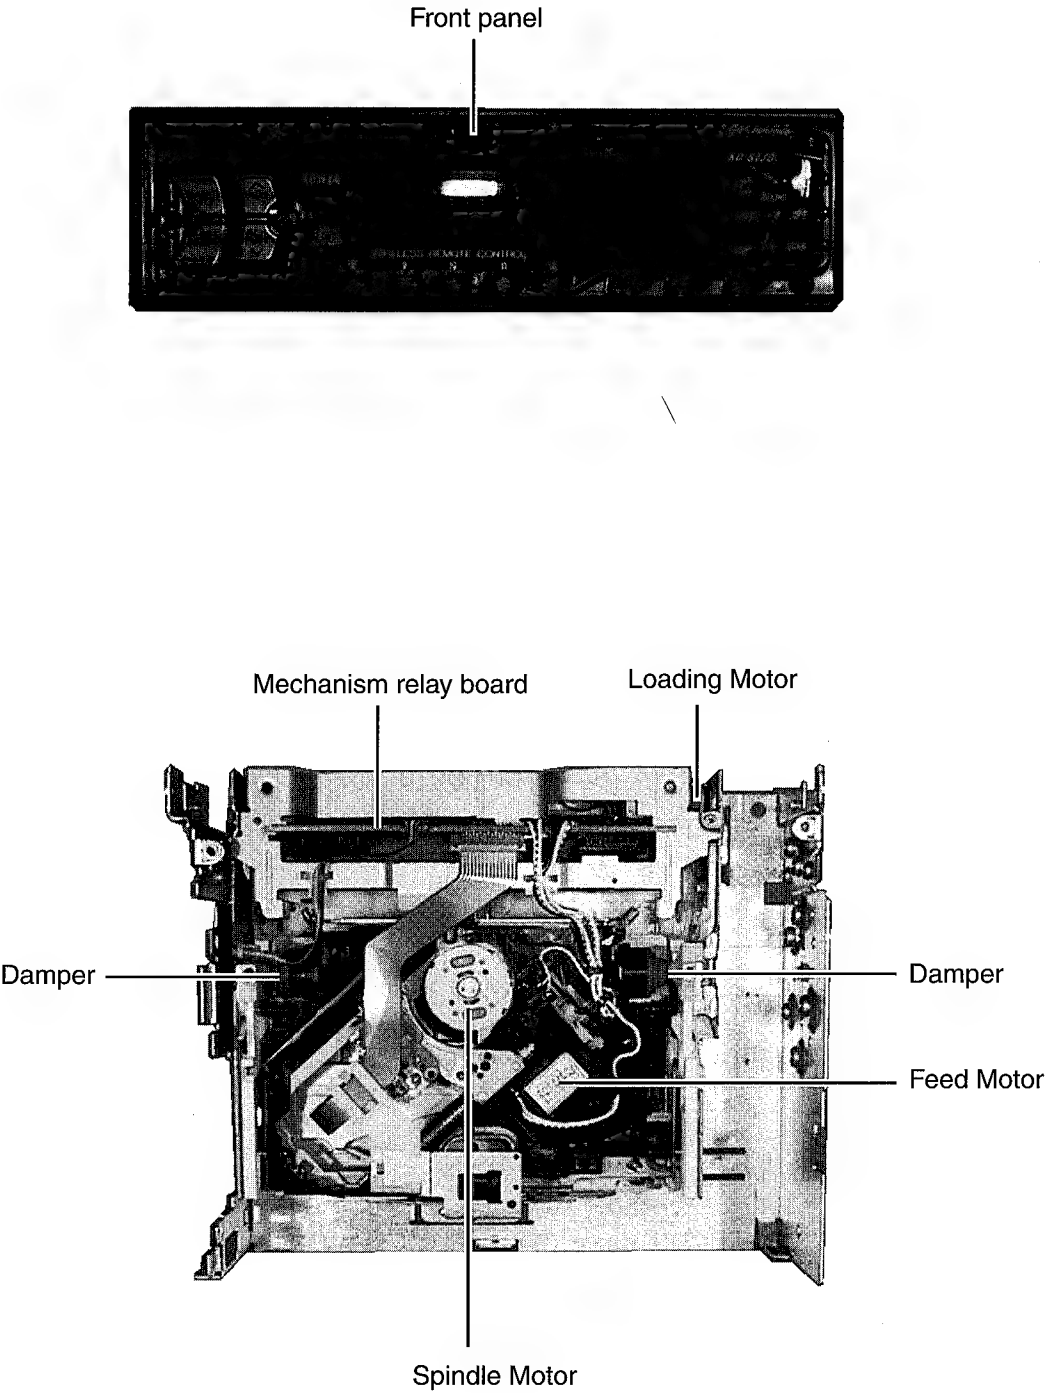

# Location of Main Parts

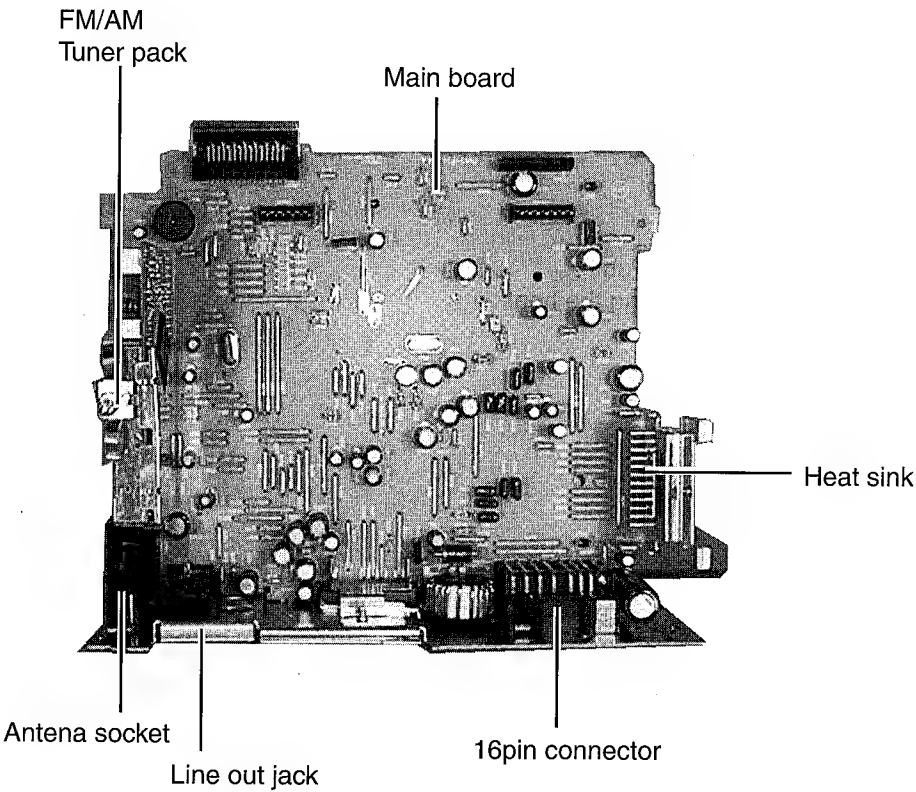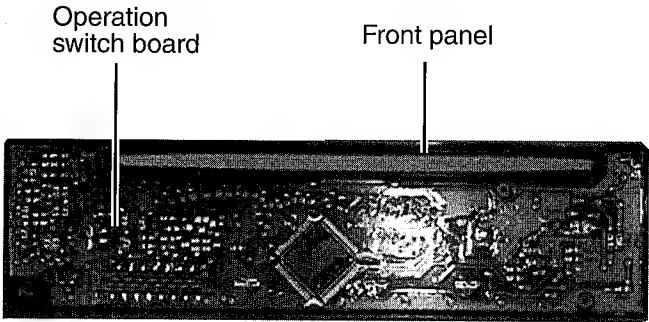

## Removal of Main Parts

### ■ Detaching the front Panel Unit

(See Fig-1)

De press the release button in the direction shown to detach the front panel unit .

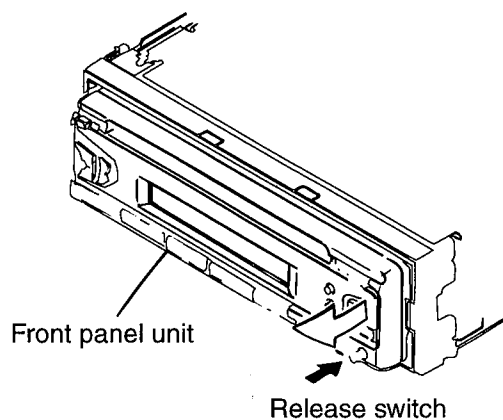


Fig.1

### ■ Removing the front chassis

(See Fig.2)

- 1.Release the two catch on the right side of unit and pull the front chassis forward to remove it.
- 2.Release the two catch on the left side of unit and pull the front chassis forward to remove it.

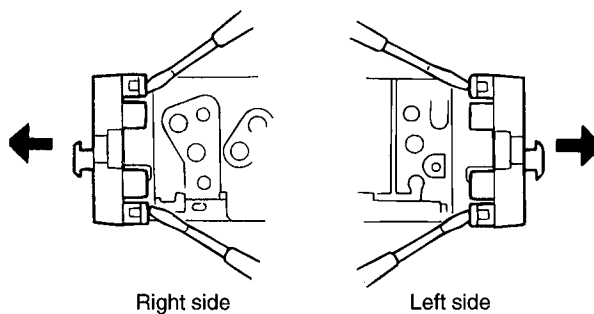


Fig.2

### ■ Removing the heat sink

(See Fig.3)

- 1.Locate the heat sink side of the unit .
- 2.Remove three screws ① retaining the heat sink.

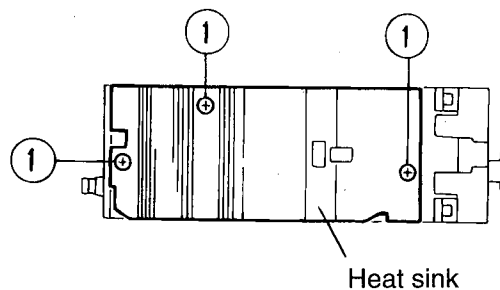


Fig.2

### ■ Removing the bottom cover

(See Fig.4)

Turn the unit upside down then insert and twist the screw driver to remove the bottom cover.

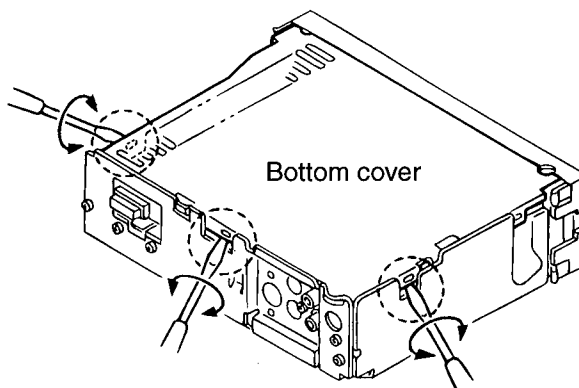


Fig.4

■ Removing the main board

(See Fig.5, Fig.6)

1. Remove two screws ② retaining the main board.
2. Locate the rear side of the unit.
3. Remove the three screws ③ retaining the rear bracket.
4. Lift up the main board to remove it, at this time remove the connections CN501 and CN502 connecting the main board and CD mechanism assembly.


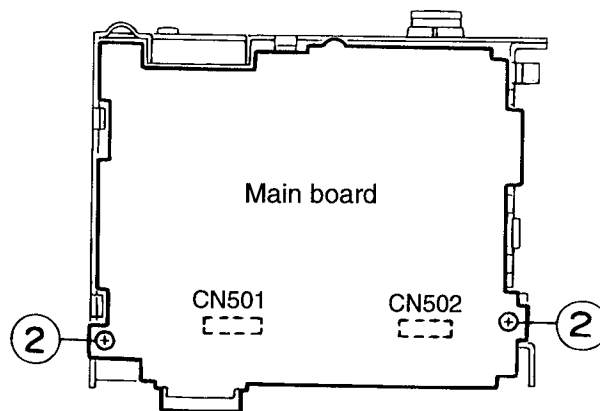


Fig.5

■ Removing the CD mechanism assembly

(See Fig.7)

- Remove three screws ④ retaining the CD mechanism assembly from the top cover.

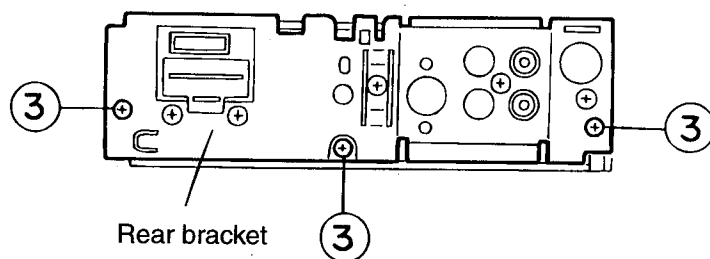

Rear bracket

Fig.6

■ Removing the operation switch board

(See Fig.9)

1. Locate the rear side of the front panel unit.
2. Remove four screws ⑤ retaining the rear cover.
3. Remove the operation switch board off on the front Panel.


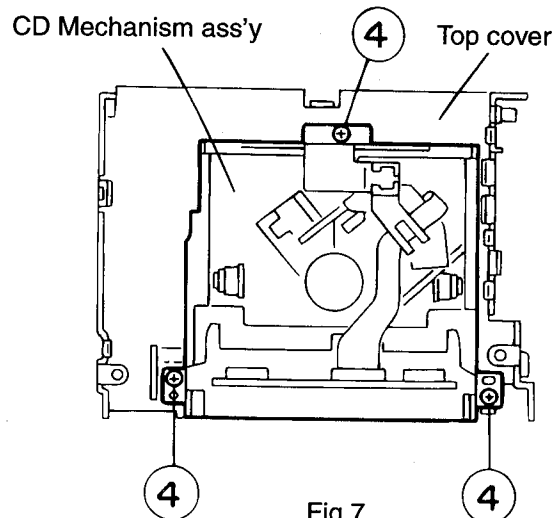


Fig.7

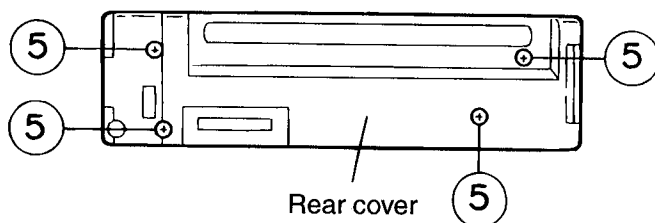

Rear cover

Fig.8

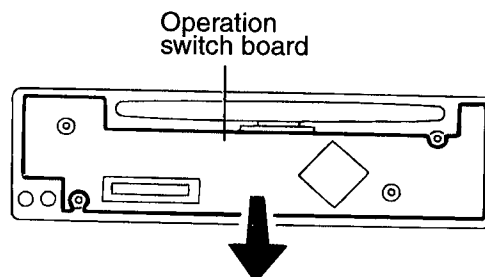


Fig.9

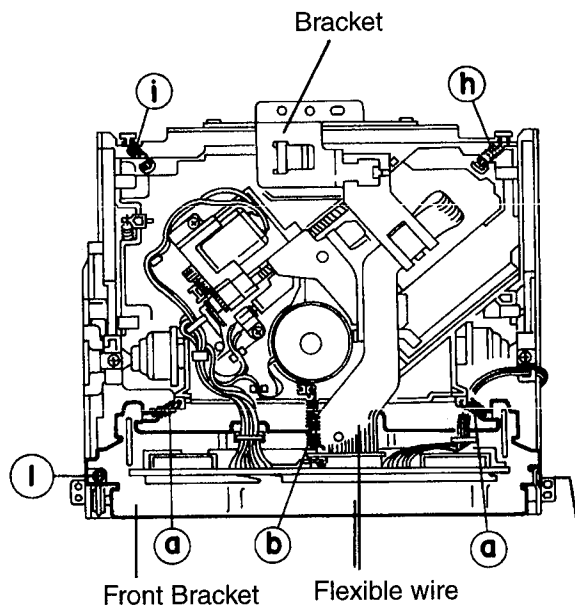


Fig.10

## [ CD Mechanism Section ]

### ■ Removing the CD mechanism control P.C.board

- 1.Remove the CD mechanism assembly  
(See "Removing the CD mechanism assembly").
- 2.Remove the three springs ① and ② from behind the  
CD mechanism assembly(See Fig.10).
- 3.Disconnect the flexible wire connected to the  
connector on the CD mechanism control P.C.board  
(See Fig.10).
- 4.Remove the one screw ③ retaining the CD mecha-  
nism control P.C.board(See Fig. 11).
5. After disengaging the engagement between the  
notch section ④ and frame,remove the CD mecha-  
nism Control P.C .board successively from ① through  
to ③ in the arrow direction as shown in Fig. 11.

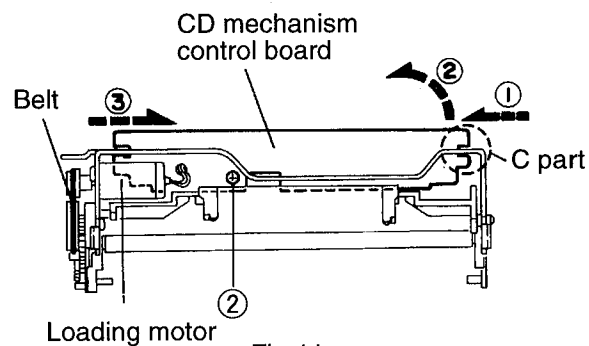


Fig.11

**CAUTION:**Whenever the flexible wire is disconnected,  
be sure to remove the soldering in advance  
as shown in Fig.12. Otherwise , the CD  
mechanism assembly can possibly be  
damaged.

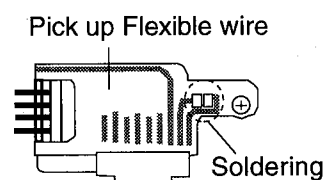


Fig.12

- 6.Remove the two screws ① retaining the front bracket for  
fixing the CD mechanism control P. C. board(See Fig.10 or 13).

**CAUTION:**Remove the front bracket from the frame while  
expanding both sides of the frame as shown in  
Fig.14

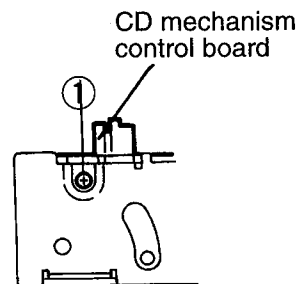


Fig.13



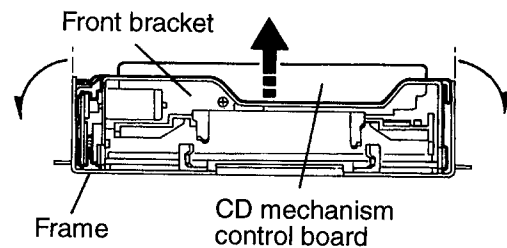


Fig.14

## ■ Removing the loading motor

- 1.Remove the belt from the loading motor  
(See Fig.14 and Fig.15)
- 2.Remove the one screw ③ retaining the  
loading motor(See Fig.15)

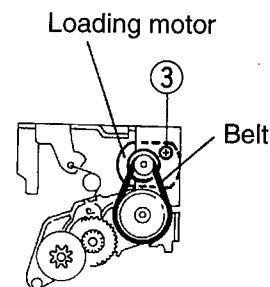


Fig.15

## ■ Removing the CD mechanism assembly

- 1.Remove the two screws ④ retaining the bracket for  
fixing the damper(See Fig.16)
- 2.When shining the fix plate on the right and left Sides  
respectively to the arrow direction, lower the entire  
CD mechanism. When the shafts(㉔, ㉕, ㉖ and ㉗) on both the right and left sides have been set free as  
shown in Fig.17 and Fig.18,then the assembly can be  
removed easily.Remove the two screws ⑤ retaining  
the rear damper bracket to make it easier to remove  
the damper from the rear damper bracket(See  
Fig.10, Fig.17 and Fig.18).
- 3.Remove the two springs ㉘ and ㉙ as shown in Fig.10  
and Fig 16.
- 4.While removing the right and left sides of the rear damper  
brackets and dampers While expanding both sides of the  
CD mechanism,disassemble the entire CD mechanism.

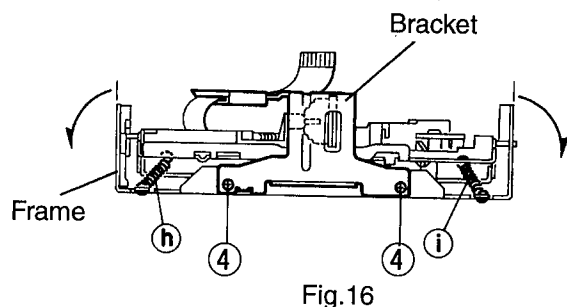


Fig.16

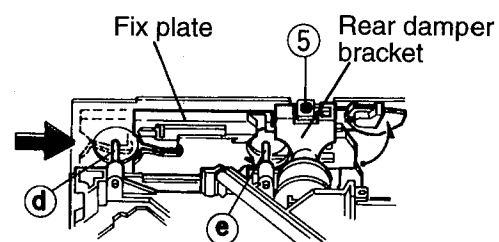


Fig.17

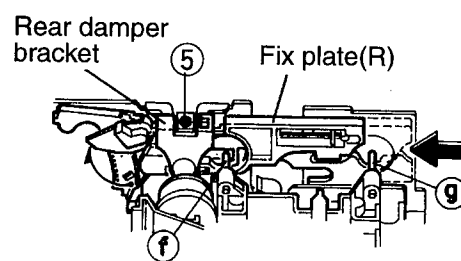


Fig.18

5. While tuning the pickup gear in the arrow direction as shown in Fig.20, shift the entire pickup unit.
6. Remove the three screws ⑥ retaining the feed motor assembly and take out this motor assembly (See Fig.19).
7. While pressing and expanding the spring section holding the FD screw in the arrow direction, remove the FD screw and dismount the pickup unit (See Fig.21).
8. By removing the two screw ⑦ retaining the pickup unit, dismount the nut push spring plate and pickup mount nut (See Fig.22).
9. Remove the FD screw from the pickup unit (See Fig.22).

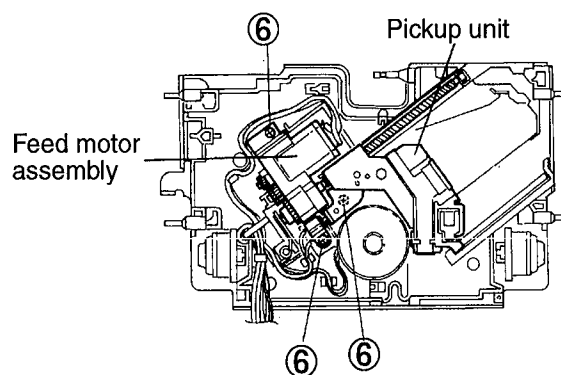


Fig.19

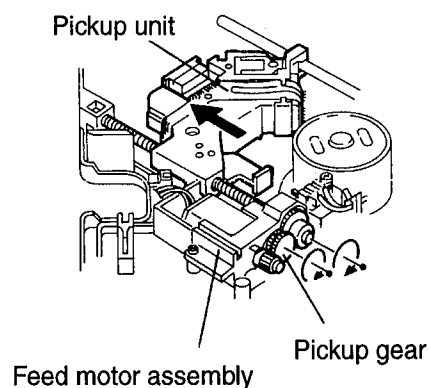


Fig.20

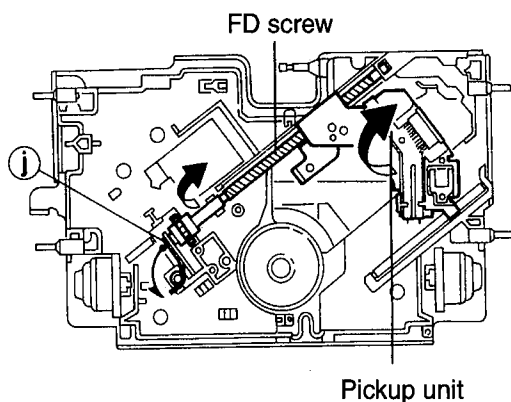


Fig.21

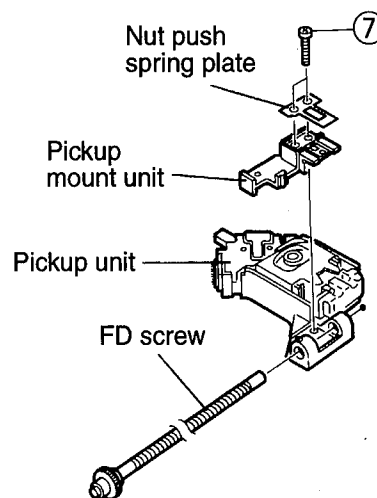


Fig.22

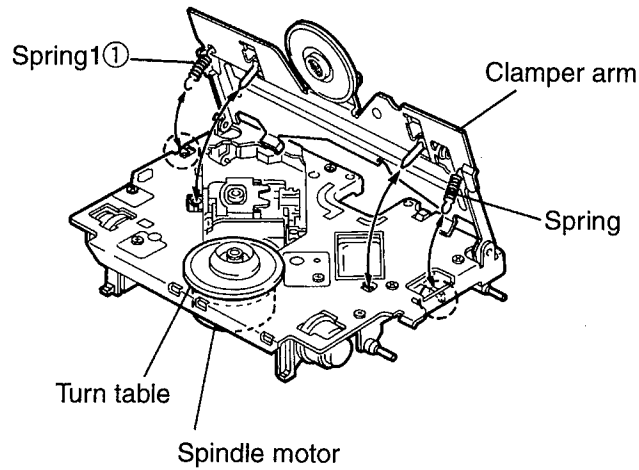


Fig.23

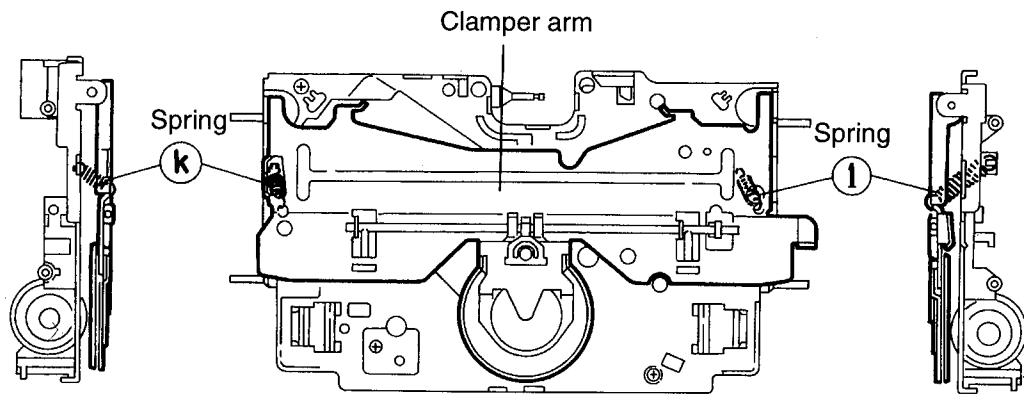


Fig.24-a

Fig.24

Fig.24-b

## ■ Removing the spindle motor

1. After turning back the CD mechanism to initial position, remove the two springs ① and ① on both the right and left sides of the clamper arm (See Fig.23 and Fig.24).
2. While turning the turn table, remove the two screws ⑧ retaining the spindle motor and take out the spindle motor (See Fig.25).

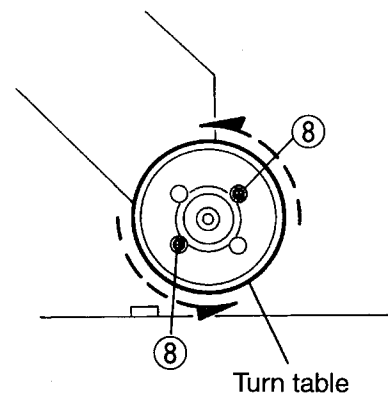


Fig.25

## Main Adjustment

### ■ Test Instruments required for adjustment

1. Digital oscilloscope (100MHz)
2. AM Standard signal generator
3. FM Standard signal generator
4. Stereo modulator
5. Electric voltmeter
6. Digital tester
7. Tracking offset meter
8. Test Disc JVC :CTS1000
9. Extension cable for check  
EXTGS003-14P × 2

### ■ Standard volume position

Balance and Bass & Treble volume : Indication "0"  
Loudness : Off

Setting of reference frequency of SSG

AM mode: 600kHz/62dB-INT/400Hz, 30% modulation  
Signal on

FM mode: 97.9MHz/66dB/INT/400Hz/22.5kHz deviation  
pilot 7.5kHz dev.


### Dummy load

Exclusive dummy load should be used for AM, and FM. For FM dummy load, there is a loss of 6dB between SSG output and antenna input. The loss of 6dB need not be considered since direct reading of figures are applied in this working standard.


### ■ Standard measuring conditions

Power supply voltage DC14.4V(10.5~16V)  
Load impedance  $4\Omega$  (2 Speakers connection)  
Line out  $20k\Omega$

### ■ How to connect the extension cable for adjusting

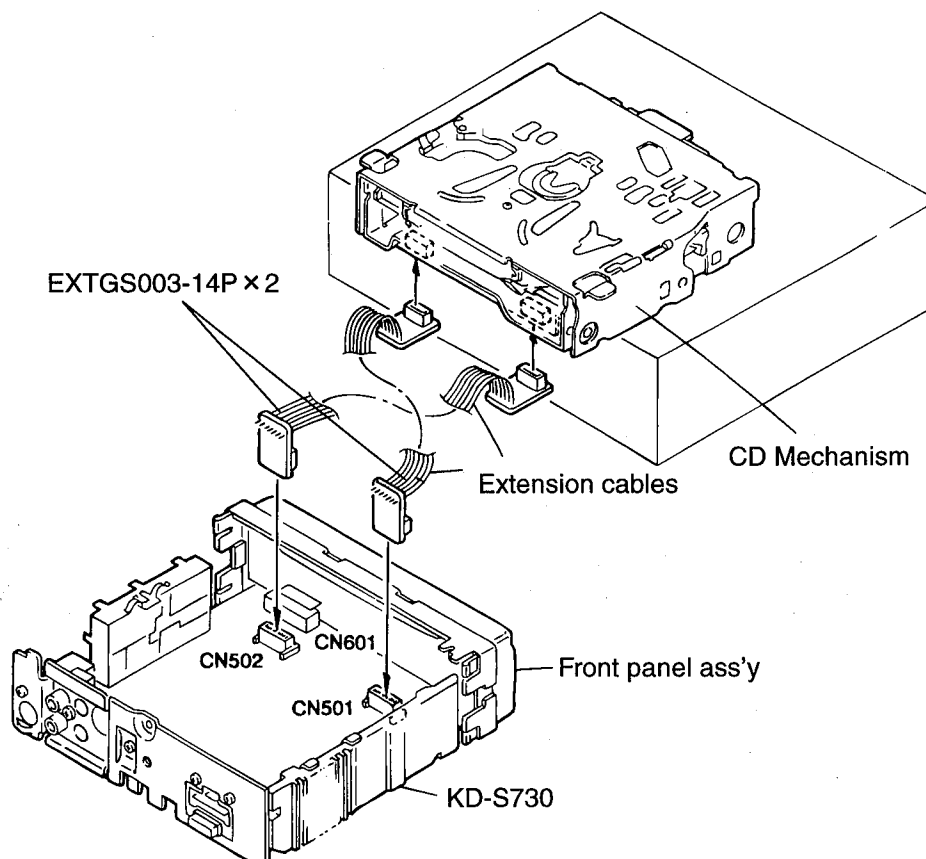


# Flow of Functional Operation Until TOC Read

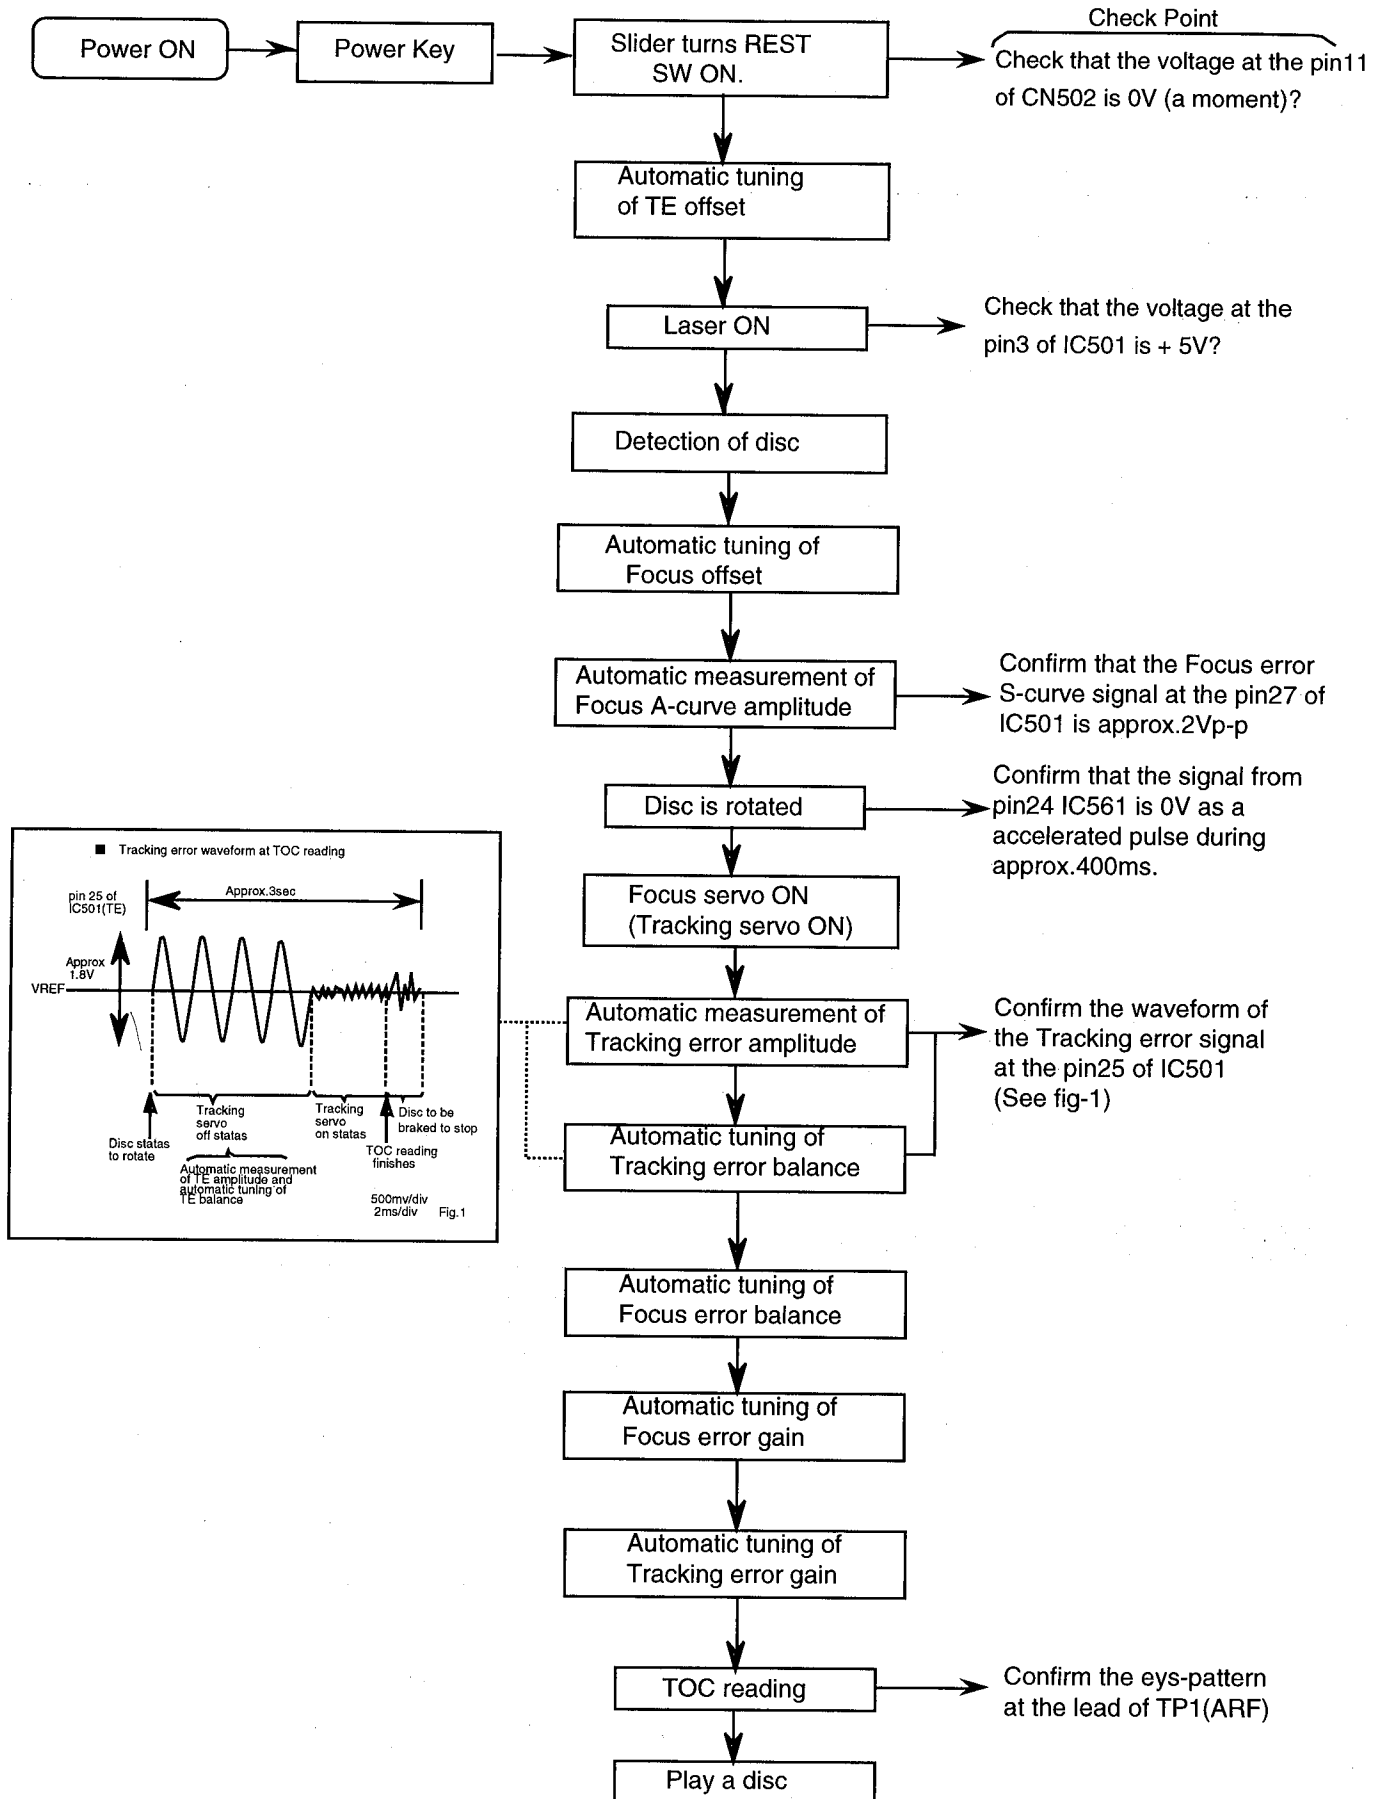

## Maintenance of Laser Pickup


- (1) Cleaning the pick up lens  
Before you replace the pick up, please try to clean the lens with a alcohol soaked cotton swab.
- (2) Life of the laser diode (Fig.1)  
When the life of the laser diode has expired, the following symptoms will appear.
- (3) The level of RF output (EFM output:amplitude of eye pattern) will be low.

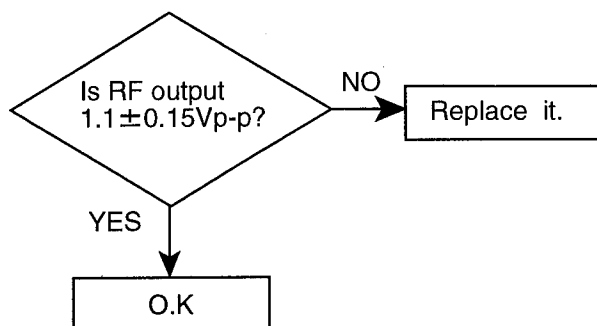


(Fig.1)

- (3) Semi-fixed resistor on the APC PC board  
The semi-fixed resistor on the APC printed circuit board which is attached to the pickup is used to adjust the laser power. Since this adjustment should be performed to match the characteristics of the whole optical block, do not touch the semi-fixed resistor.  
If the laser power is lower than the specified value, the laser diode is almost worn out, and the laser pickup should be replaced.  
If the semi-fixed resistor is adjusted while the pickup is functioning normally, the laser pickup may be damaged due to excessive current.

## Replacement of Laser Pickup

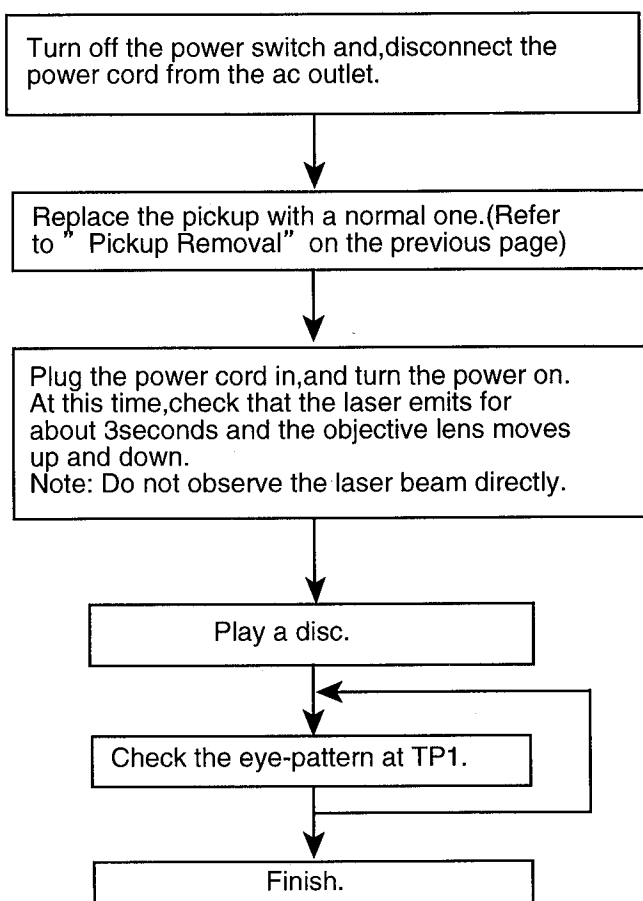

# Block Diagram

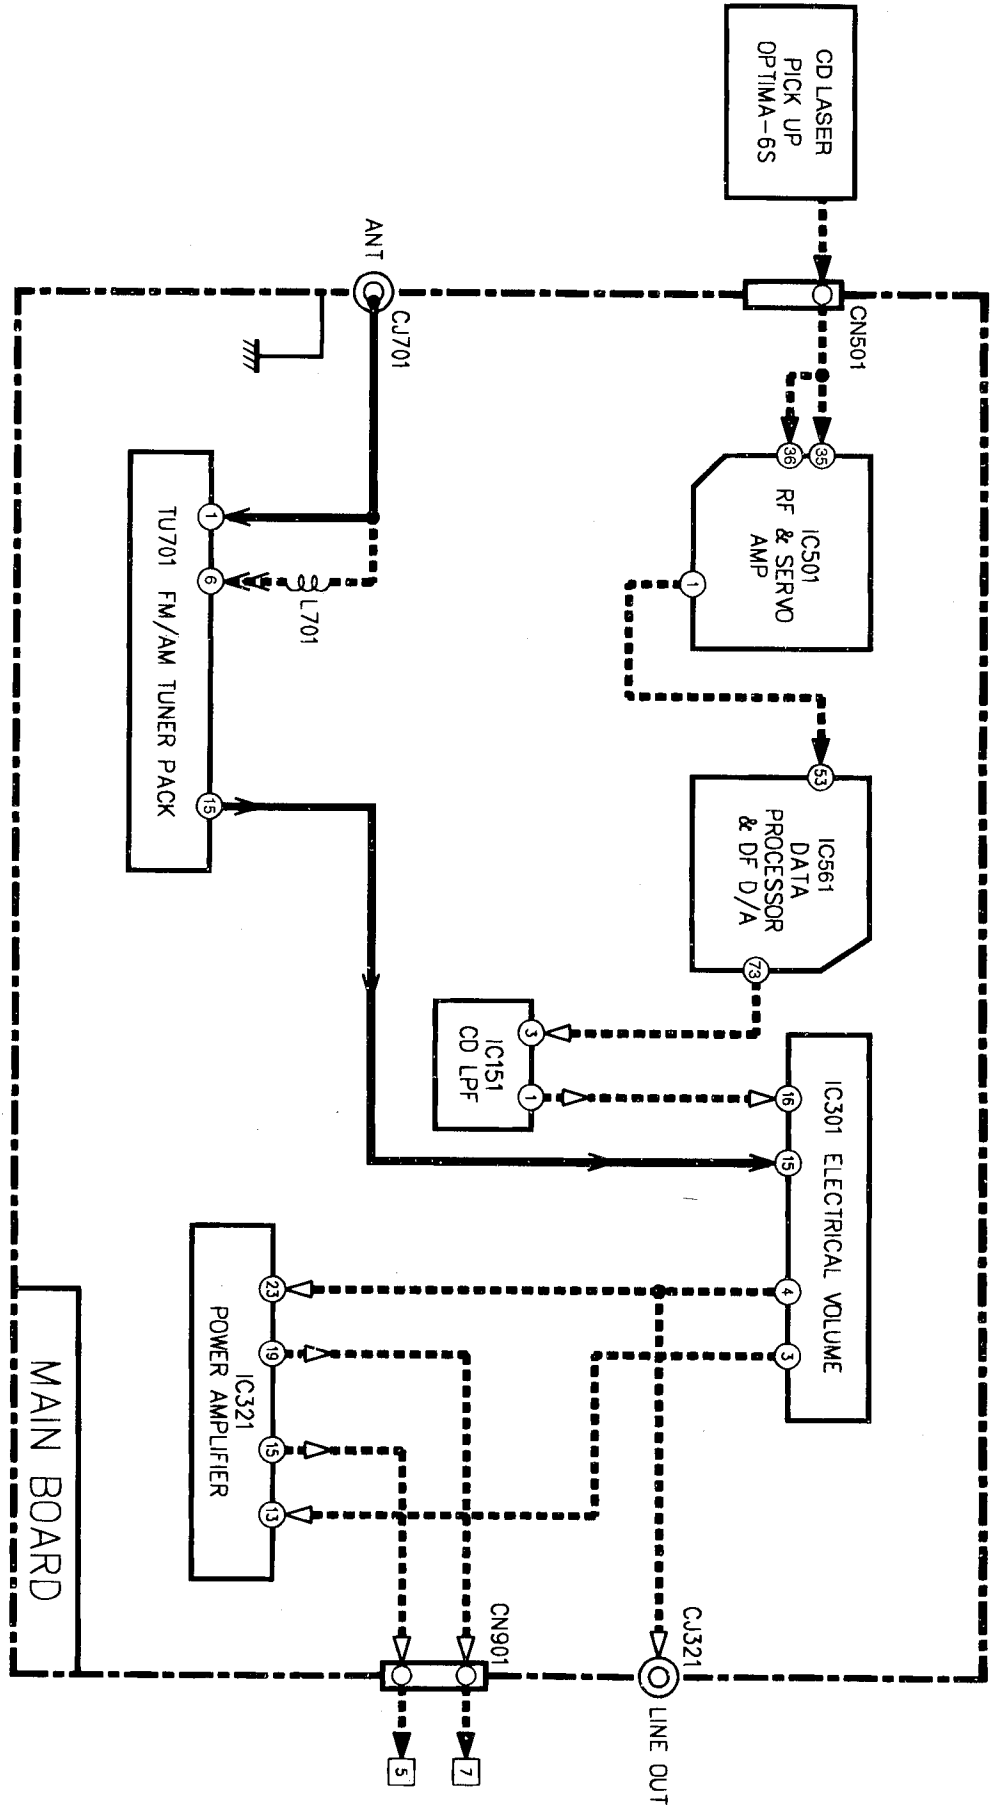


<<MEMO>>







# ■Reciever & Power Amplifier Circuit

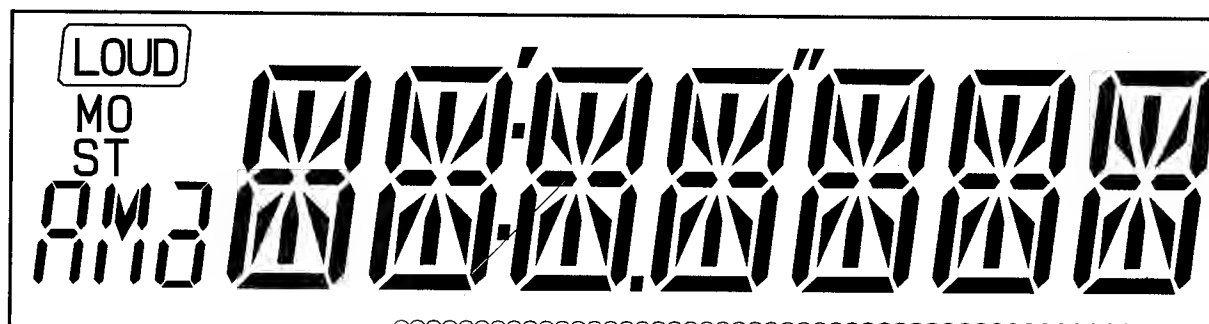


LC01

 
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52

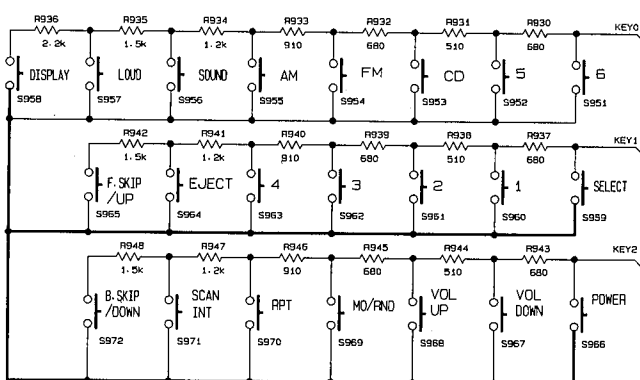


KEY MATRIX

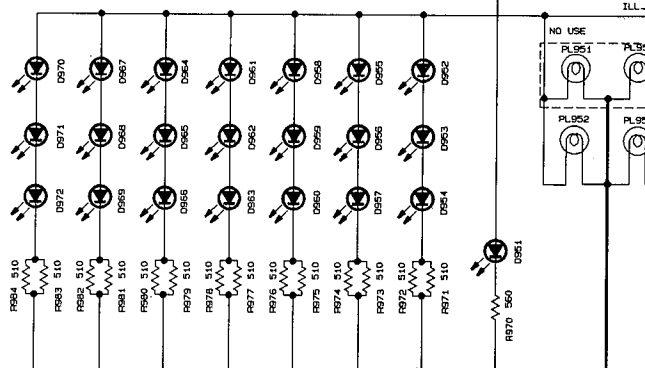

LIGHTING  
DISPLAY

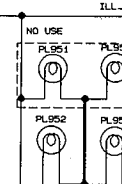


FRONT CIRCUIT BOARD SI

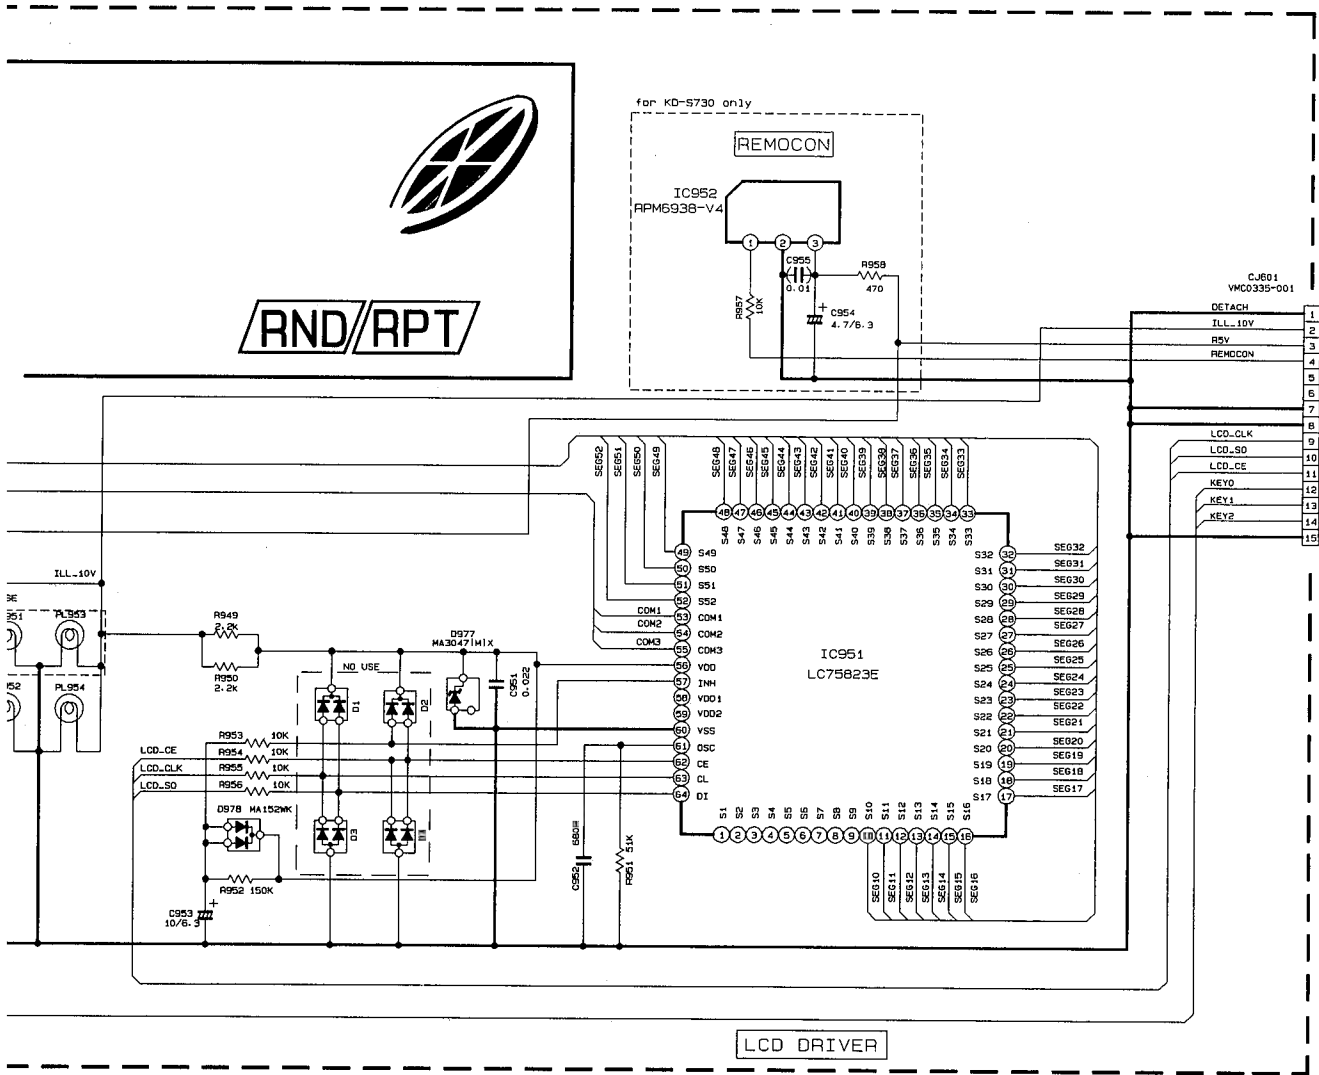

### 3D SECTION


REF. NO.	PART NO.
S951 - S972	NSW0039-001X
D952 - D972	SML-210FT/LKL/W
D951	SML-210LT/LM/-X
PL952, PL954	KD-S730J/KD-S630J- U QLL0033-001
	KD-S636E QLL0024-001
LCD1	KD-S730J/KD-S630J- U QLD0032-001
	KD-S636E QLD0036-001

# ■CD Servo Control Circuit

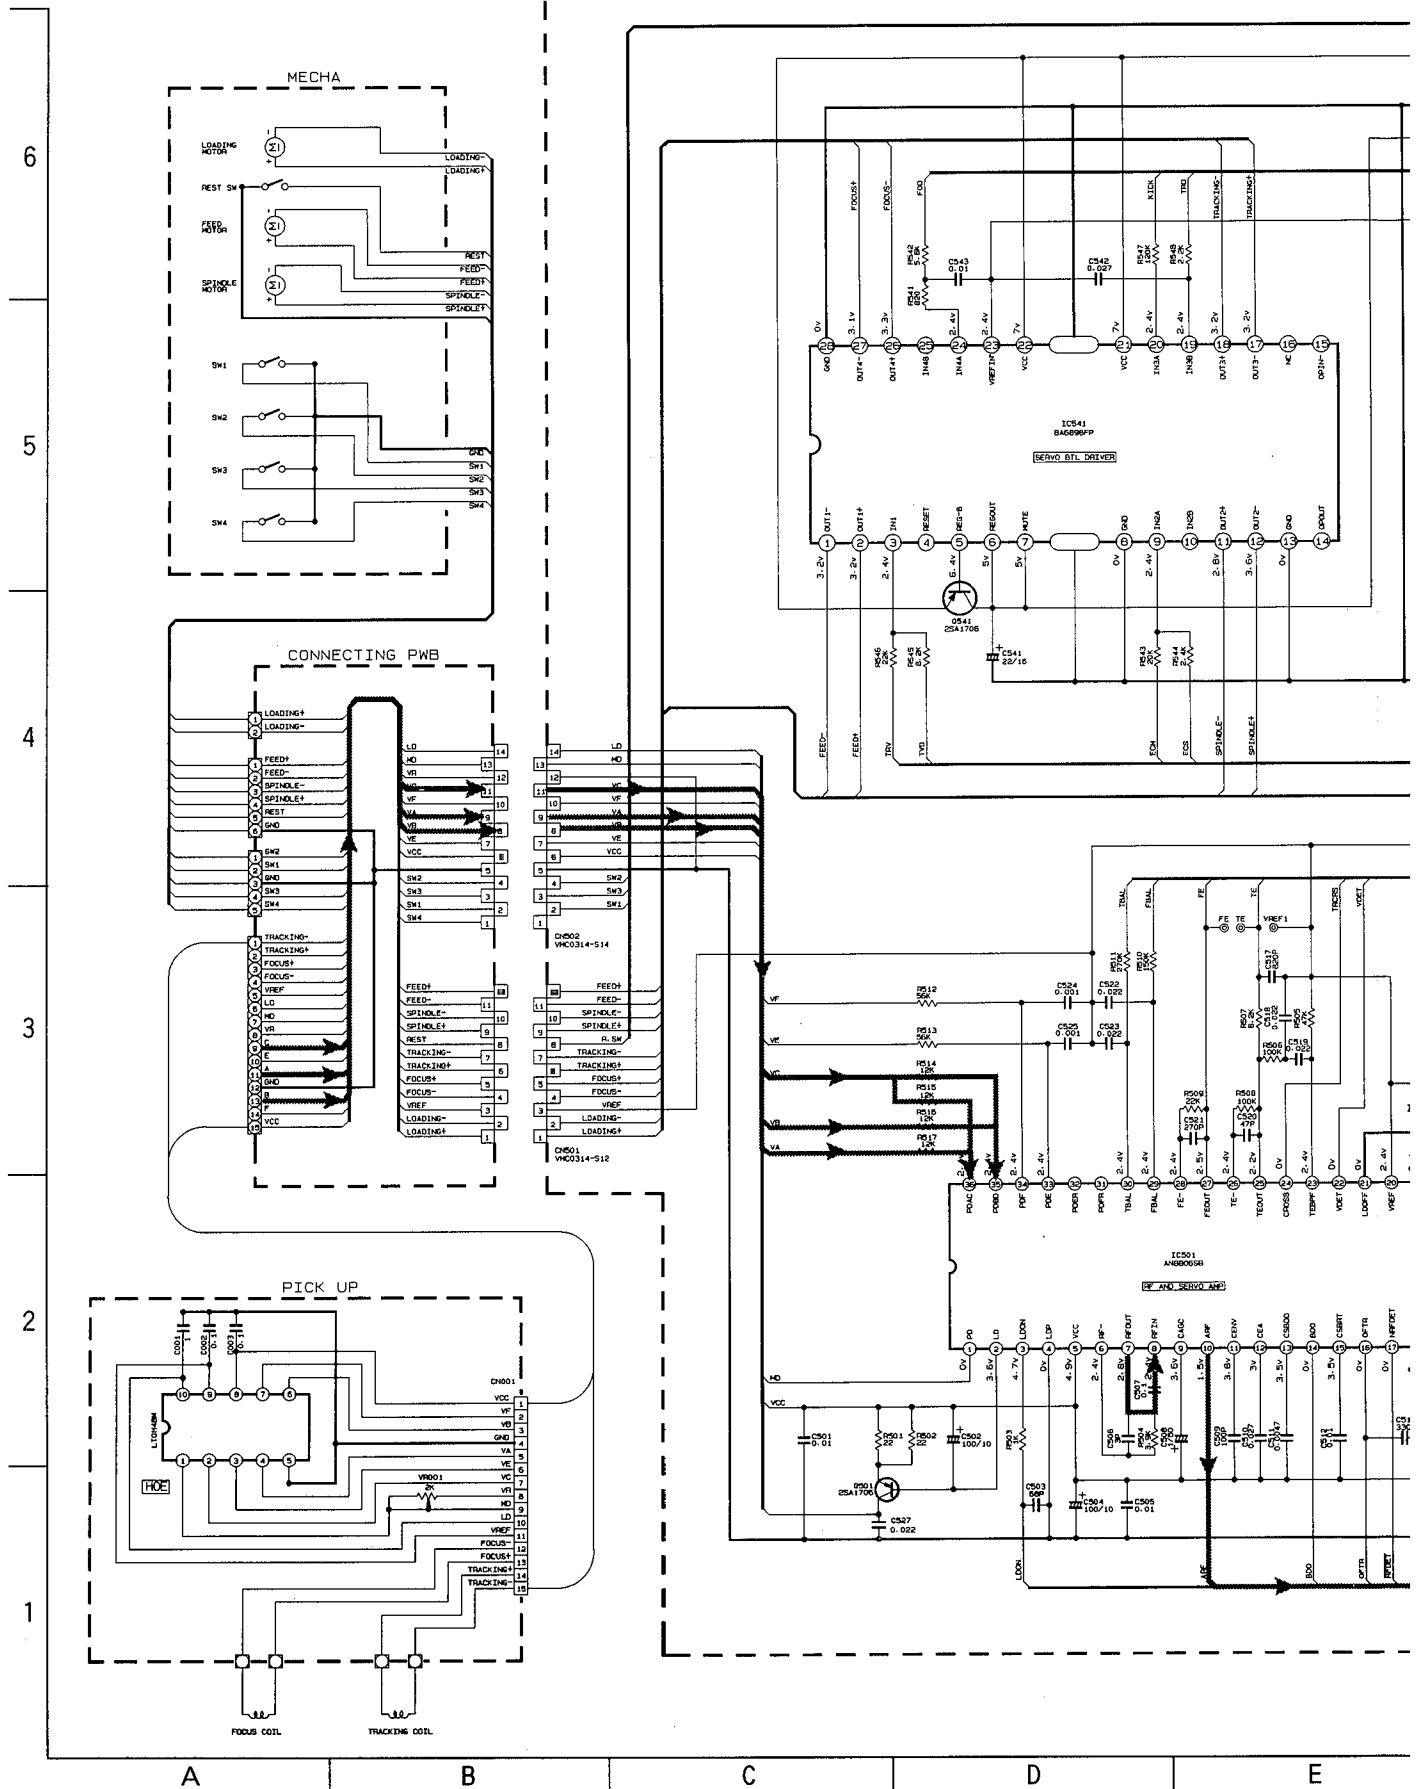

KD-S730  
KD-S630

CD SECTION

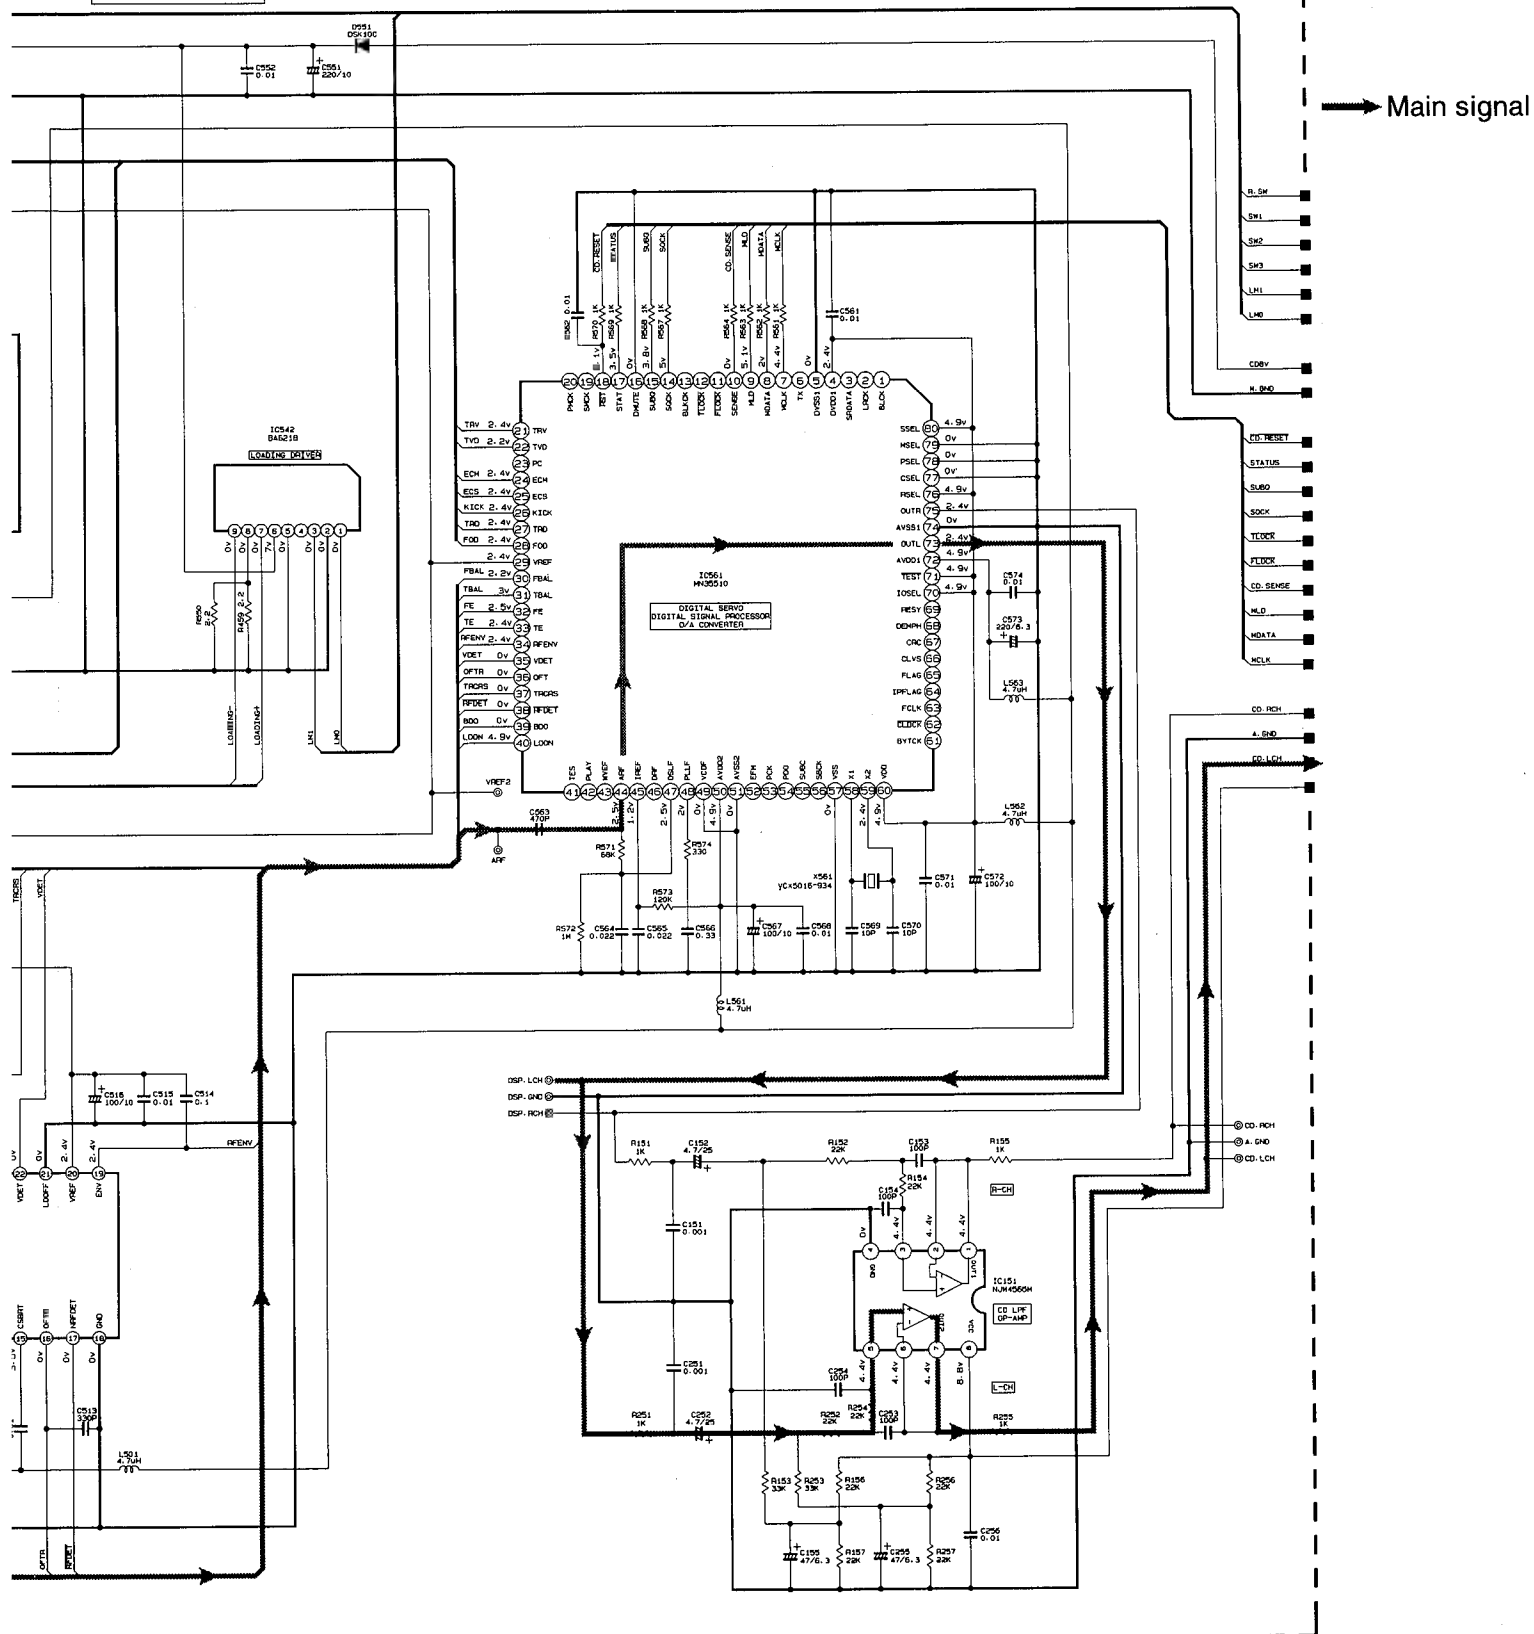


F


**G**

H

J

## 11

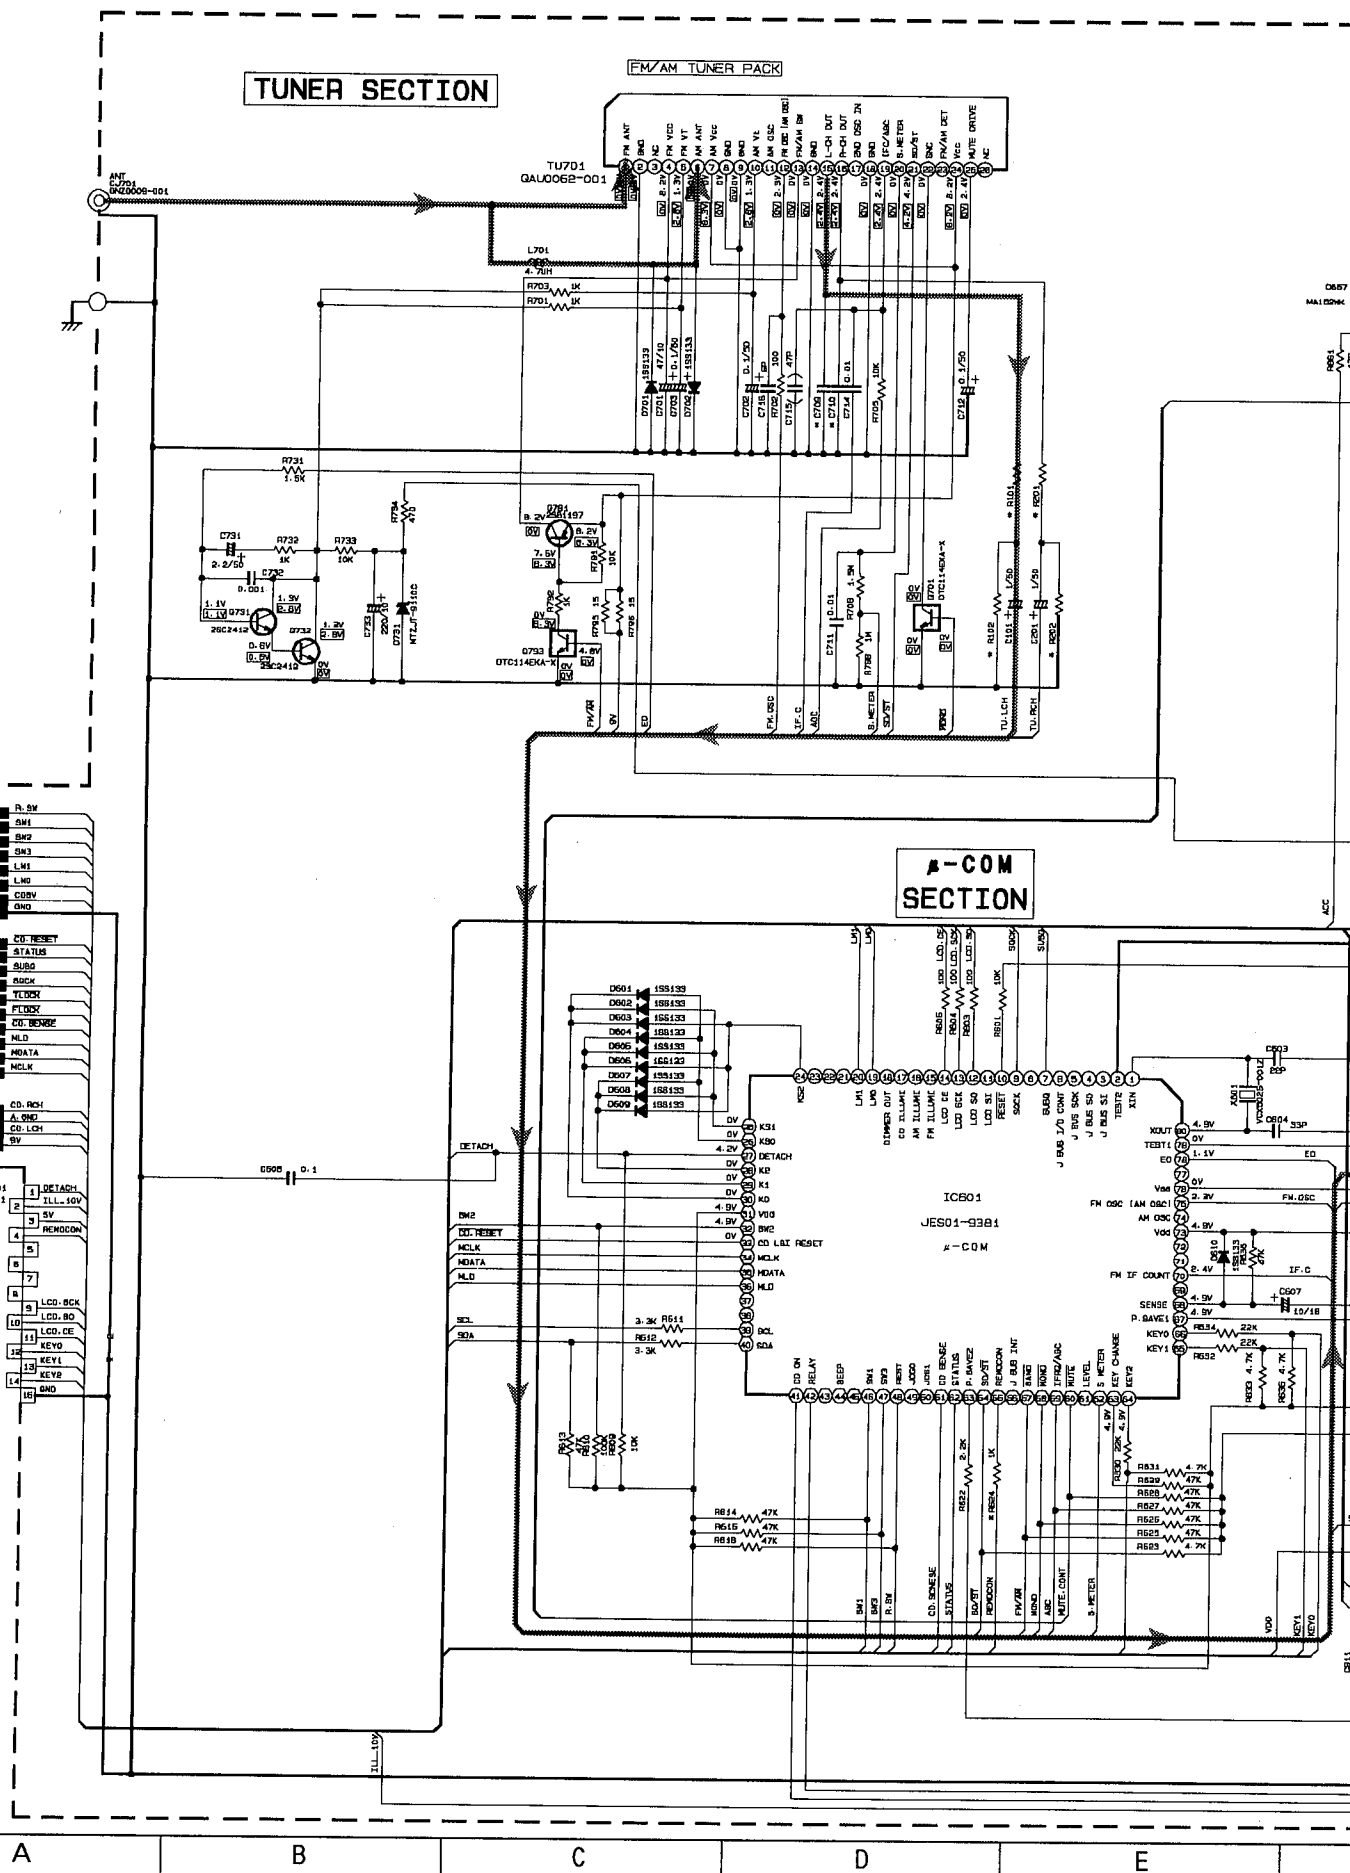


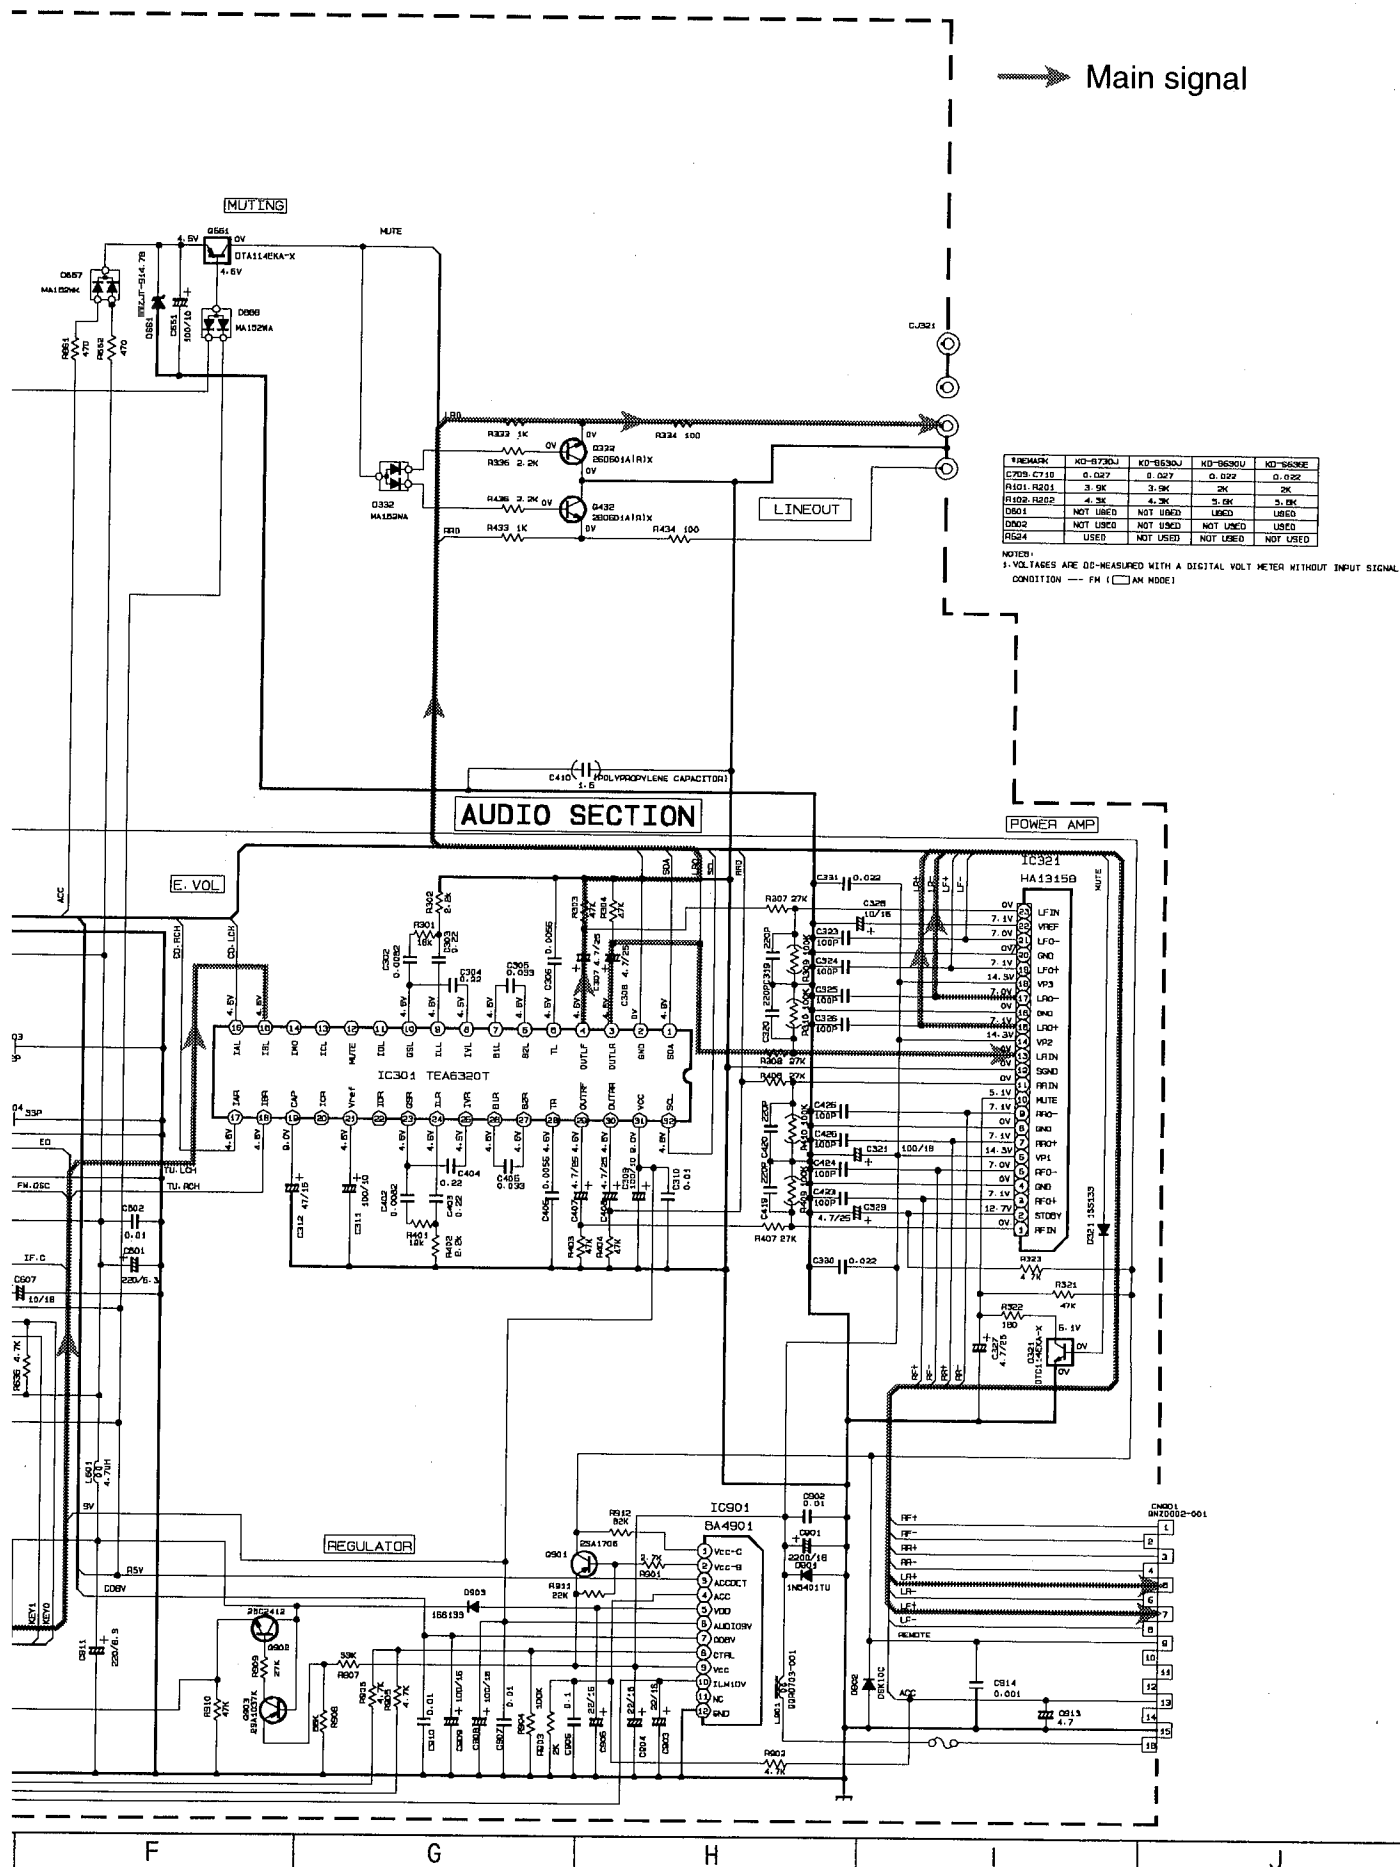

■ Main Board





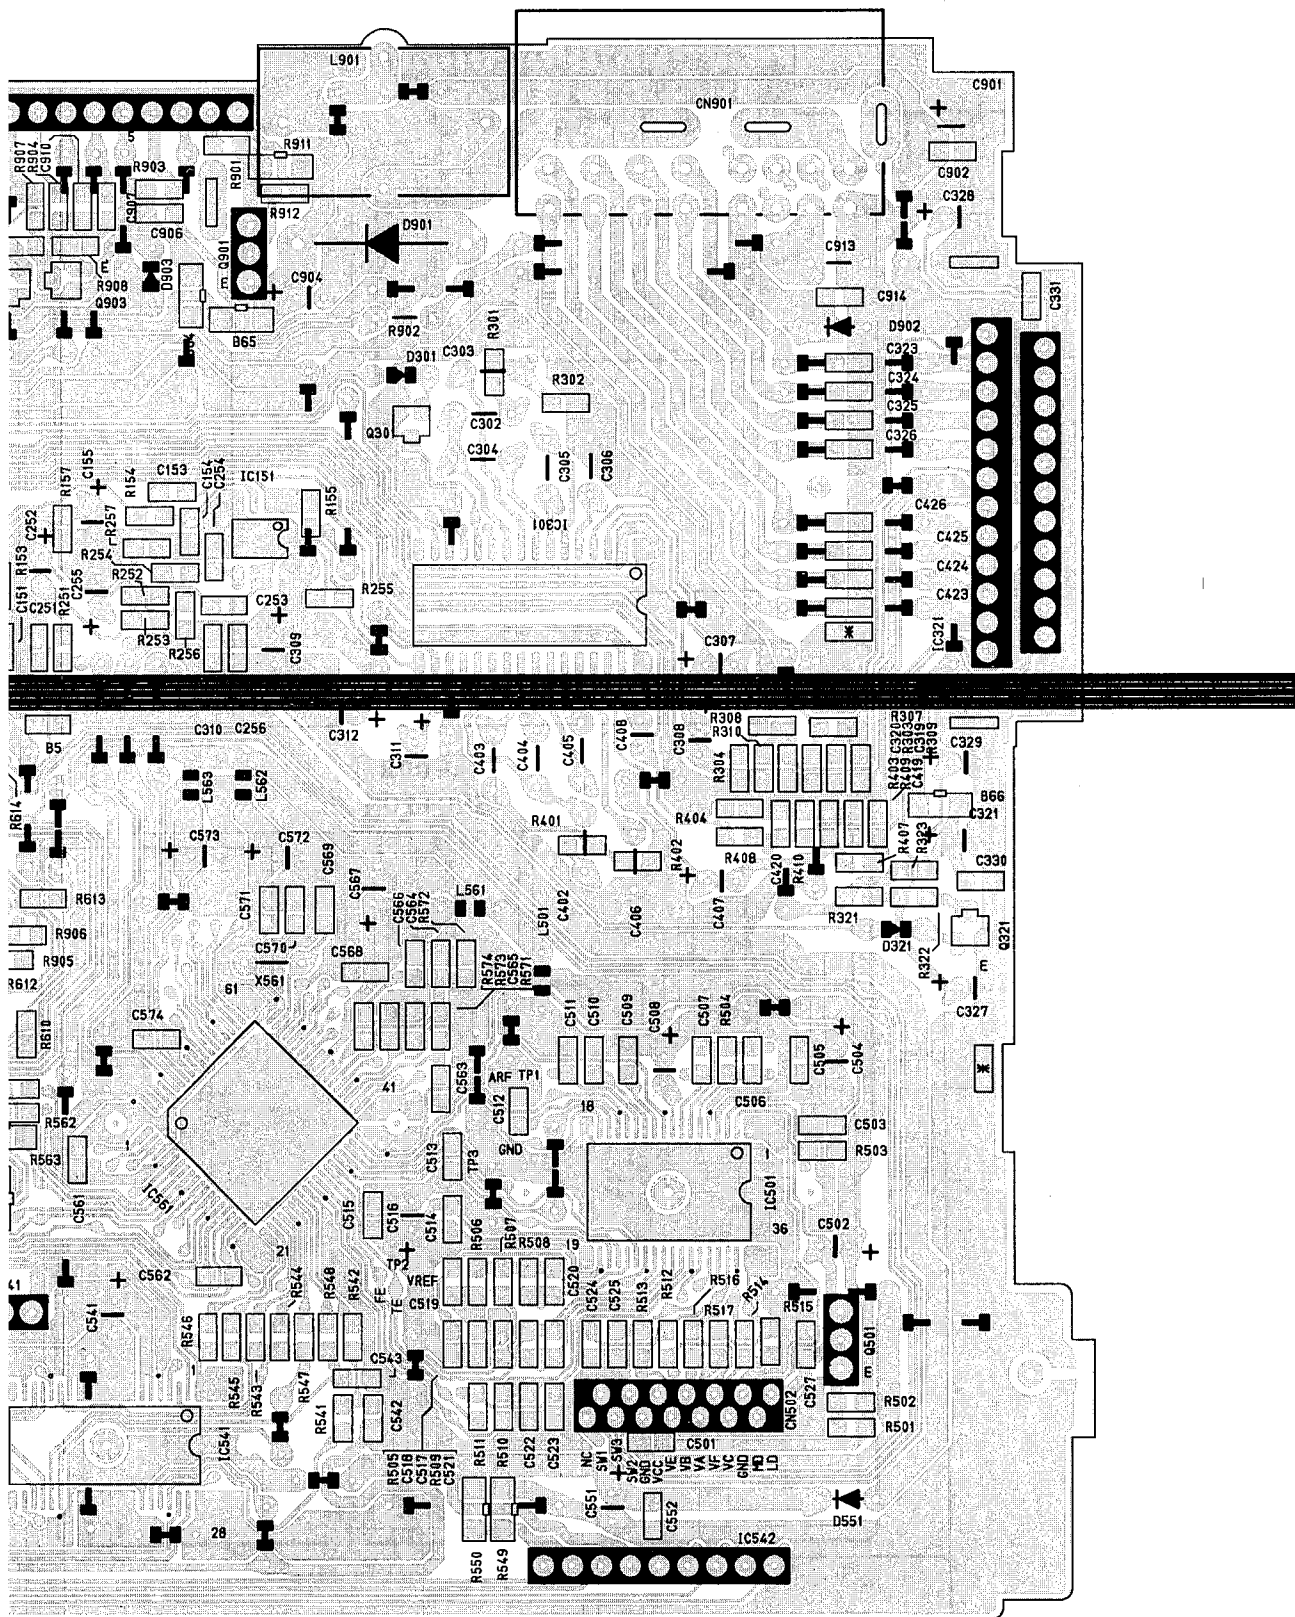

F

## G


H

1


J



■ Front Board

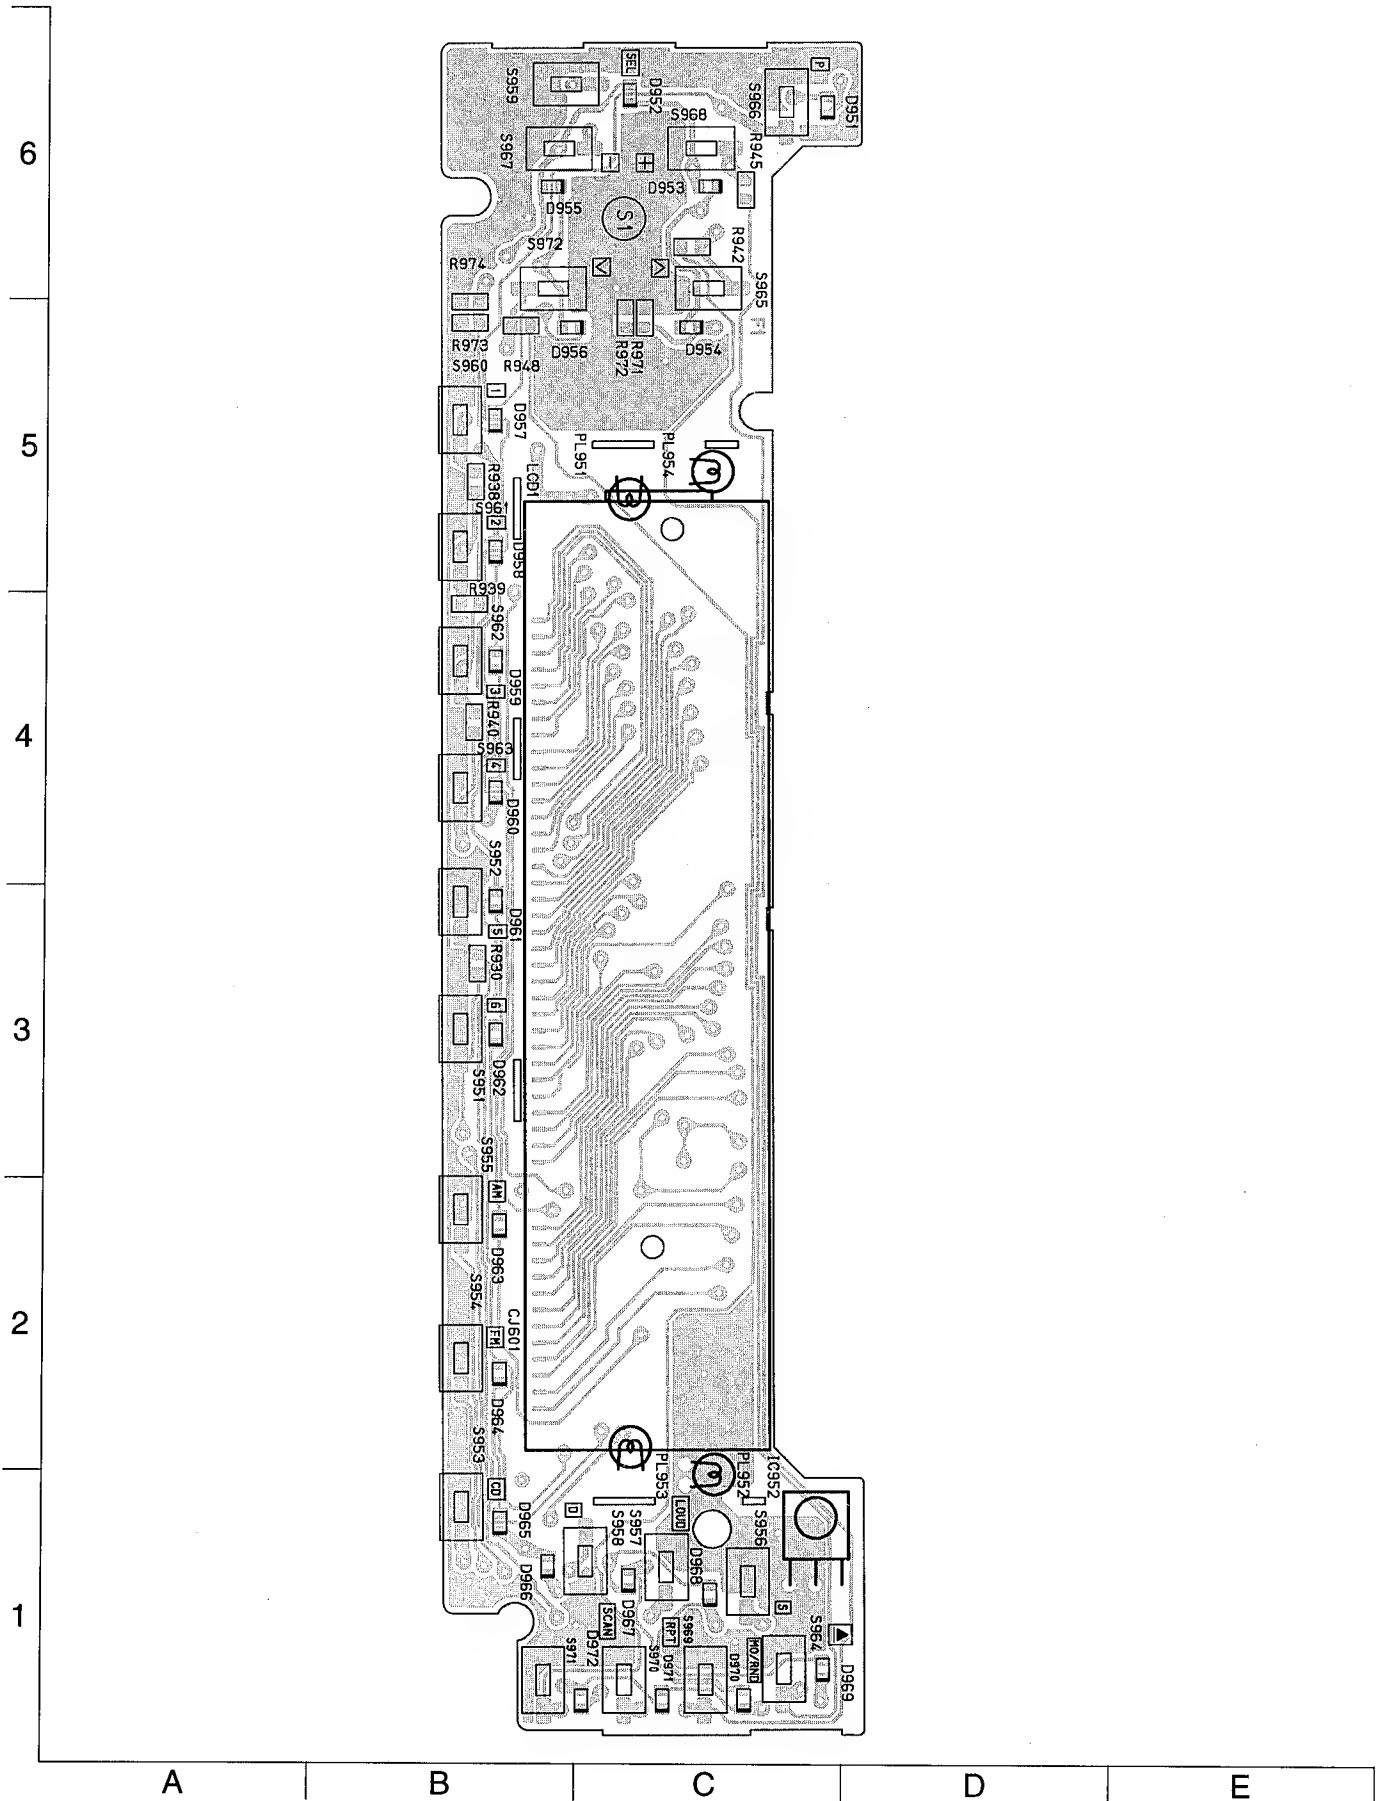

■ Front Board

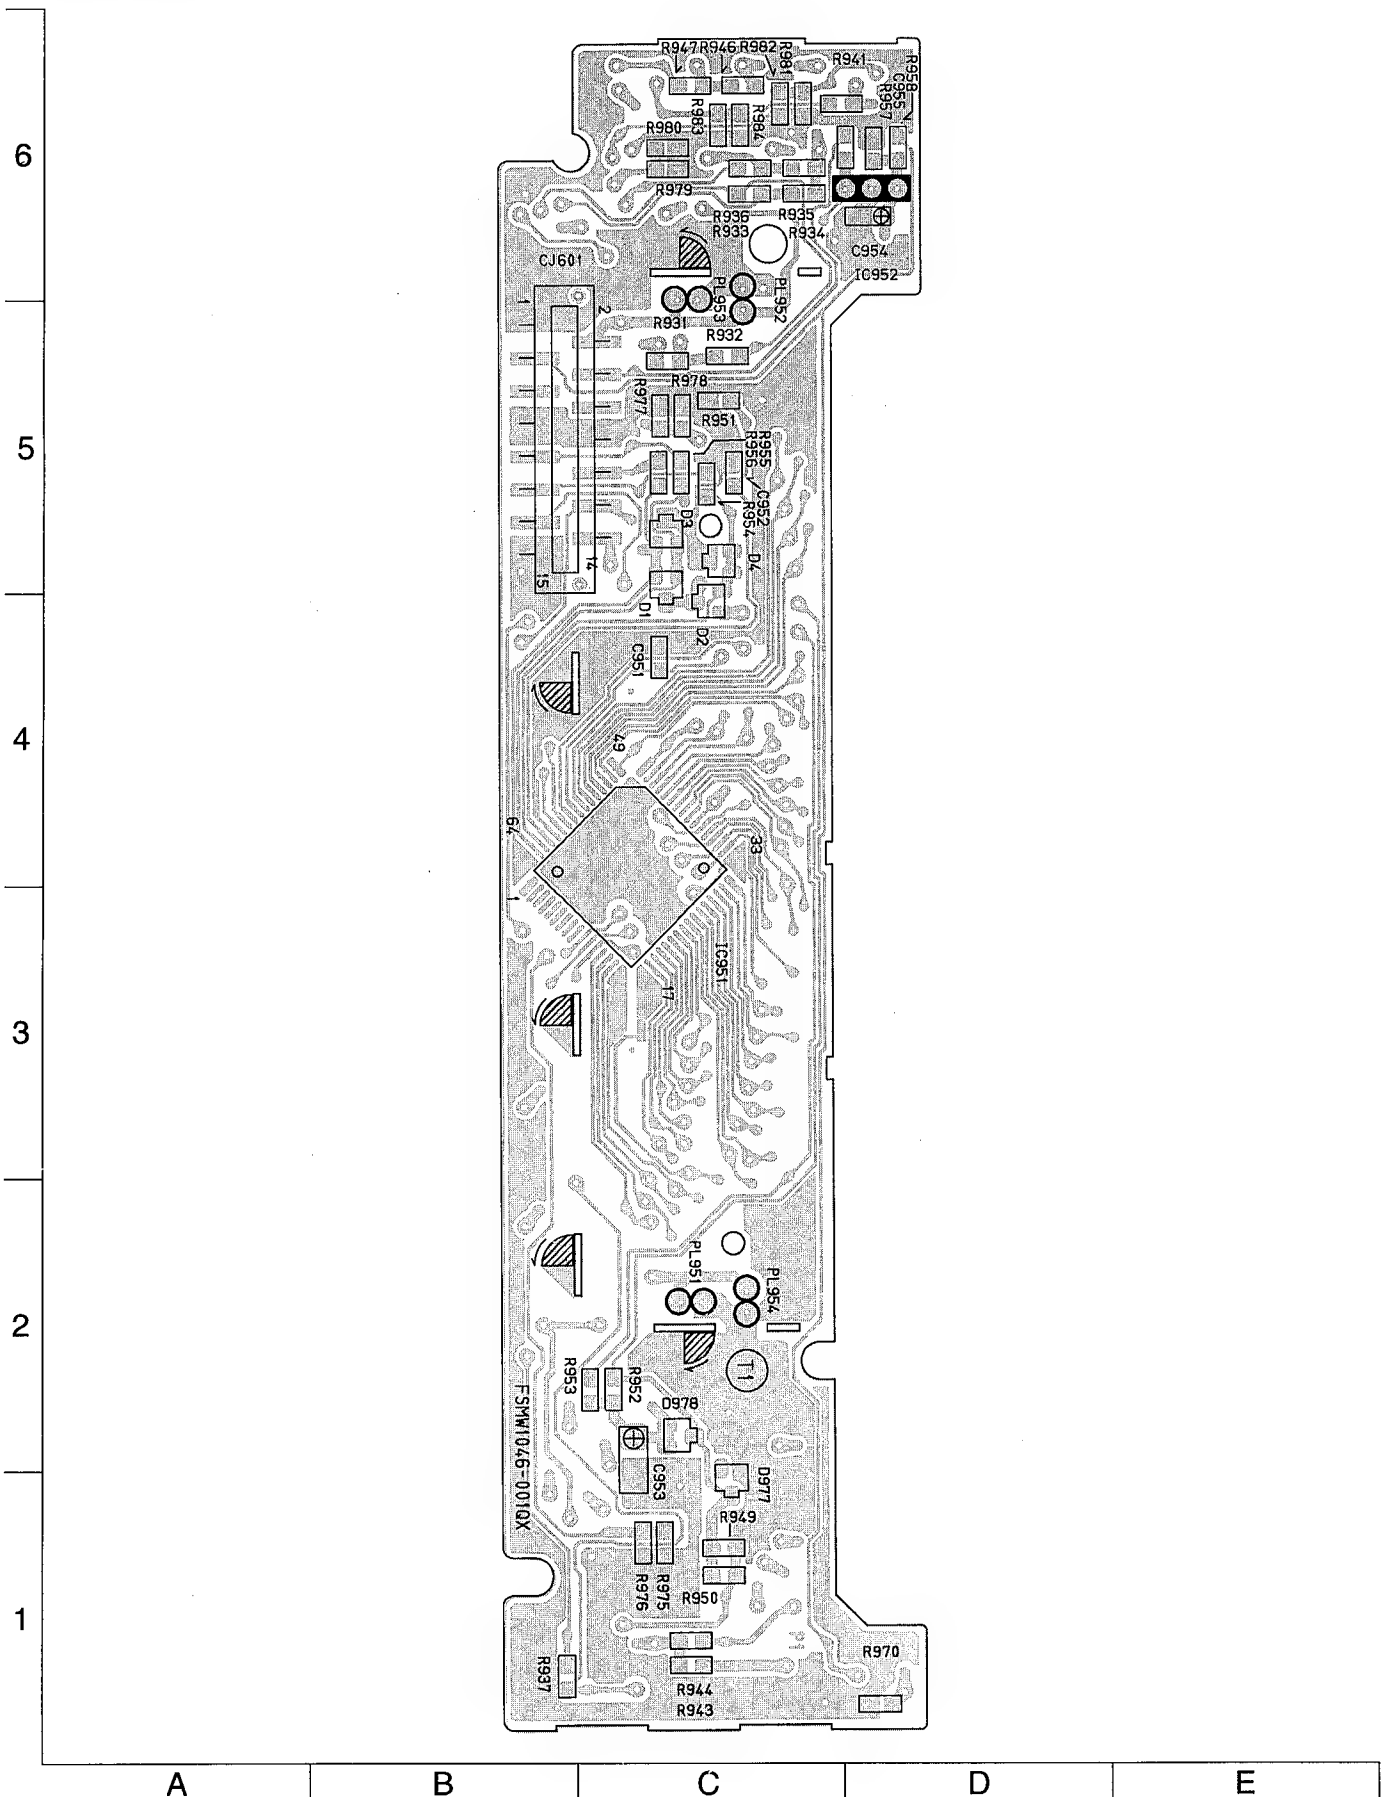

# PARTS LIST

[ KD-S730/KD-S630 ]

\* All printed circuit boards and its assemblies are not available as service parts.

## The Marks for Designated Areas


J ---- the U.S.A  
C ---- Canada

## - Contents -

General Exploded View and Parts List .....	3-2
CD Mechanism Ass'y and Parts List .....	3-4
Electrical Parts List	
Main P.C.B .....	3-7
Front P.C.B .....	3-10
Packing Materials and Accessories List .....	3-12

General Exploded View and Parts List

Block No. M1MM

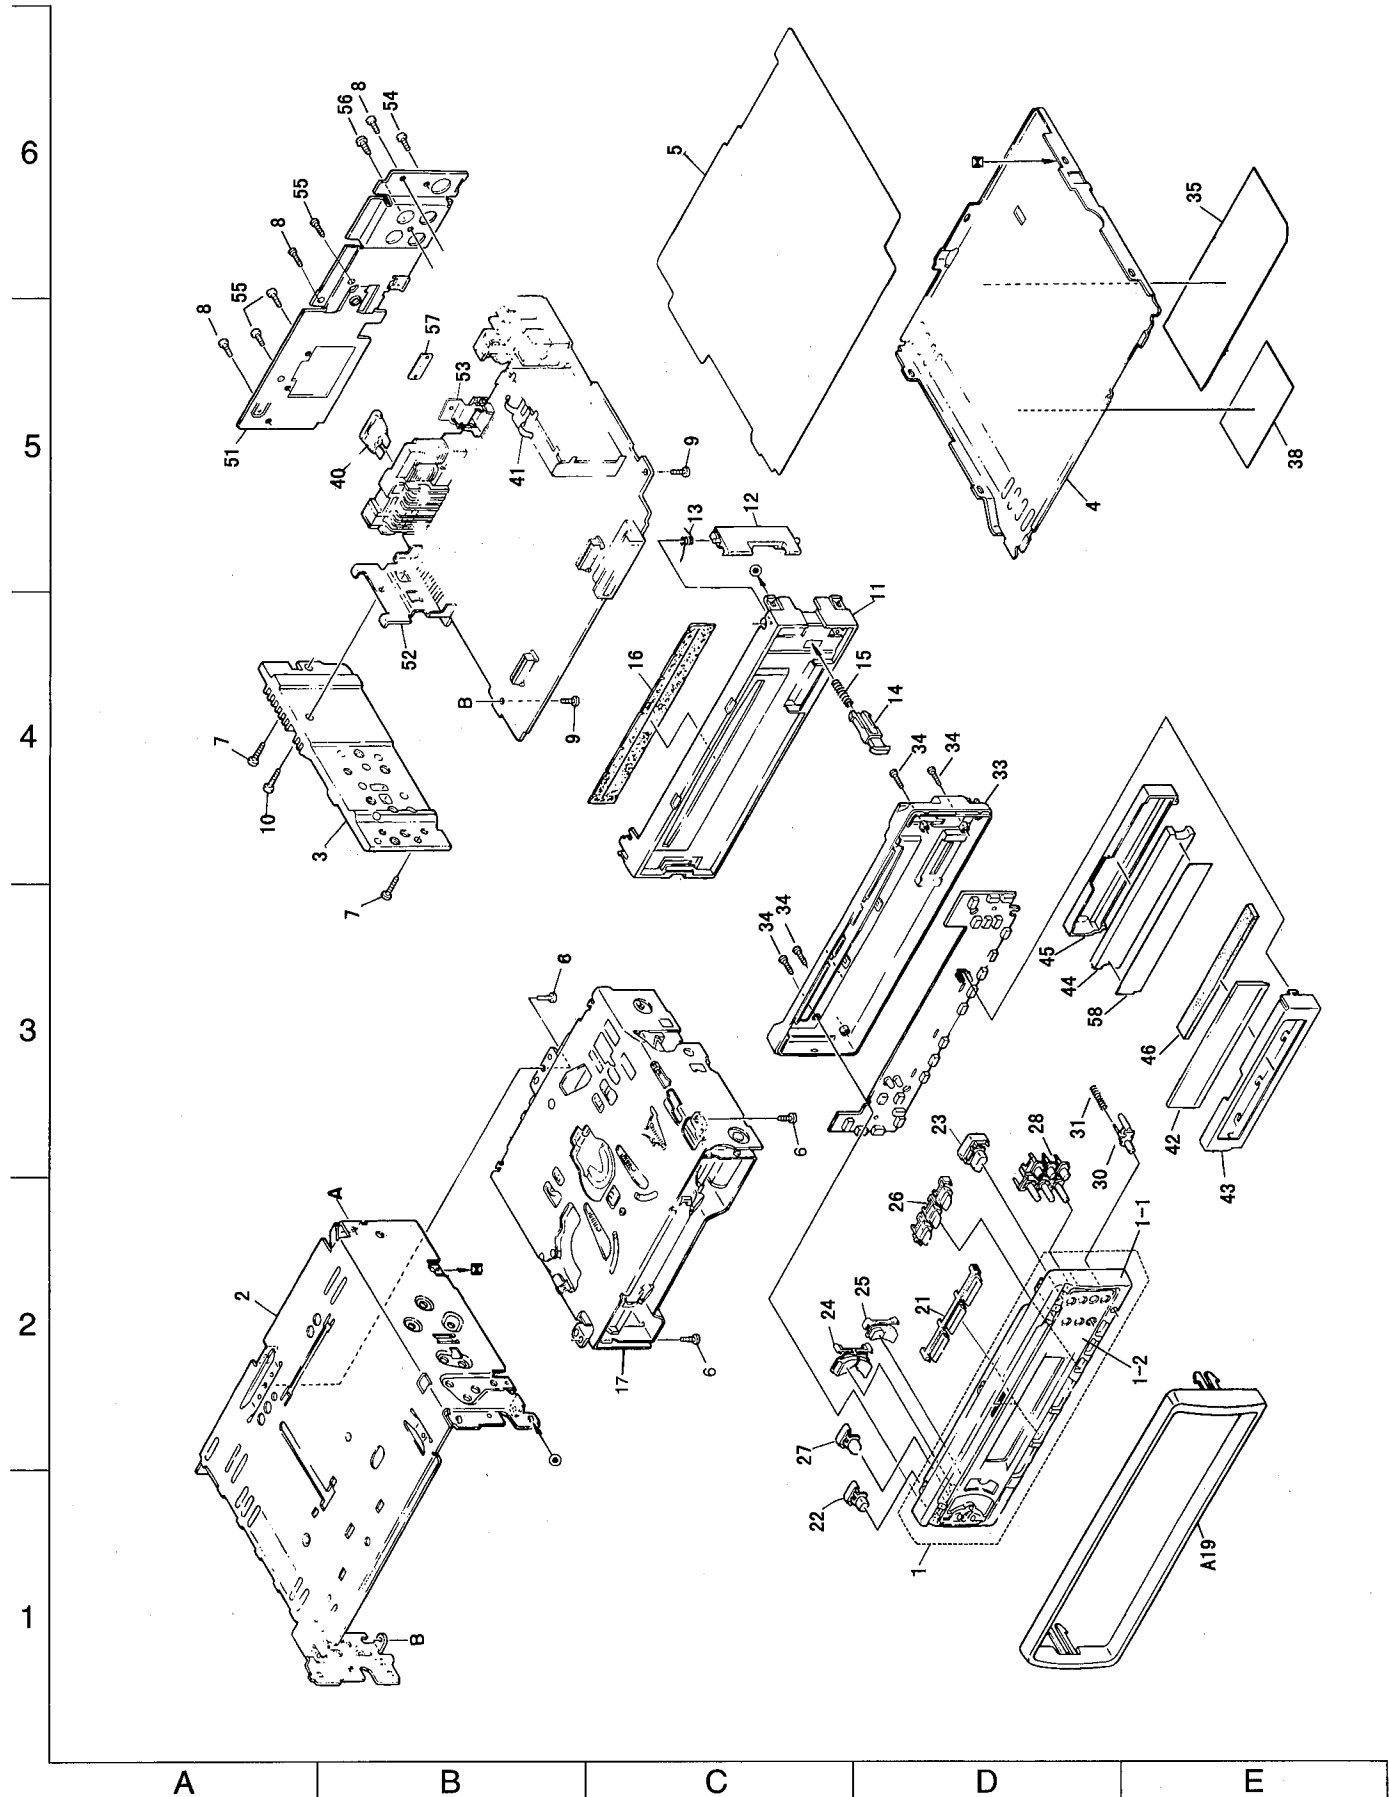


## ■ Parts List

BLOCK NO. M1MM

△	REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
	1	ZCKDS630J-NPA	NOSE PIECE	KD-S630 ONLY	1		
		ZCKDS730J-NPA	NOSE PIECE	KD-S730 ONLY	1		
	1-1	FSJC1034-001	FRONT PANEL		1		
	1-2	FSJD3010-00A	FINDER ASS'Y	KD-S730 ONLY	1		
		FSJD3010-00C	FINDER ASS'Y	KD-S630 ONLY	1		
	2	FSJC1029-001	TOP CHASSIS		1		
	3	FSMH3001-002	HEAT SINK		1		
	4	FSKM3011-001	BOTTOM COVER		1		
	5	FSMA3004-003	INSULATOR		1		
	6	SDST2604Z	SCREW	CHASSIS+MECHA B	3		
	7	FSKZ4005-001	SCREW	CHASSIS+SIDE PA	2		
	8	SDST2606Z	SCREW	CHASSIS+REAR BK	3		
	9	SDST2606Z	SCREW	CHASSIS+MAIN PW	2		
	10	FSKZ4005-001	SCREW	SIDE PANEL+IC B	1		
	11	FSJC2010-002	FRONT CHASSIS		1		
	12	FSKS3004-001	LOCK LEVER		1		
	13	FSKW4005-003	TORSION SPRING	FOR LOCK LEVEL	1		
	14	FSXP3026-002	RLS KNOB		1		
	15	FSKW3002-004	COMP.SPRING		1		
	16	FSPK3009-001	BLIND		1		
	17	-----	CD MECHA		1		
	21	FSXP2025-001	PRESET BUTTON		1		
	22	FSXP3044-001	POWER BUTTON		1		
	23	FSXP3043-001	EJECT BUTTON		1		
	24	FSXP2033-001	+/- BUTTON		1		
	25	FSXP2026-002	UP/DOWN BUTTON		1		
	26	FSXP2029-002	D.FUNC BUTTON		1		
	27	FSXP3040-001	SELECT BUTTON		1		
	28	FSXP2030-001	PUSH BUT(SLANT)	6-IN-1	1		
	30	FSXP3049-001	DETACH BUTTON		1		
	31	FSKW3002-008	COMP.SPRING	FOR DETACH BUTT	1		
	33	FSJC1035-001	REAR COVER		1		
	34	VKZ4777-001	MINI SCREW		4		
	35	FSYN3032-006	NAME PLATE	KD-S730 ONLY	1		
		FSYN3038-006	NAME PLATE	KD-S630 J/C	1		
		FSYN3038-007	NAME PLATE	KD-S630 U ONLY	1		
	38	VND4922-007	CAUTION LABEL	FOR USA ONLY	1	J	
	40	QMFZ021-100-J1	FUSE		1		
	41	VMA4652-001SS	EARTH PLATE		1		
	42	QLD0032-001	LCD MODULE		1		
	43	FSYH3013-001	LCD CASE		1		
	44	FSJK3011-001	LCD LENS		1		
	45	FSKS3006-001	LENS CASE		1		
	46	QNZ0089-001	RUBBER CONNECT		1		
	51	FSKM3010-003	REAR BRACKET		1		
	52	FSKL4018-00A	IC BRACKET		1		
	53	FSKL4015-001	REG BRACKET		1		
	54	SDST2606Z	SCREW	"FOR ANT"	1		
	55	SDST2606Z	SCREW	"16P & TR BRACK	3		
	56	SDSF3006Z	SCREW	"LINE OUT"	1		
	57	FSKL4014-001	HEAT SINK		1		
	58	FSYH4048-001	SHEET		1		

CD Mechanism M 2 M M

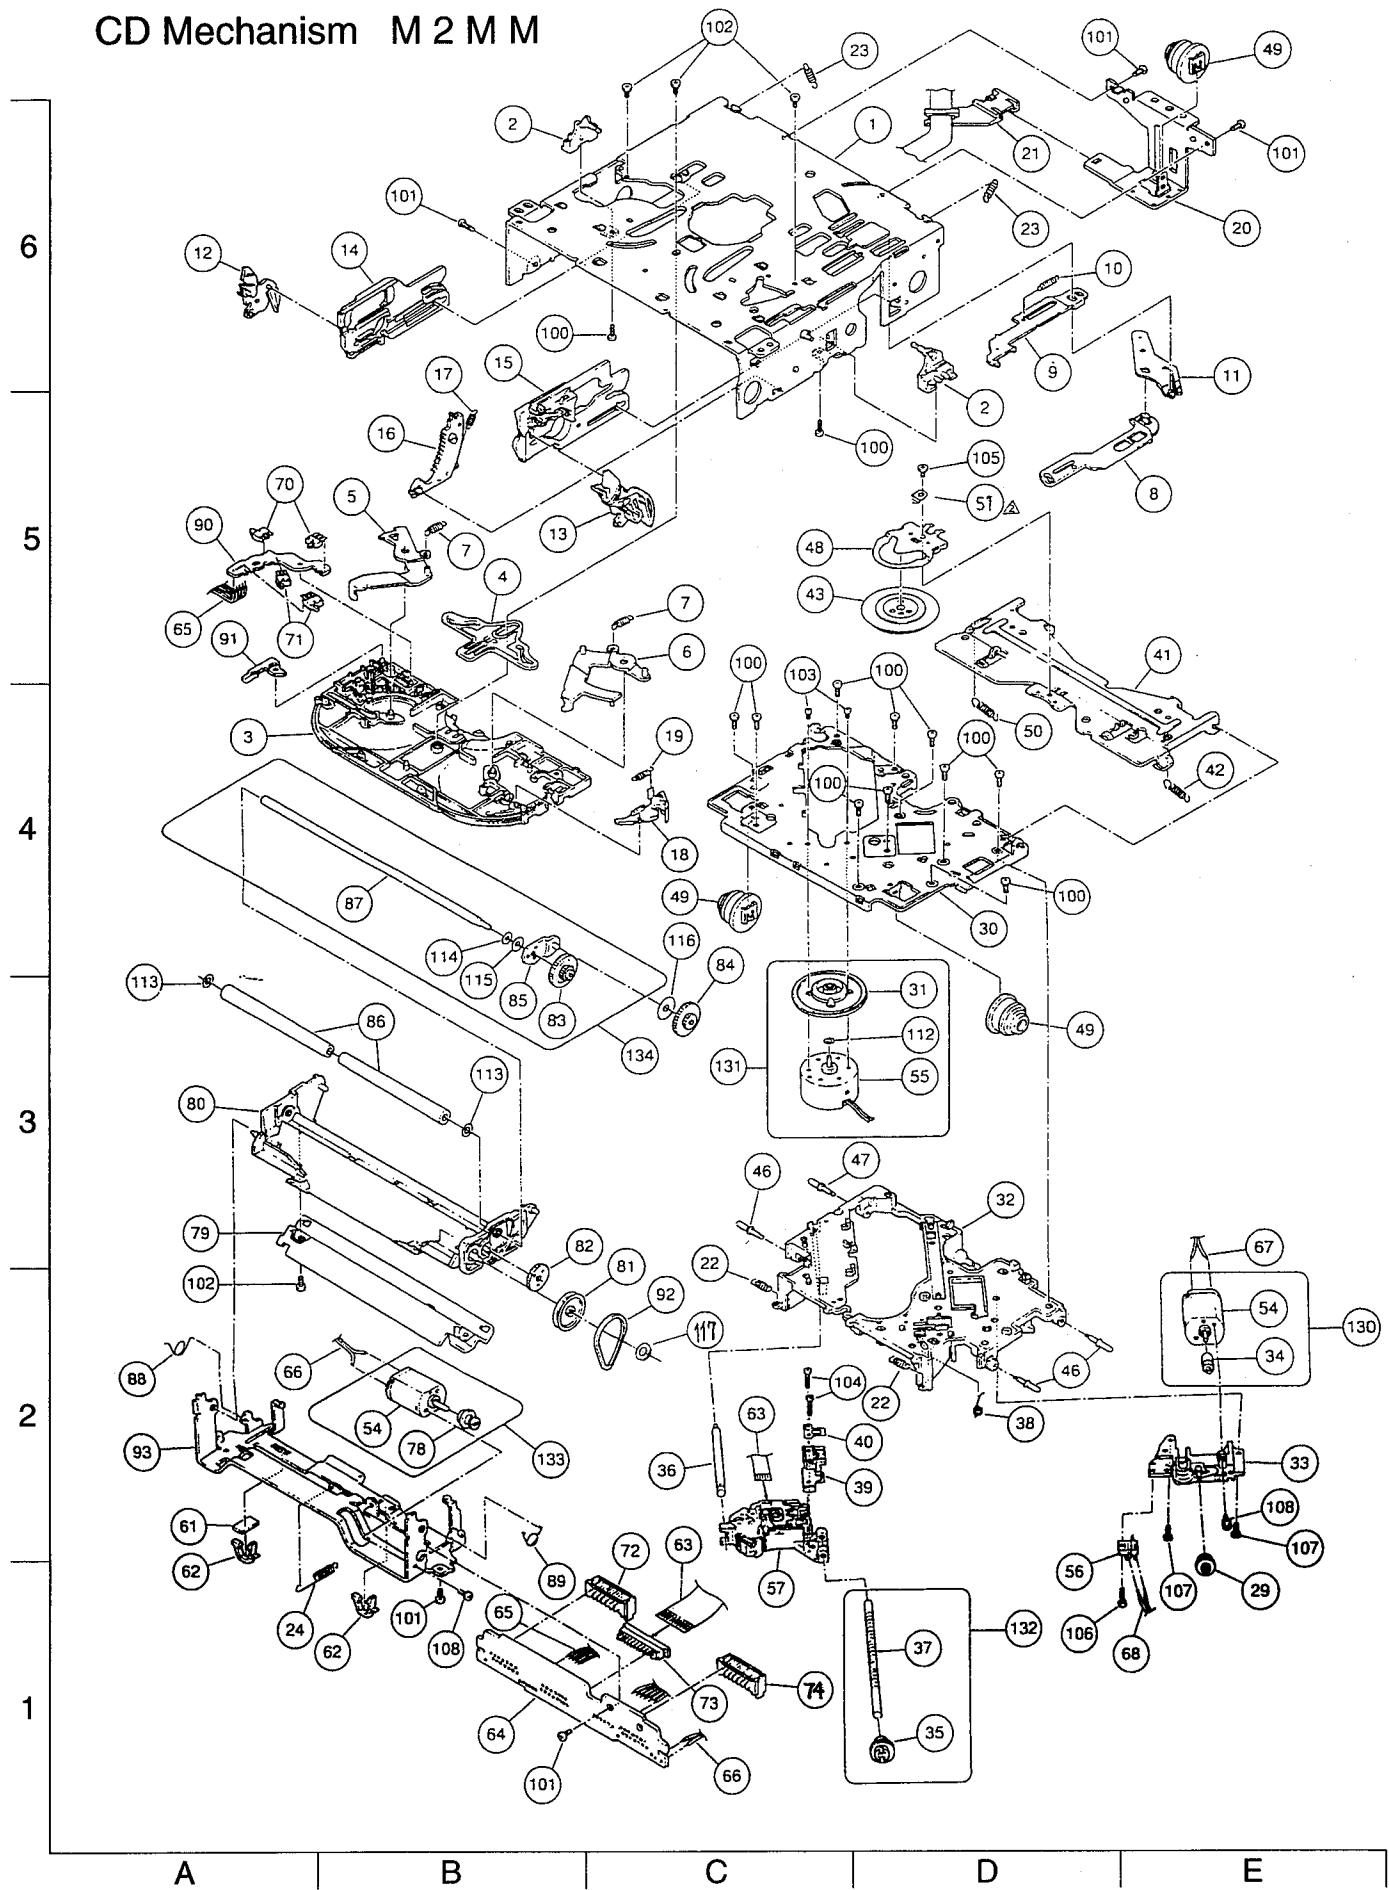



## ■ Parts List

BLOCK NO. M2MM

△	REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
	1	30310101T	FRAME		1		
	2	30310103T	DANPER PIN		2		
	3	30310107T	UPPER PLATE		1		
	4	30310108T	SEL STOP PLATE		1		
	5	30310109T	SEL ARM (L)		1		
	6	30310110T	SEL ARM (R)		1		
	7	30310133T	S ARM SPRING		2		
	8	30310112T	TRIG LEVER		1		
	9	30310114T	TRIG PLATE		1		
	10	30310115T	TRIG PL SPRING		1		
	11	30310116T	TRIG ARM		1		
	12	30310117T	FIX ARM (L)		1		
	13	30310118T	FIX ARM (R)		1		
	14	30310119T	FIX PLATE (L)		1		
	15	30310120T	FIX PLATE (R)		1		
	16	30310121T	LDG GEAR (6)		1		
	17	30310122T	LDG GEAR (6)SP		1		
	18	30310124T	S.L ARM		1		
	19	30310125T	S.L ARM SPRING		1		
	20	30310126T	REAR DAM BKT(J)		1		
	21	30310127T	FPC GUIDE		1		
	22	30310128T	HUNG UP SP (F)		2		
	23	30310129T	HUNG UP SP (R)		2		
	24	30310130T	LEVEL SPRING		1		
	29	30300510T	PU GEAR(B)		1		
	30	30310501T	TTB		1		
	31	-----	TURN TABLE	D	1		
	32	30310503T	FMB		1		
	33	30310504T	FD GR BRACKET		1		
	34	-----	FD GEAR (A)		1		
	35	-----	FD GEAR (C)	D	1		
	36	30310538T	PU SHAFT		1		
	37	-----	FD SCREW	D	1		
	38	30310510T	THRUST SPRING		1		
	39	30310511T	PU M NUT		1		
	40	30310512T	NUT PUSH SPR PL		1		
	41	30310513T	CLP ARM		1		
	42	30310514T	CLP ARM SPRING		1		
	43	30310515T	CLAMPER		1		
	46	30310521T	LOCK PIN		3		
	47	30310522T	LOCK PIN BL		1		
	48	30310523T	CLAMPER PLATE		1		
	49	30310524T	DAMPER (J)		3		
	50	30310525T	CLP ARM SPR (L)		1		
	51	30310536T	STOPPER SPRING		1		
	54	-----	FEED MOTOR	FF030PK-09210	2		
	55	-----	SPINDLE MOTOR	D	1		
	56	64180404T	DET SWITCH	ESE11HS2	1		
	57	OPTIMA-720A1	CD.PICK UNIT		1		
	61	11050210T	FELT		1		
	62	19501403T	WIRE CLAMPER		2		
	63	30311019T	PICK UP FPC(J)		1		
	64	30311018T	CONNECTER PCB(J)		1		
	65	30311022T	WIRE (5P-J)		1		

BLOCK NO. M2MM

REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
66	30311023T	WIRE (LD-J)		1		
67	30311006T	WIRE (FD)		1		
68	30311007T	WIRE (RS)		1		
70	64180402T	DET SWITCH	ESE22MH1	2		
71	64180403T	DET SWITCH	ESE22MH3	2		
72	68150235T	CONNECTOR	TKC-F14P-J3	1		
73	68170224T	CONNECTOR(15P)	6208010115	1		
74	68150237T	CONNECTOR(12P)		1		
78	-----	LDG PULLEY	D	1		
79	30311105T	SOPPORT PLATE		1		
80	30311108T	GR MT BLK		1		
81	30311109T	LDG GEAR (2)		1		
82	30311110T	LDG GEAR (3)		1		
83	-----	LDG GEAR (4)	D	1		
84	30311112T	LDG GEAR (5)		1		
85	-----	LDG GEAR ARM	D	1		
86	30311114T	LDG ROLLER		2		
87	-----	LDG RLR SHAFT	D	1		
88	30311118T	L.P SPRING (L)		1		
89	30311119T	L.P SPRING (R)		1		
90	30311123T	SW PCB		1		
91	30311124T	SW ACTUATOR		1		
92	30311129T	LDG BELT		1		
93	30311130T	FRONT BRKT (J)		1		
100	9C0620503T	C B TAP SCREW	M2X5	12		
101	9C2020401T	C SCREW TS.G	M2X4	5		
102	9C4320403T	C B TAP SCREW	M2X4	4		
103	9C0117223T	SCREW	M1.7X2.2	2		
104	9C0317803T	C SCREW	M1.7X8	2		
105	9C4220201T	C TAP SCREW S3	M2X2	1		
106	9C4420003T	C TAP SCREW B3	M2X10	1		
107	9C4420503T	C TAP SCREW B3	M2X5	2		
108	9P0220031T	TAMS SCREW	M2X4	2		
112	-----	POLY WASHER	D	1		
113	9W0330276T	POLY WASHER	2.9X5X0.3	2		
114	-----	WAVE WASHER	D	1		
115	-----	LUMILAR WASHER	D	1		
116	9W0725030T	LUMILAR WASHER		1		
117	9W0640030T	WASHER		1		
130	303105301T	FFED MOTOR ASSY	NO.34,54	1		
131	303105302T	SP MOTOR ASSY	NO.31,55,112	1		
132	303105303T	FEED SCREW ASSY	NO.35,37	1		
133	303111301T	LDG MOTOR ASSY	NO.54,78	1		
134	303111302T	RDG RLR SFT ASY	NO.83,85,87 NO.114,115	1		

# ■ Electrical Parts List (Main P. C. B.)

BLOCK NO. 01					
A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	B3341	QAN0009-001Z	BUZZER	KD-S730 ONLY	
	C 101	QER41HM-105	E-CAPACITOR	1.0MF 20% 50V	
	C 151	NCS21HJ-102AY	C-CAPACITOR	1000PF 5% 50V	
	C 152	QEK41EM-475	E-CAPACITOR	4.7MF 20% 25V	
	C 153	NCI21CH-101AY	C-CAPACITOR	100PF +50:-10%	
	C 154	NCI21CH-101AY	C-CAPACITOR	100PF +50:-10%	
	C 155	QEKFOJM-476Z	E-CAPACITOR	47MF 20% 6.3V	
	C 201	QER41HM-105	E-CAPACITOR	1.0MF 20% 50V	
	C 251	NCS21HJ-102AY	C-CAPACITOR	1000PF 5% 50V	
	C 252	QEK41EM-475	E-CAPACITOR	4.7MF 20% 25V	
	C 253	NCI21CH-101AY	C-CAPACITOR	100PF +50:-10%	
	C 254	NCI21CH-101AY	C-CAPACITOR	100PF +50:-10%	
	C 255	QEKFOJM-476Z	E-CAPACITOR	47MF 20% 6.3V	
	C 256	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V	
	C 302	QFLA1HJ-822ZM	M-CAPACITOR	8200PF 5% 50V	
	C 303	QFV11HJ-154AZM	FILM CAPACITOR	.15MF 5% 50V	J-C
	C 303	QFV41HJ-224	FILM CAPACITOR	.22MF 5% 50V	U
	C 304	QFV41HJ-224	FILM CAPACITOR	.22MF 5% 50V	
	C 305	QFV41HJ-333	FILM CAPACITOR	.033MF 5% 50V	
	C 306	QFLA1HJ-562ZM	M-CAPACITOR	5600PF 5% 50V	
	C 307	QEK41EM-475	E-CAPACITOR	4.7MF 20% 25V	
	C 308	QEK41EM-475	E-CAPACITOR	4.7MF 20% 25V	
	C 309	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V	
	C 310	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 50V	
	C 311	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V	
	C 312	QEK41CM-476	E-CAPACITOR	47MF 20% 16V	
	C 319	NCS21HJ-221AY	C-CAPACITOR	220PF 5% 50V	
	C 320	NCS21HJ-221AY	C-CAPACITOR	220PF 5% 50V	
	C 321	QERFIAM-107ZM	E-CAPACITOR	100MF 20% 16V	
	C 323	NCS21HJ-101AY	C-CAPACITOR	100PF 5% 50V	
	C 324	NCS21HJ-101AY	C-CAPACITOR	100PF 5% 50V	
	C 325	NCS21HJ-101AY	C-CAPACITOR	100PF 5% 50V	
	C 326	NCS21HJ-101AY	C-CAPACITOR	100PF 5% 50V	
	C 327	QEK41EM-475	E-CAPACITOR	4.7MF 20% 25V	
	C 328	QEK41CM-106	E-CAPACITOR	10MF 20% 16V	
	C 329	QEK41EM-475	E-CAPACITOR	4.7MF 20% 25V	
	C 330	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V	
	C 331	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V	
	C 341	QERFIAM-104ZN	E-CAPACITOR	KD-S730 ONLY	
	C 402	QFLA1HJ-822ZM	M-CAPACITOR	8200PF 5% 50V	
	C 403	QFV11HJ-154AZM	FILM CAPACITOR	.15MF 5% 50V	J-C
	C 403	QFV41HJ-224	FILM CAPACITOR	.22MF 5% 50V	U
	C 404	QFV41HJ-224	FILM CAPACITOR	.22MF 5% 50V	
	C 405	QFV41HJ-333	FILM CAPACITOR	.033MF 5% 50V	
	C 406	QFLA1HJ-562ZM	M-CAPACITOR	5600PF 5% 50V	
	C 407	QEK41EM-475	E-CAPACITOR	4.7MF 20% 25V	
	C 408	QEK41EM-475	E-CAPACITOR	4.7MF 20% 25V	
	C 419	NCS21HJ-221AY	C-CAPACITOR	220PF 5% 50V	
	C 420	NCS21HJ-221AY	C-CAPACITOR	220PF 5% 50V	
	C 423	NCS21HJ-101AY	C-CAPACITOR	100PF 5% 50V	
	C 424	NCS21HJ-101AY	C-CAPACITOR	100PF 5% 50V	
	C 425	NCS21HJ-101AY	C-CAPACITOR	100PF 5% 50V	
	C 426	NCS21HJ-101AY	C-CAPACITOR	100PF 5% 50V	
	C 501	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V	
	C 502	QER41AM-107	E-CAPACITOR	100MF 20% 10V	U

BLOCK NO. 03						BLOCK NO. 04					
A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX	A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	C 502	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V	J-C		C 502	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V	J-C
	C 503	NCS21HJ-680AY	C-CAPACITOR	68PF 5% 50V			C 503	NCS21HJ-680AY	C-CAPACITOR	68PF 5% 50V	
	C 504	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V			C 504	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V	
	C 505	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V			C 505	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V	
	C 506	NCI21CH-3R0AY	C-CAPACITOR	3.0PF +50:-10%			C 506	NCI21CH-3R0AY	C-CAPACITOR	3.0PF +50:-10%	
	C 507	NCB21HK-104	C-CAPACITOR	.10MF 10% 25V			C 507	NCB21HK-104	C-CAPACITOR	.10MF 10% 25V	
	C 508	QEK41HM-105	E-CAPACITOR	1.0MF 20% 50V		C 508	QEK41HM-105	E-CAPACITOR	1.0MF 20% 50V		
	C 509	NCI21CH-101AY	C-CAPACITOR	100PF +50:-10%		C 509	NCI21CH-101AY	C-CAPACITOR	100PF +50:-10%		
	C 510	NCB21HK-273AY	C-CAPACITOR	.027MF 10% 50V		C 510	NCB21HK-273AY	C-CAPACITOR	.027MF 10% 50V		
	C 511	NCB21HK-472AY	C-CAPACITOR	4700PF 10% 50V		C 511	NCB21HK-472AY	C-CAPACITOR	4700PF 10% 50V		
	C 512	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 50V		C 512	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 50V		
	C 513	NCI21CH-331AY	C-CAPACITOR	330PF +50:-10%		C 513	NCI21CH-331AY	C-CAPACITOR	330PF +50:-10%		
	C 514	NCB21HK-104	C-CAPACITOR	.10MF 10% 25V		C 514	NCB21HK-104	C-CAPACITOR	.10MF 10% 25V		
	C 515	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 515	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 516	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V		C 516	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V		
	C 517	NCS21HJ-821AY	C-CAPACITOR	820PF 5% 50V		C 517	NCS21HJ-821AY	C-CAPACITOR	820PF 5% 50V		
	C 518	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		C 518	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		
	C 519	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		C 519	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		
	C 520	NCI21CH-470AY	C-CAPACITOR	47PF +50:-10% 1		C 520	NCI21CH-470AY	C-CAPACITOR	47PF +50:-10% 1		
	C 521	NCS21HJ-271AY	C-CAPACITOR	270PF 5% 50V		C 521	NCS21HJ-271AY	C-CAPACITOR	270PF 5% 50V		
	C 522	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		C 522	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		
	C 523	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		C 523	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		
	C 524	NCB21HK-102AY	C-CAPACITOR	1000PF 10% 50V		C 524	NCB21HK-102AY	C-CAPACITOR	1000PF 10% 50V		
	C 525	NCB21HK-102AY	C-CAPACITOR	1000PF 10% 50V		C 525	NCB21HK-102AY	C-CAPACITOR	1000PF 10% 50V		
	C 527	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 25V		C 527	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 25V		
	C 541	QEK41CM-226	E-CAPACITOR	22MF 20% 16V		C 541	QEK41CM-226	E-CAPACITOR	22MF 20% 16V		
	C 542	NCB21HK-273AY	C-CAPACITOR	.027MF 10% 50V		C 542	NCB21HK-273AY	C-CAPACITOR	.027MF 10% 50V		
	C 543	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 543	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 551	QER41AM-227N	E-CAPACITOR	220MF 20% 10V		C 551	QER41AM-227N	E-CAPACITOR	220MF 20% 10V		
	C 552	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 552	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 561	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 561	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 562	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 562	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 563	NCB21HK-471AY	C-CAPACITOR	470PF 10% 50V		C 563	NCB21HK-471AY	C-CAPACITOR	470PF 10% 50V		
	C 564	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		C 564	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		
	C 565	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		C 565	NCB21HK-223AY	C-CAPACITOR	.022MF 10% 50V		
	C 566	NCB21CK-334AY	C-CAPACITOR	.33MF 10% 16V		C 566	NCB21CK-334AY	C-CAPACITOR	.33MF 10% 16V		
	C 567	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V		C 567	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V		
	C 568	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 568	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 569	NCI21CH-100AY	C-CAPACITOR	10PF +50:-10% 1		C 569	NCI21CH-100AY	C-CAPACITOR	10PF +50:-10% 1		
	C 570	NCI21CH-100AY	C-CAPACITOR	10PF +50:-10% 1		C 570	NCI21CH-100AY	C-CAPACITOR	10PF +50:-10% 1		
	C 571	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 571	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 572	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V		C 572	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V		
	C 573	QEK40JM-227	E-CAPACITOR	220MF 20% 6.3V		C 573	QEK40JM-227	E-CAPACITOR	220MF 20% 6.3V		
	C 574	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 574	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 601	QEK40JM-227	E-CAPACITOR	220MF 20% 6.3V		C 601	QEK40JM-227	E-CAPACITOR	220MF 20% 6.3V		
	C 602	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		C 602	NCB21HK-103AY	C-CAPACITOR	.010MF 10% 25V		
	C 603	NCI21CH-220AY	C-CAPACITOR	22PF +50:-10% 1		C 603	NCI21CH-220AY	C-CAPACITOR	22PF +50:-10% 1		
	C 604	NCI21CH-330AY	C-CAPACITOR	33PF +50:-10% 1		C 604	NCI21CH-330AY	C-CAPACITOR	33PF +50:-10% 1		
	C 607	QEK41CM-106	E-CAPACITOR	10MF 20% 16V		C 607	QEK41CM-106	E-CAPACITOR	10MF 20% 16V		
	C 608	NCB21HK-104	C-CAPACITOR	.10MF 10% 25V	U	C 608	NCB21HK-104	C-CAPACITOR	.10MF 10% 25V	U	
	C 661	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V		C 661	QEKFIAM-107ZM	E-CAPACITOR	100MF 20% 10V		
	C 701	QER41CM-106	E-CAPACITOR	10MF 20% 16V	J-C	C 701	QER41CM-106	E-CAPACITOR	10MF 20% 16V	J-C	
	C 702	QEKFIAM-472	E-CAPACITOR	47MF 20% 10V	U	C 702	QEKFIAM-472	E-CAPACITOR	47MF 20% 10V	U	
	C 703	QEK41HM-104	E-CAPACITOR	.10MF 20% 50V		C 703	QEK41HM-104	E-CAPACITOR	.10MF 20% 50V		

BLOCK NO. 01111111

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	IC901	BA4901-V3	IC		J,C
	L 501	VQP0018-4R7	INDUCTOR		
	L 561	VQP0018-4R7	INDUCTOR		
	L 562	VQP0018-4R7	INDUCTOR		
	L 563	VQP0018-4R7	INDUCTOR		
	L 601	VQP0018-4R7	INDUCTOR		
	L 701	VQP0018-4R7	INDUCTOR		
	L 901	QQR0703-001	CHOKE COIL		
	Q 301	DT114EKA-X	TRANSISTOR		J,C
	Q 321	DT114EKA-X	TRANSISTOR		
	Q 332	2SD601A(R)	TRANSISTOR		
	Q 341	DT114EKA-X	TRANSISTOR	KD-S730 ONLY	
	Q 432	2SD601A(R)	TRANSISTOR		
	Q 501	2SA1706/ST/-T	TRANSISTOR		
	Q 541	2SA1706/ST/-T	TRANSISTOR		
	Q 661	DT114EKA-X	TRANSISTOR		
	Q 701	DT114EKA-X	TRANSISTOR		
	Q 731	2SC2412KK1	TRANSISTOR		
	Q 732	2SC2412KK1	TRANSISTOR		
	Q 791	2SB1197K(Q,R)-X	TRANSISTOR		
	Q 793	DT114EKA-X	TRANSISTOR		
	Q 901	2SA1706/ST/-T	TRANSISTOR		
	Q 902	2SC2412KK1	TRANSISTOR		
	Q 903	2SA1037AK(RS)-X	CHIP TRANSISTOR		J,C
	R 101	NRSA02J-392NY	MG RESISTOR	3.9K 5% 1/10W	U
	R 102	NRSA02J-562NY	MG RESISTOR	2.0K 5% 1/10W	U
	R 103	NRSA02J-562NY	MG RESISTOR	5.6K 5% 1/10W	U
	R 104	NRSA02J-432NY	MG RESISTOR	4.3K 5% 1/10W	J,C
	R 105	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 106	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 107	NRSA02J-333NY	MG RESISTOR	33K 5% 1/10W	
	R 108	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 109	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 110	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 111	NRSA02J-392NY	MG RESISTOR	3.9K 5% 1/10W	J,C
	R 112	NRSA02J-202NY	CARBON RESISTOR	2.0K 5% 1/10W	U
	R 113	NRSA02J-562NY	MG RESISTOR	5.6K 5% 1/10W	U
	R 114	NRSA02J-432NY	MG RESISTOR	4.3K 5% 1/10W	J,C
	R 115	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 116	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 117	NRSA02J-333NY	MG RESISTOR	33K 5% 1/10W	
	R 118	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 119	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 120	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 121	NRSA02J-392NY	MG RESISTOR	3.9K 5% 1/10W	
	R 122	NRSA02J-202NY	CARBON RESISTOR	2.0K 5% 1/10W	
	R 123	NRSA02J-562NY	MG RESISTOR	5.6K 5% 1/10W	
	R 124	NRSA02J-432NY	MG RESISTOR	4.3K 5% 1/10W	
	R 125	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 126	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 127	NRSA02J-333NY	MG RESISTOR	33K 5% 1/10W	
	R 128	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 129	NRSA02J-183NY	MG RESISTOR	18K 5% 1/10W	
	R 130	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 131	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 132	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 133	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
	R 134	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
	R 135	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 136	NRSA02J-181NY	MG RESISTOR	180 5% 1/10W	
	R 137	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	

BLOCK NO. 01111111

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	C 709	NCB21HK-273AY	C CAPACITOR	.027MF 10% 50V	J,C
	C 709	NCB21HK-223AY	C CAPACITOR	.022MF 10% 50V	U
	C 710	NCB21HK-223AY	C CAPACITOR	.022MF 10% 50V	U
	C 710	NCB21HK-273AY	C CAPACITOR	.027MF 10% 50V	J,C
	C 711	NCB21HK-103AY	C CAPACITOR	.010MF 10% 25V	
	C 712	QEK41HM-104	E-CAPACITOR	.10MF 20% 50V	
	C 714	NCB21HK-103AY	C CAPACITOR	.010MF 10% 25V	
	C 716	NCS21HJ-6ROAY	C CAPACITOR	6.0PF 5% 50V	
	C 731	QER41HM-225	E-CAPACITOR	2.2MF 20% 50V	
	C 732	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
	C 733	QER41AM-227N	E-CAPACITOR	220MF 20% 10V	
	C 901	QEZ0337-228	E CAPACITOR	2200MF	
	C 902	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
	C 903	QEK41CM-226	E-CAPACITOR	22MF 20% 16V	
	C 904	QER41CM-226	E-CAPACITOR	22MF 20% 16V	
	C 905	QEK41CM-226	E-CAPACITOR	22MF 20% 16V	
	C 906	NCB21HK-104	C CAPACITOR	.10MF 10% 25V	
	C 907	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
	C 908	QEK41CM-1072N	E-CAPACITOR	100MF 20% 16V	
	C 909	QEK41CM-1072N	E-CAPACITOR	100MF 20% 16V	
	C 910	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
	C 911	QEK40JM-227	E-CAPACITOR	220MF 20% 6.3V	
	C 913	QEP31EM-4752M	NP-E CAPACITOR	4.7MF 20% 25V	
	C 914	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
	CJ321	VMJ3022-001	PIN JACK		
	CJ701	GNJ0009-001	CAR ANT JACK		
	CNS01	VMC0314-S12	CONNECTOR		
	CNS02	VMC0314-S14	CONNECTOR		
	CNG01	VMC0334-001	CONNECTOR		
	CN901	GNJ0002-001	16P CONNECTOR		
	D 301	1SS133	SI DIODE		J,C
	D 321	1SS133	SI DIODE		
	D 332	MA152WA-TX	DIODE		
	D 551	DSK10C-E	DIODE		
	D 601	1SS133	SI DIODE		U
	D 607	1SS133	SI DIODE	KD-S730 ONLY	
	D 610	1SS133	SI DIODE		
	D 661	MTZ4.7JB	ZENER DIODE		
	D 666	MA152WA-TX	DIODE		
	D 667	MA152WK-TX	SI DIODE		
	D 701	1SS133	SI DIODE		
	D 702	1SS133	SI DIODE		
	D 731	MTZ10JC	2-DIODE		
	D 901	1N5401TU-15	DIODE		
	D 902	DSK10C-E	DIODE		
	D 903	1SS133	SI DIODE		
	IC451	NJM4565M	IC		
	IC301	TEA6320T	IC		
	IC321	HA13158	IC		
	IC501	AN8806SB	IC		
	IC541	BA698FP-X	IC		
	IC542	BA6218	IC		
	IC561	MN35510-S	IC		
	IC601	JES01-9381	IC		
	IC901	BA4901A-V3	IC		U

BLOCK NO. 01

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	R 323	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R 333	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 334	NRSA02J-101NY	MG RESISTOR	100 5% 1/10W	
	R 336	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R 341	NRSA02J-222NY	MG RESISTOR	KD-S730 ONLY	
	R 342	NRSA02J-102NY	MG RESISTOR	KD-S730 ONLY	
	R 401	NRSA02J-183NY	MG RESISTOR	18K 5% 1/10W	
	R 402	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R 403	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 404	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 407	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
	R 408	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
	R 433	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 434	NRSA02J-101NY	MG RESISTOR	100 5% 1/10W	
	R 501	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R 502	NRSA02J-220NY	MG RESISTOR	22 5% 1/10W	
	R 503	NRSA02J-102NY	MG RESISTOR	22 5% 1/10W	
	R 504	NRSA02J-392NY	MG RESISTOR	1.0K 5% 1/10W	
	R 505	NRSA02J-473NY	MG RESISTOR	3.9K 5% 1/10W	
	R 506	NRSA02J-104NY	MG RESISTOR	47K 5% 1/10W	
	R 507	NRSA02J-822NY	MG RESISTOR	100K 5% 1/10W	
	R 508	NRSA02J-104NY	MG RESISTOR	8.2K 5% 1/10W	
	R 509	NRSA02J-273NY	MG RESISTOR	100K 5% 1/10W	
	R 509	NRSA02J-223NY	MG RESISTOR	27K 5% 1/10W	
	R 510	NRSA02J-154NY	MG RESISTOR	22K 5% 1/10W	
	R 511	NRSA02J-274NY	MG RESISTOR	150K 5% 1/10W	
	R 512	NRSA02J-563NY	MG RESISTOR	270K 5% 1/10W	
	R 513	NRSA02J-563NY	MG RESISTOR	56K 5% 1/10W	
	R 514	NRSA02J-123NY	MG RESISTOR	56K 5% 1/10W	
	R 515	NRSA02J-123NY	MG RESISTOR	12K 5% 1/10W	
	R 516	NRSA02J-123NY	MG RESISTOR	12K 5% 1/10W	
	R 517	NRSA02J-123NY	MG RESISTOR	12K 5% 1/10W	
	R 541	NRSA02J-821NY	MG RESISTOR	820 5% 1/10W	
	R 542	NRSA02J-562NY	MG RESISTOR	5.6K 5% 1/10W	
	R 543	NRSA02J-203NY	MG RESISTOR	20K 5% 1/10W	
	R 544	NRSA02J-242	MG RESISTOR	2.4K 5% 1/10W	
	R 545	NRSA02J-822NY	MG RESISTOR	8.2K 5% 1/10W	
	R 546	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 548	NRSA02J-124NY	MG RESISTOR	120K 5% 1/10W	
	R 549	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R 550	NRSA02J-282NY	MG RESISTOR	2.2 5% 1/8W	
	R 561	NRSA02J-102NY	MG RESISTOR	2.2 5% 1/8W	
	R 562	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 563	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 564	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/8W	
	R 567	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/8W	
	R 568	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/8W	
	R 569	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/8W	
	R 570	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/8W	
	R 571	NRSA02J-683NY	MG RESISTOR	68K 5% 1/10W	
	R 572	NRSA02J-105NY	MG RESISTOR	1.0M 5% 1/10W	
	R 573	NRSA02J-124NY	MG RESISTOR	120K 5% 1/10W	
	R 574	NRSA02J-331NY	MG RESISTOR	330 5% 1/10W	

J.C  
U

BLOCK NO. 02


A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	R 601	NRS181J-103NY	MG RESISTOR	10K 5% 1/8W	
	R 603	NRSA02J-101NY	MG RESISTOR	100 5% 1/10W	
	R 604	NRSA02J-101NY	MG RESISTOR	100 5% 1/10W	
	R 605	NRSA02J-101NY	MG RESISTOR	100 5% 1/10W	
	R 609	NRS181J-103NY	MG RESISTOR	10K 5% 1/8W	
	R 610	NRSA02J-104NY	MG RESISTOR	100K 5% 1/10W	
	R 611	NRSA02J-332NY	MG RESISTOR	3.3K 5% 1/10W	
	R 612	NRSA02J-332NY	MG RESISTOR	3.3K 5% 1/10W	
	R 613	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 614	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 615	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 616	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 622	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R 623	NRS181J-473NY	MG RESISTOR	47K 5% 1/8W	
	R 624	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	J.C
	R 625	NRS181J-473NY	MG RESISTOR	47K 5% 1/8W	
	R 626	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 627	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 628	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 629	NRS181J-473NY	MG RESISTOR	47K 5% 1/8W	
	R 630	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 631	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R 632	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 633	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R 634	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 635	NRS181J-472NY	MG RESISTOR	4.7K 5% 1/8W	
	R 661	NRSA02J-471NY	MG RESISTOR	470 5% 1/10W	
	R 662	NRSA02J-471NY	MG RESISTOR	470 5% 1/10W	
	R 701	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 702	NRSA02J-101NY	MG RESISTOR	100 5% 1/10W	
	R 703	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 705	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R 708	NRSA02J-155NY	MG RESISTOR	1.5M 5% 1/10W	
	R 732	NRSA02J-152NY	MG RESISTOR	1.5K 5% 1/10W	
	R 733	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 734	NRS181J-471NY	MG RESISTOR	10K 5% 1/10W	
	R 791	NRSA02J-103NY	MG RESISTOR	470 5% 1/8W	
	R 792	NRS181J-102NY	MG RESISTOR	10K 5% 1/10W	
	R 795	NRSA02J-150NY	MG RESISTOR	1.0K 5% 1/8W	
	R 796	NRSA02J-150NY	MG RESISTOR	15 5% 1/10W	
	R 798	NRSA02J-105NY	MG RESISTOR	1.0M 5% 1/10W	
	R 901	NRSA02J-272NY	MG RESISTOR	2.7K 5% 1/10W	
	R 902	GRD141J-472	CARBON RESISTOR	4.7K 5% 1/4W	
	R 903	NRSA02J-202NY	CARBON RESISTOR	2.0K 5% 1/10W	
	R 904	NRSA02J-104NY	MG RESISTOR	100K 5% 1/10W	
	R 905	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R 906	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R 907	NRSA02J-333NY	MG RESISTOR	33K 5% 1/10W	
	R 908	NRSA02J-563NY	MG RESISTOR	56K 5% 1/10W	
	R 909	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
	R 910	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 911	NRS181J-223NY	MG RESISTOR	22K 5% 1/8W	
	R 912	NRSA02J-823NY	MG RESISTOR	82K 5% 1/10W	

## BLOCK NO. 020000

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
C	951	NCB21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C	952	NC521HJ-681AY	C CAPACITOR	680PF 5% 50V	
C	953	NEF20JM-106RY	TS-E.CAPACITOR	10MF 20% 6.3V	
C	954	NEF20JM-475RY	TS-E.CAPACITOR	KD-S730 ONLY	
CJ	601	VMC0335-001	CONNECTOR		
D	951	SML-210LT/LM/-X	LED	"POWER LED"	
D	952	SML-210FT/JKL/W	LED		
D	953	SML-210FT/JKL/W	LED		
D	954	SML-210FT/JKL/W	LED		
D	955	SML-210FT/JKL/W	LED		
D	956	SML-210FT/JKL/W	LED		
D	957	SML-210FT/JKL/W	LED		
D	958	SML-210FT/JKL/W	LED		
D	959	SML-210FT/JKL/W	LED		
D	960	SML-210FT/JKL/W	LED		
D	961	SML-210FT/JKL/W	LED		
D	962	SML-210FT/JKL/W	LED		
D	963	SML-210FT/JKL/W	LED		
D	964	SML-210FT/JKL/W	LED		
D	965	SML-210FT/JKL/W	LED		
D	966	SML-210FT/JKL/W	LED		
D	967	SML-210FT/JKL/W	LED		
D	968	SML-210FT/JKL/W	LED		
D	969	SML-210FT/JKL/W	LED		
D	970	SML-210FT/JKL/W	LED		
D	971	SML-210FT/JKL/W	LED		J,C U
D	972	SML-210FT/JKL/W	LED		
D	977	MA3051(M)	ZENER DIODE		
D	977	MA3047	ZENER DIODE		
D	978	MA152WK-TX	SI DIODE		
IC	951	LC75823E	IC		
IC	952	RPM6938-V4	RM.RECEIVER		
PL	952	QLL0033-001	LAMP	KD-S730 ONLY	U
PL	952	QLL0022-001	LAMP		J,C
PL	954	QLL0022-001	LAMP		J,C
PL	954	QLL0022-001	LAMP		U
R	930	NRS02J-681NY	MG RESISTOR	680 5% 1/10W	
R	931	NRS02J-511NY	MG RESISTOR	510 5% 1/10W	
R	932	NRS02J-681NY	MG RESISTOR	680 5% 1/10W	
R	933	NRS02J-911NY	MG RESISTOR	910 5% 1/10W	
R	934	NRS02J-122NY	MG RESISTOR	1.2K 5% 1/10W	
R	935	NRS02J-152NY	MG RESISTOR	1.5K 5% 1/10W	
R	936	NRS02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R	937	NRS02J-681NY	MG RESISTOR	680 5% 1/10W	
R	938	NRS02J-511NY	MG RESISTOR	510 5% 1/10W	
R	939	NRS02J-681NY	MG RESISTOR	680 5% 1/10W	
R	940	NRS02J-911NY	MG RESISTOR	910 5% 1/10W	
R	941	NRS02J-122NY	MG RESISTOR	1.2K 5% 1/10W	
R	942	NRS02J-152NY	MG RESISTOR	1.5K 5% 1/10W	
R	943	NRS02J-681NY	MG RESISTOR	680 5% 1/10W	
R	944	NRS02J-511NY	MG RESISTOR	510 5% 1/10W	
R	945	NRS02J-681NY	MG RESISTOR	680 5% 1/10W	
R	946	NRS02J-911NY	MG RESISTOR	910 5% 1/10W	
R	947	NRS02J-122NY	MG RESISTOR	1.2K 5% 1/10W	
R	948	NRS02J-152NY	MG RESISTOR	1.5K 5% 1/10W	

BLOCK NO. 02					SUFFIX
A	REF.	PARTS NO.	PARTS NAME	REMARKS	
	R 949	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R 950	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R 951	NRSA02J-513NY	MG RESISTOR	51K 5% 1/10W	
	R 952	NRSA02J-154NY	MG RESISTOR	150K 5% 1/10W	
	R 953	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R 954	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R 955	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R 956	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R 957	NRSA02J-103NY	MG RESISTOR	KD-S730 ONLY	
	R 958	NRSA02J-471NY	MG RESISTOR	KD-S730 ONLY	
	R 970	NRSA02J-561NY	MG RESISTOR	560 5% 1/10W	
	R 971	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 972	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 973	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 974	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 975	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 976	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 977	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 978	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 979	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 980	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 981	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 982	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 983	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	R 984	NRSA02J-511NY	MG RESISTOR	510 5% 1/10W	
	S 951	NSW0039-001X	TACT SW	"6"	
	S 952	NSW0039-001X	TACT SW	"5"	
	S 953	NSW0039-001X	TACT SW	"CD"	
	S 954	NSW0039-001X	TACT SW	"FM"	
	S 955	NSW0039-001X	TACT SW	"AM"	
	S 956	NSW0039-001X	TACT SW	"SOUND"	
	S 957	NSW0039-001X	TACT SW	"LOUD"	
	S 958	NSW0039-001X	TACT SW	"DISPLAY"	
	S 959	NSW0039-001X	TACT SW	"SELECT"	
	S 960	NSW0039-001X	TACT SW	"1"	
	S 961	NSW0039-001X	TACT SW	"2"	
	S 962	NSW0039-001X	TACT SW	"3"	
	S 963	NSW0039-001X	TACT SW	"4"	
	S 964	NSW0039-001X	TACT SW	"EJECT"	
	S 965	NSW0039-001X	TACT SW	"F.SKIP/UP"	
	S 966	NSW0039-001X	TACT SW	"POWER"	
	S 967	NSW0039-001X	TACT SW	"VOL UP"	
	S 968	NSW0039-001X	TACT SW	"VOL DOWN"	
	S 969	NSW0039-001X	TACT SW	"MO/RND"	
	S 970	NSW0039-001X	TACT SW	"REPEAT"	
	S 971	NSW0039-001X	TACT SW	"SCAN"	
	S 972	NSW0039-001X	TACT SW	"B.SKIP/DOWN"	

Packing Materials and Accessories

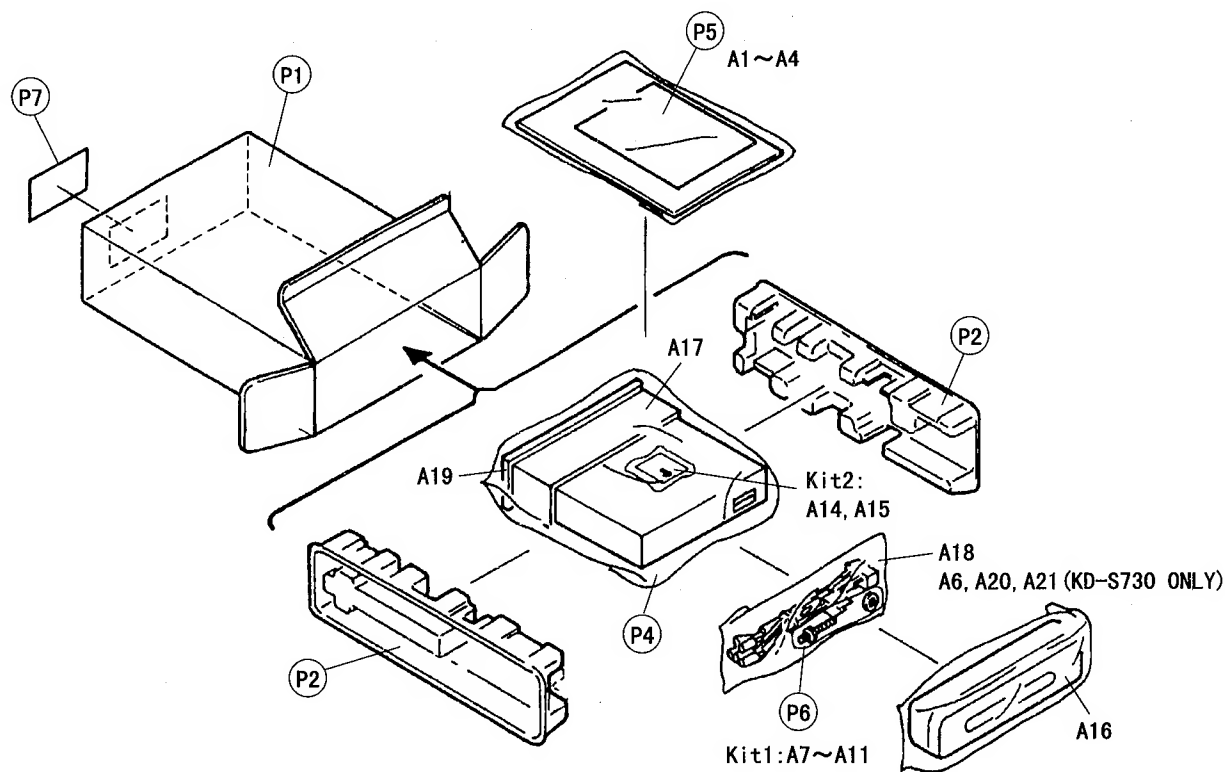

Accessories

KD-S730 ONLY

A20 Remote con. Unit  
QAL0075-001

Remocon Holder  
UR64HR2142A  
(SERVICE ONLY)

A21 Battery  
R03UPTT-2STS

A6 Double Face  
VYTT682-001SS

Battery Cover  
UR64EC2141  
(SERVICE ONLY)

SCREW KIT 1

A7 Plug Nut  
VKZ4027-002

A10 Washer  
WNS5000Z

A8 Mount Bolt  
VKH4871-001

A11 Hook  
FSKL4010-002

A9 Lock Nut  
VKZ4328-001

SCREW KIT 2

A14 Screw  
VKZ4777-001

A15 Sheet  
FSYA4001-001



## ■ Packing List

BLOCK NO. M3MM

△	REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
	P 1	FSPE3001-049	PACKING CASE	KD-S730 ONLY	1		
		FSPE3001-058	PACKING CASE	KD-S630 J/C	1		
		FSPE3001-059	PACKING CASE	KD-S630 U ONLY	1		
	P 2	FSPH1014-001	PAPER CUSHION		2	U	
		FSPH1013-001	PAPER CUSHION		2	J,C	
	P 4	VPE3005-066	POLY BAG	SET(260X440X0.0	1		
	P 5	QPA01702505P	POLY BAG	INSTRUCTION	1		
	P 6	QPGA008-01205	POLY BAG		1		
	P 7	-----	CARTON LABEL		1		

## ■ Accessories List

BLOCK NO. M4MM

△	REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
	A 1	FSUN3038-631S	INSTRUCTION		1	J,C	
		FSUN3038-181S	INSTRUCTION		1	U	
	A 2	FSUN3038-T631S	INSTALL MANUAL		1	J,C	
		FSUN3038-T181S	INSTALL MANUAL		1	U	
	A 3	BT-51009-3	WARRANTY CARD	FOR USA ONLY	1	J	
		BT-52001-4	WARRANTY CARD	FOR CANADA ONLY	1	C	
	A 4	BT-20137	SVC CENTER LIST	FOR USA ONLY	1	J	
		BT-20071B	SVC CENTER LIST	FOR CANADA ONLY	1	C	
	A 6	VYTT682-001SS	DOUBLE FACE	KD-S730 ONLY	1		
	A 7	VKZ4027-002	PLUG NUT		1		
	A 8	VKH4871-001	MOUNT BOLT		1		
	A 9	VKZ4328-001	LOCK NUT	FOR M5	1		
	A 10	WNS5000Z	WASHER		1		
	A 11	FSKL4010-002	HOOK		2		
	A 14	VKZ4777-001	MINI SCREW		1		
	A 15	FSYA4001-001	SHEET		1		
	A 16	FSJB3001-00A	HARD CASE		1		
	A 17	FSKM2004-001	MOUNTING SLEEVE		1		
	A 18	QAM0013-003	16P CORD ASS'Y		1		
	A 19	FSJD2019-002	TRIM PLATE		1		
	A 20	QAL0075-001	REMOCON RM-RK22	KD-S730 ONLY	1		
	A 21	RO3UPTT-2STS	BATTERY	KD-S730 ONLY	1		
	KIT 1	KDGS717K-SCREW1	SCREW KIT1	A7-A11	1		
	KIT 2	KDGS727J-SCREW2	SCREW KIT2	A14,A15	1		


KD-S730  
KD-S630

**JVC**

VICTOR COMPANY OF JAPAN, LIMITED

MOBILE ELECTRONICS DIVISION, 10-1, Chome, Ohwatari-machi, maebashi-city, Japan

(No.49451)

 Printed in Japan  
9801(O)